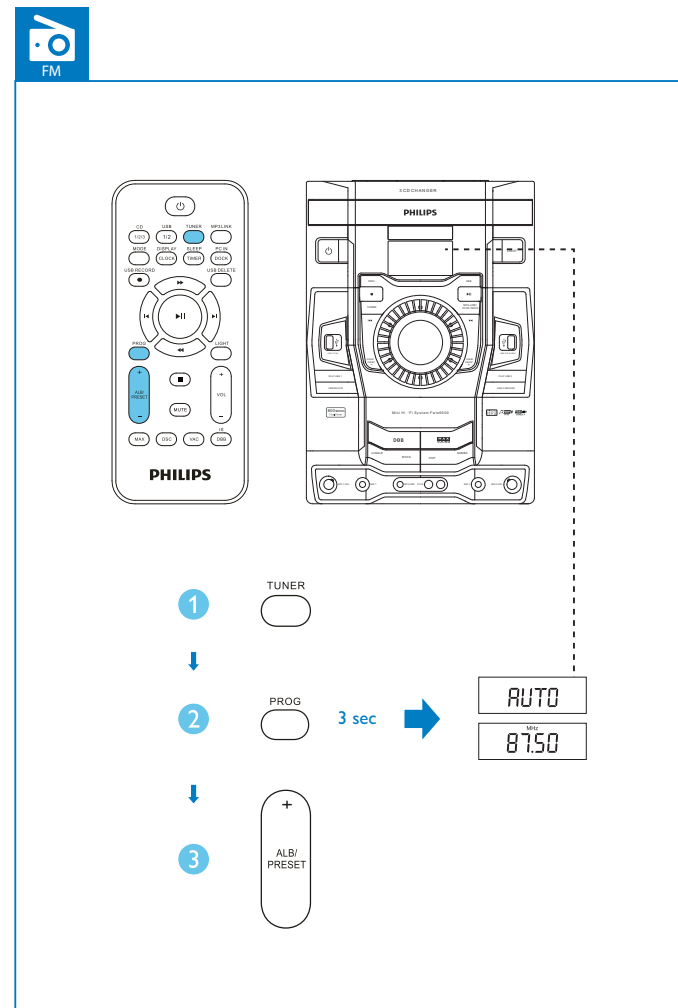
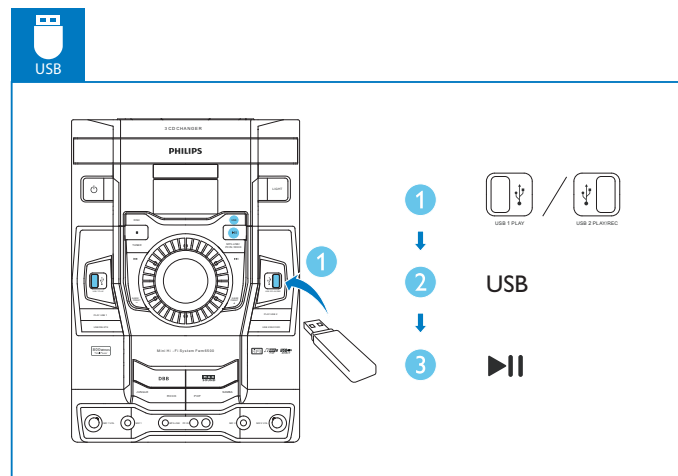
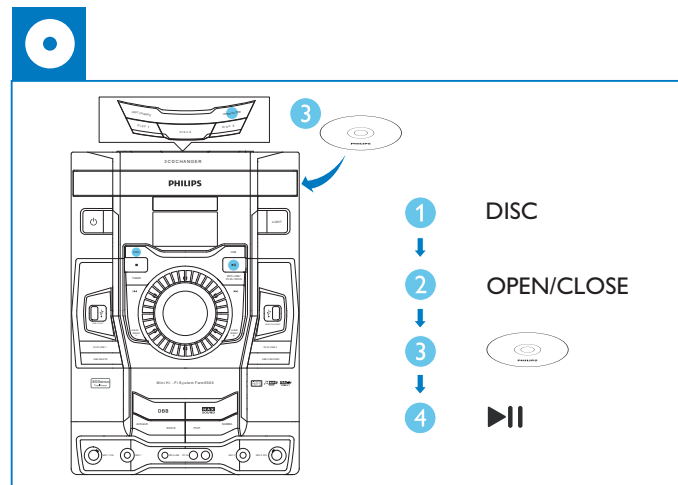
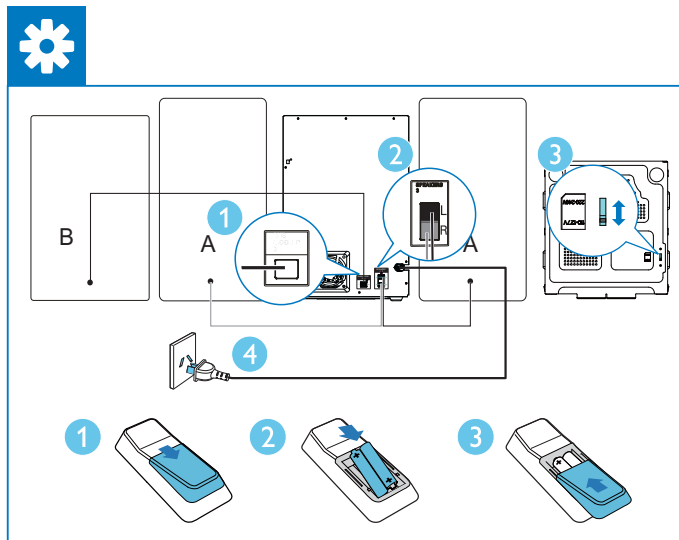
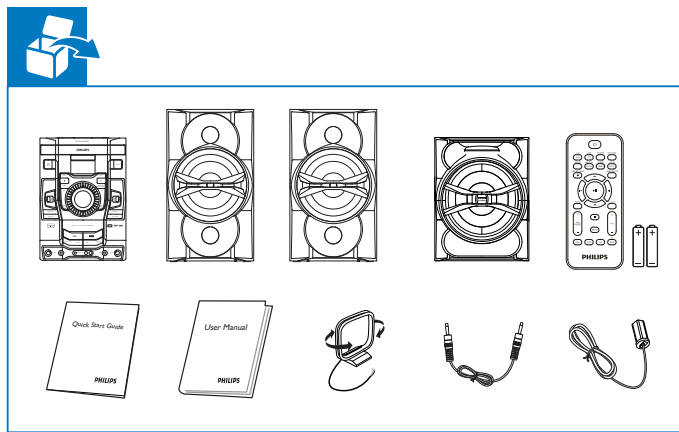
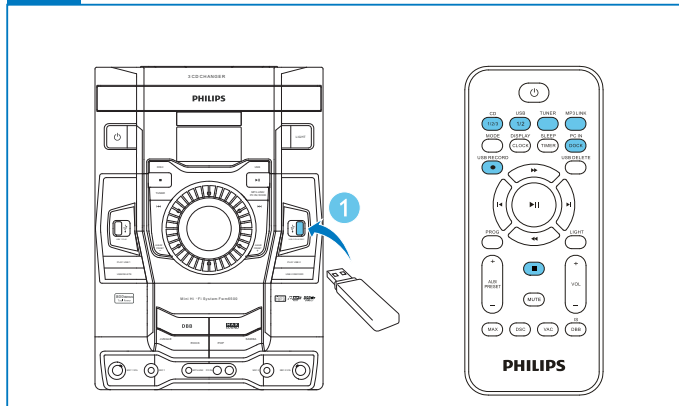
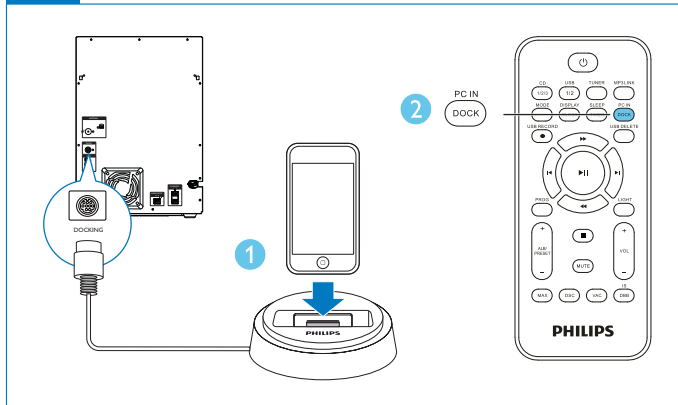
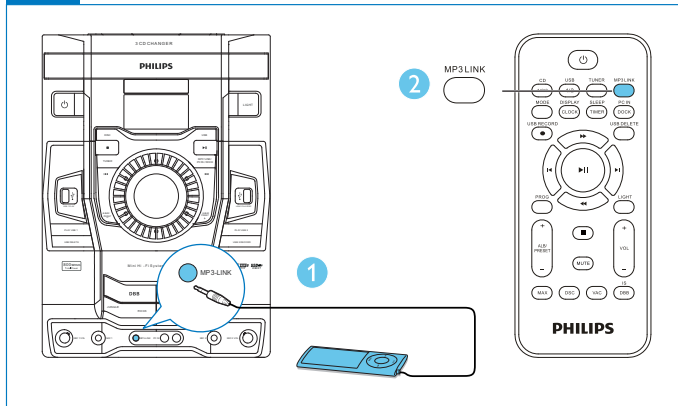

 
 

 
 





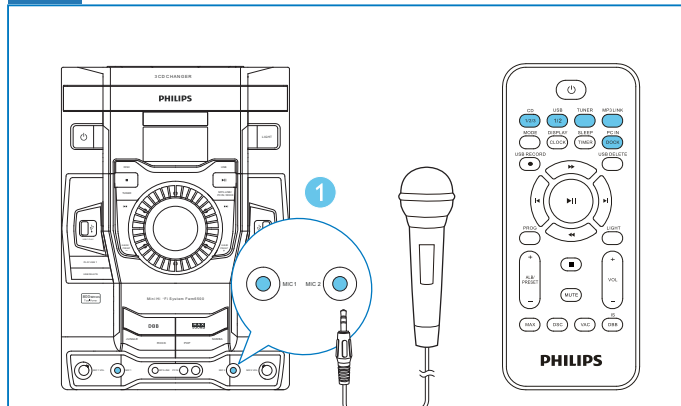


 
 
 

 
 


# Guía de configuración rápida





- 1  USB 2 PLAY/REC
- 2  CD 1/2/3 /  USB 1/2 /  TUNER /  MP3LINK /  PC IN DOCK
- 3 
- 4  USB RECORD
- 5 



- 1 
- 2  CD 1/2/3 /  USB 1/2 /  TUNER /  MP3LINK /  PC IN DOCK
- 3 
- 4 



©2012 Koninklijke Philips N.V.  
All rights reserved.

FWM6500\_77\_QSG\_V1.0

