

Quick Use Guide

AZ1053



 
PHILIPS

1 Choosing Power Supply

a Connect the AC power cord to the **AC Mains** inlet and the wall socket.

-OR-

b Open the battery door and insert 6 x C batteries (not included).

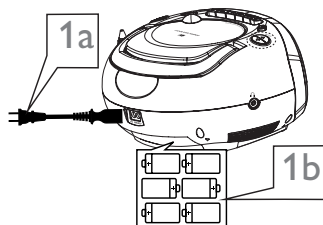

R-14, UM-2 or C-cells
(not included)

2 Listening to the Radio

 
a Push the **source selector** to **TUNER**.

b Push the **source selector** to **FM** or **MW**.

c Press and hold **PROG** until **Auto** flashes.

- Available stations are programmed.

d Press **PRESET +, -** until the desired preset station is displayed.

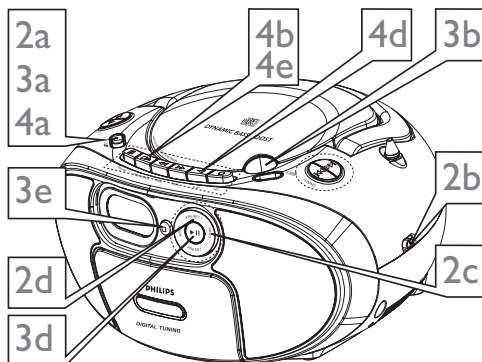

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW.

a Adjust the **source selector** to **CD**.

b Lift the disc door at **LIFT TO OPEN** to open.

c Insert a disc with the printed side facing up and close the door.

d Press **▶||** to start playback.

e To stop disc playback, press **■**.

4 Playing a tape

a Adjust the **source selector** to **TAPE/OFF**.

b Press **■▲** to open the cassette holder.

c Insert a cassette and close the door.

d Press **◀** to start playback.

e To stop the tape, press **■▲**.

Source selector

Slide to select function:

CD, TUNER or TAPE

CASSETTE RECORDER keys

Press to operate a tape.

Display

Shows disc functions



Press to stop disc playback or erase a disc program.

MODE

Press to select different play modes, such as REPEAT or SHUFFLE (random order)

PROG

Use to program CD tracks or preset radio stations.

PRESET +, -

Press to select a preset radio station.

▶||

Press to start or pause disc playback.

AC MAINS

inlet for power cord

Battery door

LIFT TO OPEN

Lift to open the disc door.

DBB

Press to turn the bass enhancement on/off.

TUNING ◀◀ ▶▶

Skips & searches CD tracks backwards/forwards;
Tunes to radio stations

Telescopic antenna

 
Improves FM reception.

BAND

Selects **FM** or **MW**.

VOLUME ▲, ▼

Press to adjust volume level.

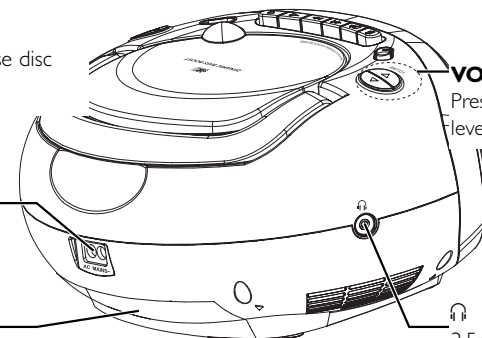

3.5mm stereo headphone jack

