


16/09/2003, 10:17 AM 8239 210 98131

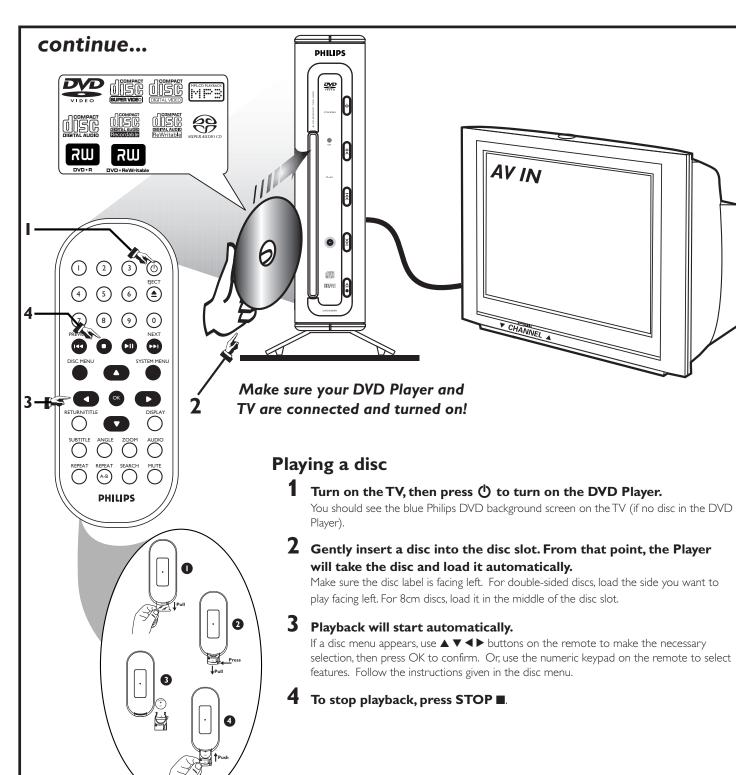

No picture?

Check the AV (Audio/Video) mode on your TV.

- * Usually this channel is between the lowest and highest channels and may be called FRONT, A/V IN, or VIDEO.
- * Or, you may go to channel 1 on your TV, then press the Channel down button repeatedly until you see the Video In channel.
- * Or, your TV remote control may have a button or switch that chooses different video modes.
- * Do not use channel 3 or 4 on the TV unless you are using an RF modulator.
- * See your TV manual for more details.



Region Codes

DVDs must be labeled for ALL regions or for Region 1 in order to play on this DVD system.

Detailed playback features and additional functions are described in the accompanying owner's manual.