

Register your product  
and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SRP5107/27



EN User Manual

**PHILIPS**

# Table of contents

|          |                                                                                 |              |
|----------|---------------------------------------------------------------------------------|--------------|
| <b>1</b> | <b>Your SRP5107 .....</b>                                                       | <b>3-4</b>   |
| <b>2</b> | <b>Getting started .....</b>                                                    | <b>4-9</b>   |
| 2.1      | Inserting the batteries .....                                                   | 4            |
| 2.2      | Testing the universal remote control .....                                      | 4-5          |
| 2.3      | Setting up the universal remote control .....                                   | 5-9          |
| <b>3</b> | <b>Using the universal remote control .....</b>                                 | <b>9-15</b>  |
| 3.1      | Buttons and functions .....                                                     | 9-12         |
| 3.2      | Controlling combo devices .....                                                 | 12-13        |
| 3.3      | Learning button functions .....                                                 | 13-14        |
| 3.4      | Resetting a button to its original function .....                               | 14           |
| 3.5      | Resetting the original functions of<br>the remote control (Factory Reset) ..... | 15           |
| <b>4</b> | <b>Service and support .....</b>                                                | <b>15-18</b> |
| 4.1      | Frequently asked questions .....                                                | 15-17        |
| 4.2      | Need help? .....                                                                | 17           |
|          | FCC Compliance .....                                                            | 18           |
|          | Notice for Canada .....                                                         | 18           |
|          | Helpline .....                                                                  | 19           |
|          | Brand list .....                                                                | 20-27        |

## 1 Your SRP5107

Congratulations on your purchase of the Philips SRP5107 universal remote control.

After setting up the remote control you can operate up to 7 different devices with it.

 
### Simple Setup

The universal remote control comes with the innovative Simple Setup technology.

After setup, the SRP5107 can operate TV, DVD player/recorder (including Blu-ray player), VCR, DVR, HD, auxiliary equipment and all common Cable, Satellite, DTV and other set top boxes, such as DirecTV, Comcast, AT&T, Verizon, Time Warner, Scientific Atlanta, TiVo and many more.

Simply follow the instructions in chapter 2.3 to set up the remote control for your devices.

We focused on making this remote control consumer friendly. We have highlighted the DVR (TiVo/Replay) buttons in blue for easy referencing on the keypad.

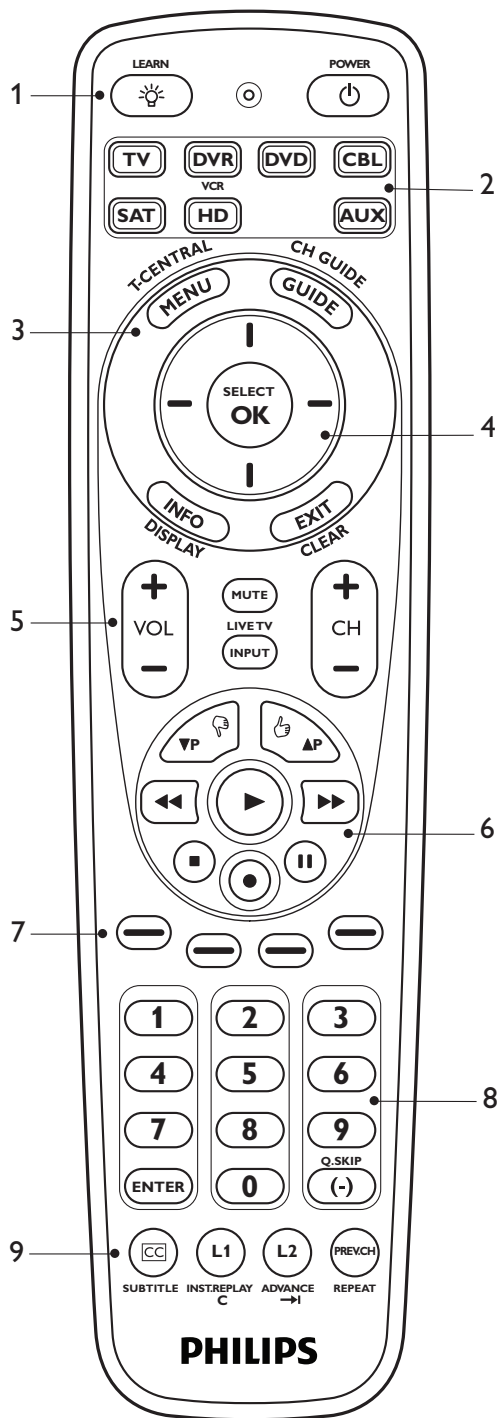


The remote control is equipped with the most common functions for operating your devices. However, if you miss certain functions, this remote control can 'learn' these functions from the original remote control.

To fully benefit from the support that Philips offers, register your product at:  
[www.philips.com/welcome](http://www.philips.com/welcome).

## 2 Getting started
 
### 2.1 Inserting the batteries

- Insert 2 AA type batteries, noting the + and - configuration in the battery compartment.

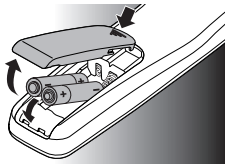

#### Note

When replacing the batteries, all user settings will be retained in the remote control memory for an unlimited period of time.

### 2.2 Testing the universal remote control

It is advised to test whether your device(s) already respond(s) to the SRP5107 before setting it up (see chapter 2.3). The example below instructs you how to do this for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder; Cable/Satellite box, DTV/VCR, HD and auxiliary equipment) which you want to operate using the SRP5107.

#### Example: testing the universal remote control on your TV:

- Switch ON** your TV manually or use the original remote control for this. Tune to channel 1.
- Press the **TV** device selection button to select TV.
  - The red Setup light  blinks. If the Setup light  did not blink, check whether the batteries are properly inserted (see chapter 2.1).



- Check whether the buttons that you need for operating your TV are working. For an overview of the buttons and their functions see chapter 3.1.



- If the TV responds as it should to all of the button commands, the SRP5107 is ready for use.  
*If the device does not respond at all or not to all of the button commands, follow the instructions in chapter 2.3.*

### 2.3 Setting up the universal remote control

The example below instructs you how to set up your universal remote control for your TV. You can repeat the same steps for other devices (DVR, DVD player/recorder; Cable/Satellite box, DTV/VCR, HD and auxiliary equipment) which you want to operate, using the universal remote control.

The remote control can be set up to operate any 7 of the following devices:

| Device name | Description                                                                                                                                                                                                                                                                                                            |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| TV          | Traditional TV, LCD/Plasma TV, flat panel TV and projection TV, TV part of TV/VCR, TV/VCR/DVD and TV/DVD combos                                                                                                                                                                                                        |
| DVR         | Digital/Personal Video Recorder (DVR/PVR), TiVo, DVR part of DVR/SAT, DVR/Cable and DVR/DVD combos                                                                                                                                                                                                                     |
| DVD         | DVD player/recorder (DVDR/DVD-RW), DVD/Hard Disk Drive combination (DVDR-HDD), Blu-Ray player; High Definition DVD player (HD-DVD), DVD part of TV/DVD, TV/VCR/DVD, DVR/DVD and VCR/DVD combos                                                                                                                         |
| CBL/SAT     | Cable box, satellite receiver; Internet Protocol TV (IPTV), Free To Air TV, High Definition Television decoder (HDTV), Digital Television (DTV), TiVo, SAT/Digital TV (DTV)/WebTV, DTV/Advanced Television Systems (ATSC) - Digital To Analog Converter; CBL part of DVR/ Cable combos and SAT part of DVR/ SAT combos |
| VCR         | Video cassette player/recorder; VCR part of TV/VCR, TV/VCR/DVD and VCR/DVD combos                                                                                                                                                                                                                                      |

|     |                                                                                                                                                      |
|-----|------------------------------------------------------------------------------------------------------------------------------------------------------|
| AUX | Auxiliary equipment:<br>CD, Audio System, Laser Disc, Digital<br>Picture Frame, Media Center PC, Home<br>Automation, Home Theater in a Box<br>(HTIB) |
| HD  | Any of the above listed devices                                                                                                                      |

### Example: setting up the universal remote control to operate your TV:

 
**1** Switch ON the TV manually or use the original remote control for this. Tune to channel 1.

**2** Press and hold the  device selection button for 5 seconds until the red Setup light  blinks.

- The remote control is now in setup mode.



**3** Look up the 4-digit code for your brand in the brand list at the back of this user manual. A 4-digit code is shown for each brand.

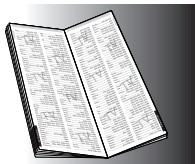


Use the digit buttons to enter the code for your brand (e.g. Philips, **2 1 9 5**).

- If the red Setup light  turns off, an invalid code was entered. In this case, try again.



**4** Aim the remote control at the TV. Press and hold the  button. Release it immediately as soon as the TV switches off.

 - This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

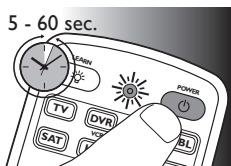

**5** Switch ON the TV.

Try out the buttons that you need for operating it. Try, for example, if the - CH + and digit buttons function properly.

- If a button does not work as expected, **press and hold** that button. Release it immediately as soon as it works. For more information, see chapter 2.3.3.



**6** Press the  device selection button **twice** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



### ! Important

If you made a mistake:

- Press the device selection button **twice** to exit setup. The red Setup light  turns off.
- Restart from the beginning.

- If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*
- Alternatively you can set up the universal remote control with the learn feature as described in chapter 3.3.*

#### 2.3.1 Setting up the remote control for other devices (DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment)

- Make sure the device is switched on and operational. E.g. insert a disc in the DVD player/recorder or a video cassette in the VCR.
- Then follow steps 2 to 6 of 'Setting up the universal remote control to operate your TV'. Make sure to use the correct device selection button: , , , ,  or .

#### 2.3.2 Setting up the remote control for combo devices

In most cases you will have to set up the remote control for each part of the combo device.

Only in some cases a single code-set will operate all parts of the combo.

For example: for a TV/DVD combo you will first have to set up the remote control for TV (with the  button) and then for DVD (with the  button or any other device selection button) in order to operate both parts of the combo.

For this refer to chapter 2.3.

### 2.3.3 Improving buttons

When correctly set up, the remote control should be able to operate all your devices. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected. In this case you can have the remote control search for alternatives.

#### Note

Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

#### During initial setup

 
- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the device responds. Repeat this for every button that does not function.
  - If the button still does not function as expected, try pressing it again for a longer period of time.

#### After initial setup

- 1 Make sure the receiving device is able to respond. E.g. when you try to repair the Play button for your DVD player, make sure to insert a DVD into the DVD player otherwise the Play button is not able to function.
- 2 Select the device that you wish to operate (e.g. DVD).

Press the  device selection button to select DVD.


- 3 Keep buttons  and  pressed simultaneously for 5 seconds.
  - The red Setup light  lights up. The remote control is now in setup mode.

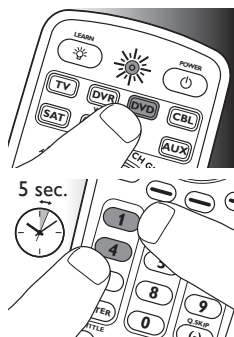

- 4 Press and hold the button that does not function and **immediately** release it when the device responds.
  - If the button still does not function as expected, try pressing it again for a longer period of time.

- 5 Press the  device selection button **twice** to save your settings and exit setup mode.

 - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

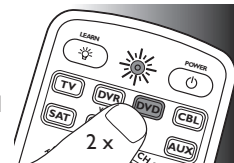

## 3 Using the universal remote control

### 3.1 Buttons and functions

The illustration on page 2 gives an overview of all buttons on the remote control. Try out the buttons you need for operating your devices.

#### Notes

- Buttons having the same functions as the buttons on your original remote control may have different namings on the SRP5107 (e.g. Info/Display).
- Only functions that are available on your original remote control can be used for operating your devices with the SRP5107.

- 1   

 
**LEARN** .....used to setup learning functions.

**BACKLIGHT** () .....turns the backlighting on/off.


**SETUP light**.....lights up when a remote control command is being sent, when you select a device and when the remote control is in setup or learn mode.

**POWER** () .....switches the selected device on/off.
- 2     .....device selection buttons. Select the device to be operated.


  

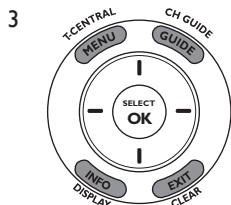

 
**MENU** .....menu on/off.  
**GUIDE** .....electronic program guide.  
**INFO** .....on-screen channel information.  
**EXIT** .....exits/clears on-screen menu displays.

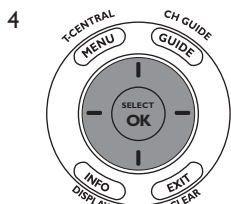

 **SELECT** .....selects menu items for the device you are controlling.  
**OK** .....confirms your selection.  
**(I) UP/DOWN,**  
**(-) LEFT/RIGHT** .....cursor up, down, left, right in a menu.



 **+ VOL -** .....increases/decreases the volume level of the device, normally TV.  
**MUTE** .....turns the sound of the device (normally TV) off/on while the picture remains.  
**INPUT** .....selects available source inputs (Antenna, Cable, etc.).  
**+ CH -** .....next / previous channel.

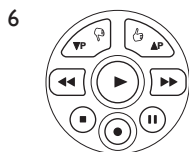

**▼P ▲P** .....previous (▼P) / next (▲P) page/track in various modes.  
**◀◀** .....rewind.  
**▶▶** .....play.  
**▶▶▶** .....fast forward.  
**■** .....stop.

● .....record.

II .....pause.

7 **— — — —** .....context sensitive buttons, ordered following the requirements for cable boxes.  
 A - Yellow, B - Blue, C - Red,  
 D - Green.



**Digit buttons** .....for direct channel / track selection.

**ENTER** .....used after direct channel selection. Some devices require **ENTER** to be pressed after channel selection.

**(-)** .....selects between one and two-figure channel numbers.



9 **CC** .....TV Closed Caption (if your TV has this feature).  
**L1 L2** .....store learned button commands.  
**PREVCH** .....returns to the previously selected channel.

## Note

For some TV brands/types, the **POWER** button will only turn off the TV. You will have to press a digit button (direct channel selection) to turn on the TV again.

### 3.1.1 Dedicated DVR functions - labeled in blue (\*TiVo/Replay)

When you select DVR mode by pressing the **DVR** button, all blue DVR function buttons will become active.

3 **T.CENTRAL** .....TiVo button for TiVo Central.

**CH GUIDE** .....TiVo Live Guide - the TiVo Program Guide.

**DISPLAY** .....brings up the Channel Banner.

**CLEAR** .....exits/clears on-screen menu displays.

5 **LIVETV INPUT** .....goes to Live TV broadcast.

- 6 ..... thumbs Up/Down. Set your Thumbs ratings.
- P ▼ and P ▲ ..... select previous (▼)/next (▲) page in Replay TV guides and menus.
- 8 ..... skips 30 seconds of a recorded or delayed show.
- 9 ..... turns the subtitles on/off.
- ..... replays the last 7 seconds (Replay) or 8 seconds (TiVo) of a program.
- ..... catches you up to the live broadcast.
- ..... repeats current chapter/track.

\* TiVo and Replay are registered trade marks of their respective owners.

## 3.2 Controlling combo devices

Some combo devices (e.g. TV/DVR, TV/DVD, DVD/DVR, etc.) have separate buttons on the original remote control to select the part of the combo device to be controlled.

For example, if your combo device is a DVD/DVR then its original remote control might have separate DVD and DVR buttons for selection of the combo part you wish to operate. The equivalent button functions can be found on your Philips remote control by using the device selection buttons.

*Example for a DVD/DVR combo:*

- 1 Set up the remote control for each part of the combo as described in chapters 2.3 and 2.3.2. In this example for both DVD and DVR.
- 2 Press the device selection button **twice** to select the DVD part of the combo.



Press the device selection button **twice** to select the DVR part of the combo.



## Notes

- This method can be applied similarly to all combo devices (TV/DVR, TV/VCR, TV/DVD, etc.) and is available for all device modes.
- Note that this feature is not supported by all codes.

 
## 3.3 Learning button functions

If you miss certain functions from your original remote control on the SRP5107, the SRP5107 can learn these functions. You can store a function under any of the available buttons, except under the button. Any function already stored under a button will be deleted. The SRP5107 is equipped with two dedicated buttons for learning additional functions: and .

- 1 Make sure that you have the original remote control at hand.
- 2 Select the desired device (e.g. DVD). Press the device selection button to select DVD.



- 3 Place both remote controls on a flat surface (like a table) and aim them head-to-head with about 5 - 10 cm in between.

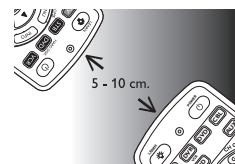

- 4 Keep the button and the button you wish to learn on the SRP5107 (e.g. the button) **pressed simultaneously for 5 seconds**, until the red Setup light lights up.
  - The remote control is now in learn mode.
- 5 Press **and hold** the button that you wish to learn on the original remote control until the red Setup light blinks twice and then goes out **to confirm that learning was successful**.
  - The remote control has now learned the new function.








- It may occur that learning a button function fails the first time. The red Setup light  will then give **4 short blinks** and go out. In this case, please try again.
- If you keep having trouble learning button functions, check the batteries in both SRP5107 and original remote control and replace if necessary.
- It may also be that the remote control learn memory is full (a total of about 60 buttons can be learned). In this case you can reset one or more buttons to their original functions in order to create memory space. For this, see chapter 3.4.

### 3.4 Resetting a button to its original function

   If an improved button (see chapter 2.3.3) still does not function as expected, you can always reset the button to its original function.



When resetting a button to its original function, any learned function stored under the button will be deleted.

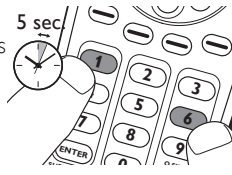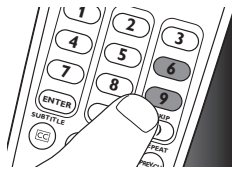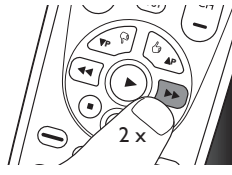- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 
  - The remote control is now in setup mode.
- 2 Press digit buttons **9**, **9** and **6**, in that order.
 
  - After each button press the red Setup light  blinks once.
- 3 Press the button that you wish to reset **twice**.  
E.g. the **▶▶** button.
 
  - After each button press the red Setup light  blinks once.
  - The red Setup light  will blink one more time to confirm that the button was successfully reset to its original function.
  - The button can now also learn a new function, if desired.

### 3.5 Resetting the original functions of the remote control (Factory Reset)

  In some cases it may be useful to reset the original functions of the remote control.

E.g. if the remote control memory is full while you wish to set it up for a specific device or learn an extra function to it. The remote control will then be reset to the default factory settings and all user settings will be deleted.

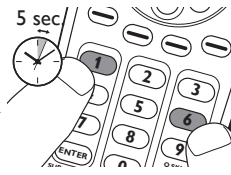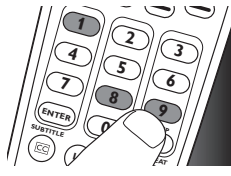- 1 In the current device mode, keep digit buttons **1** and **6** **pressed simultaneously for 5 seconds**, until the red Setup light  lights up.
 
  - The remote control is now in setup mode.
- 2 Press digit buttons **9**, **8** and **1**, in that order.
 
  - After each button press the red Setup light  blinks once.
  - The red Setup light  will blink one more time to confirm that the original functions of the remote control were successfully reset. Any extra functions have been deleted.

## 4 Service and support

### 4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

#### Setup

**I cannot enter setup mode.**

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

**The brand code for my device is missing in the 'Shortlist of brands' in the Quick Start Guide.**

The 'Shortlist of brands' only mentions the most common brands of TV, DVR, DVD player/recorder, Cable/Satellite box, DTV, VCR, HD and auxiliary equipment.

- You will find a complete brand list on page 20-27 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

### My TV switches OFF in step 4 but does not switch ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.3.3) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

### After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.3.3.

### How do I set up the remote control for combo devices (TV/VCR, TV/DVD, DVD/VCR, etc)?

Some combo devices require you to set up two different device selection buttons to control both parts of the combo device. For example, if you have a TV/DVD combo, you might need to set up the remote control for both TV and DVD to operate your TV/DVD combo.

## Operation

### The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.

### The device I want to operate does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control of the device.
- Try improving buttons. See chapter 2.3.3.
- Try learning button functions from the original remote control. See chapter 3.3.

Wrong code selected during setup.

- Set up the remote control again for the device. Always test if the device responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

## Batteries

### Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory during battery replacement.



### Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

## 4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRP5107, you can always contact us.

When calling our helpline, make sure to have the SRP5107 at hand when you call, so that our operators can help you determine whether the SRP5107 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRP5107/27.

Date of purchase:

...../...../.....  
(day/month/year)

For **online support** go to:  
[www.philips.com/welcome](http://www.philips.com/welcome)

- Click 'Support' and follow the on-screen instructions.

### FCC Compliance

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

### Note

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Caution

User changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

### Notice for Canada

This class B digital apparatus complies with Canadian ICES-003.

## Helpline

### Country

United States of America/Canada

### Phone number

1-919-573-7854

**A**

ABC.....0013  
 Abex.....0014  
 ABS.....0016  
 ACCELE.....4194  
 ACCESS HD.....3554  
 Acer.....0028  
 ACESONIC.....4370  
 ADCOM.....0041  
 ADELPHIA.....4195  
 Admiral.....0046  
 ADTH.....4371  
 Advent.....0054  
 Adventura.....0055  
 Afrey.....0062  
 Aiko.....0069  
 Aiwa.....0072  
 Akai.....0074  
 Alaron.....0085  
 Albatron.....0087  
 Alienware.....0099  
 ALLEGRO.....0103  
 ALPHA DIGITAL.....4014  
 Amark.....0010  
 America Action.....0123  
 AMERICAN HIGH.....0125  
 AMERICAST.....0127  
 AMES.....4372  
 AMPLICA.....0136  
 Ampro.....0139  
 AMTC.....4015  
 Amtron.....0141  
 AMW.....0143  
 ANABA.....0145  
 Anam.....0146  
 Anam National.....0147  
 ANTRONIX.....0159  
 AOC.....0165  
 Aomni.....3555  
 Apex.....3691  
 Apex Digital.....0170  
 Apple.....0172  
 APPLE IPOD.....4373  
 Archer.....0180  
 ARTEC.....4016  
 ASHA.....0209  
 Aspect.....4374  
 ASPIRE.....4233  
 Astar.....0218

AT&T.....3453  
 A-TREND.....0011  
 Audio Authority.....0245  
 AUDIO DYNAMICS.....0248  
 AUDIO TECHNICA.....0253  
 Audiovox.....0268  
 Aventura.....0287  
 Axion.....0299

**B**

B & K.....0304  
 Bang & Olufsen.....0314  
 BEAUMARK.....0340  
 Belcor.....0348  
 BELL.....4376  
 Bell & Howell.....0350  
 BELL EXPRESSVU.....0352  
 BELL SOUTH.....0353  
 BenQ.....0359  
 BGH.....3507  
 BLAUPUNKT.....0390  
 Blue Sky.....0395  
 BLUESKY.....0395  
 BLU-RAY.....4377  
 Bodysonic.....4378  
 Bose.....0407  
 BOSS.....4197  
 BOSTON ACOUSTIC.....0411  
 Bradford.....0414  
 Brilliant.....0422  
 BRITANIA.....0425  
 Brockwood.....0430  
 Broksonic.....0432  
 Brokwood.....0430  
 Buffalo.....0442  
 Bush.....0445  
 Byd:sign.....0448

**C**

CABLETENNA.....0456  
 CABLEVIEW.....0458  
 CABLEVISION.....4238  
 CADENCE.....4379  
 CALIFORNIA  
 AUDIO LABS.....0467  
 CALIX.....0468  
 Candle.....0480  
 CANON.....0481

Capehart.....0484  
 CAPETRONIC.....0485  
 Carnivale.....0491  
 Carver.....0494  
 CASIO.....0499  
 CAVS.....0503  
 CCE.....0504  
 Celebrity.....0509  
 Celera.....0510  
 Centrios.....0517  
 Centurion.....0520  
 CENTURY.....0521  
 Cetronic.....4380  
 Changhong.....0530  
 CHANNEL MASTER.....0531  
 CHAPPARAL.....0533  
 CHARTER.....4239  
 CHEYENNE.....4381  
 Cinal.....0559  
 CINEVISION.....0562  
 CITECH.....4382  
 Citizen.....0567  
 Clairtone.....0573  
 Clarion.....0575  
 Classic.....0580  
 CLEARMAX.....0584  
 Clp.....4383  
 Clp Classic.....4384  
 Coby.....0597  
 COGECO.....4385  
 Color Voice.....0602  
 Colortyme.....0601  
 COLT.....0603  
 COMCAST.....3456  
 Commercial Solutions.....0615  
 COMTRONICS.....0623  
 CONCEPT.....0624  
 Concerto.....0625  
 Concierge.....4386  
 Conia.....0628  
 Contec.....0635  
 CONTEL.....0636  
 COOLSAT.....0643  
 Cornea.....4387  
 COSHIP.....0646  
 COX.....4200  
 Craig.....0650  
 CRITERION.....0654  
 Crosley.....0655

Crown.....0658  
 CTX.....0665  
 Curtis.....0666  
 CURTIS INTERNATIONAL  
 .....0666  
 Curtis Mathes.....0667  
 CXC.....0670  
 CyberHome.....0672  
 CYBERNEX.....0673  
 CyberPower.....0674  
 Cybervision.....4388  
 Cytron.....0680

**D**

Daewoo.....0692  
 Daytron.....0710  
 DBX.....0712  
 Dell.....0725  
 DELPHI.....0726  
 Denon.....0731  
 DENZEL.....0734  
 DESAY.....0737  
 Diamond Vision.....0748  
 Digimate.....3807  
 Digistar.....0767  
 DIGITAL DECOR.....4389  
 Digital Lifestyles.....3567  
 DIGITAL LIVING.....4390  
 DIGITAL MUSIC EXPRESS  
 .....4391  
 DIGITALSTREAM.....3809  
 Digitrex.....0782  
 DIGIWAV.....0784  
 Digix.....3520  
 Dimensia.....3569  
 DIRECTOR.....0793  
 DirecTV.....0794  
 DISH NETWORK.....3966  
 DISHPRO.....0800  
 Disney.....0803  
 DRAKE.....0825  
 DREAMBOX.....4392  
 DRIVE.....4393  
 Dual.....0838  
 Dukane.....4394  
 Dumont.....0840  
 Durabrand.....0842  
 DVD 2000.....0844  
 Dwin.....0848

|                 |      |                    |      |
|-----------------|------|--------------------|------|
| DX ANTENNA..... | 0849 | GENERAL INSTRUMENT |      |
| Dynasty.....    | 4395 | (GI).....          | 1093 |
| DYNATECH.....   | 0854 | GENEXXA.....       | 1097 |
| Dynex.....      | 3476 | GFM.....           | 3820 |

**E**

|                    |      |                  |      |
|--------------------|------|------------------|------|
| EASTERN.....       | 0859 | Gibraltar.....   | 1114 |
| ECHOSPHERE.....    | 4396 | GLOBECAST.....   | 4402 |
| ECHOSTAR.....      | 0866 | Go Video.....    | 1126 |
| EIGERVISION.....   | 4397 | GoldStar.....    | 1140 |
| Electroband.....   | 0888 | GO-VIDEO.....    | 1126 |
| Electrograph.....  | 0889 | GPX.....         | 1150 |
| Electrohome.....   | 0890 | Gradiente.....   | 1151 |
| ELECTROPHONIC..... | 0893 | GREENHILL.....   | 1157 |
| Elektra.....       | 0896 | GRIDLINK.....    | 3824 |
| Element.....       | 3477 | Grundig.....     | 1162 |
| Elite Video.....   | 4398 | Grundy.....      | 1163 |
| Elta.....          | 0910 | Grunpy.....      | 1165 |
| Emerson.....       | 0917 | Guestvision..... | 4403 |

**H**

|                |      |                      |      |
|----------------|------|----------------------|------|
| Emprex.....    | 0922 | HAAZ.....            | 1172 |
| EMTEC.....     | 4363 | Haier.....           | 1175 |
| Envision.....  | 0933 | Hallmark.....        | 1180 |
| Epson.....     | 0937 | HAMLIN.....          | 1182 |
| ESA.....       | 0943 | Hanns.G.....         | 3478 |
| ESCIENT.....   | 0946 | Hannspree.....       | 1189 |
| EVERQUEST..... | 0971 | Harley Davidson..... | 1197 |
| EXPRESSVU..... | 0977 | HARMAN KARDON.....   | 1198 |

**F**

|                  |      |                      |      |
|------------------|------|----------------------|------|
| FARENHEIT.....   | 0986 | Harman/Kardon.....   | 1198 |
| Fischer.....     | 1009 | Harvard.....         | 1202 |
| Fisher.....      | 1009 | HARWOOD.....         | 1204 |
| Fluid.....       | 4399 | Hauppauge.....       | 1206 |
| FORTEC STAR..... | 1026 | Havermy.....         | 1208 |
| FUJI.....        | 1047 | HD-DVD.....          | 4404 |
| Fujitsu.....     | 1052 | HEADQUARTER.....     | 1214 |
| Funai.....       | 1056 | Helios.....          | 1219 |
| Future Tec.....  | 1064 | Hello Kitty.....     | 1221 |
| Futuretech.....  | 1064 | Hewlett Packard..... | 1229 |

**G**

|                     |      |                       |      |
|---------------------|------|-----------------------|------|
| G Vision.....       | 4400 | Hikona.....           | 1237 |
| GARRARD.....        | 1075 | HI-Q.....             | 1231 |
| Gateway.....        | 1076 | Hisense.....          | 1249 |
| GC ELECTRONICS..... | 1080 | Hitachi.....          | 1251 |
| GE.....             | 1081 | Hiteker.....          | 1255 |
| GE HOMEMINDER.....  | 4401 | Howard Computers..... | 1281 |
| GEMINI.....         | 1089 | HP.....               | 1283 |
|                     |      | HUGHES.....           | 4205 |
|                     |      | HUGHES NETWORK.....   | 1296 |
|                     |      | Humax.....            | 1298 |
|                     |      | Hush.....             | 1304 |
|                     |      | Hyundai.....          | 1315 |

**I**

|                     |      |  |  |
|---------------------|------|--|--|
| iBUYPOWER.....      | 1322 |  |  |
| I-Inc.....          | 3462 |  |  |
| ILLICO.....         | 4206 |  |  |
| iLo.....            | 1341 |  |  |
| Ima.....            | 1342 |  |  |
| Infinity.....       | 1352 |  |  |
| InFocus.....        | 1353 |  |  |
| Initial.....        | 1356 |  |  |
| INKEL.....          | 1357 |  |  |
| Insignia.....       | 1368 |  |  |
| INSTANT REPLAY..... | 3580 |  |  |
| Integra.....        | 1370 |  |  |
| Inteq.....          | 1373 |  |  |
| iPOD.....           | 4405 |  |  |

**J**

|                |      |  |  |
|----------------|------|--|--|
| Janeil.....    | 1414 |  |  |
| JASCO.....     | 1415 |  |  |
| JBL.....       | 1420 |  |  |
| JC Penney..... | 4208 |  |  |
| JCB.....       | 1421 |  |  |
| JCL.....       | 4209 |  |  |
| Jensen.....    | 1429 |  |  |
| JERROLD.....   | 1431 |  |  |
| JVC.....       | 1464 |  |  |
| jWin.....      | 1465 |  |  |

**K**

|                     |      |  |  |
|---------------------|------|--|--|
| Kawasaki.....       | 1488 |  |  |
| Kawasho.....        | 1489 |  |  |
| Kaypani.....        | 1490 |  |  |
| KDS.....            | 1494 |  |  |
| KEC.....            | 1496 |  |  |
| Kenwood.....        | 1507 |  |  |
| KINGBOX.....        | 4406 |  |  |
| KISS.....           | 1524 |  |  |
| KLH.....            | 1529 |  |  |
| Kloss.....          | 1532 |  |  |
| Kloss Novabeam..... | 4210 |  |  |
| KODA.....           | 1539 |  |  |
| KODAK.....          | 1540 |  |  |
| Kogi.....           | 4407 |  |  |
| Konka.....          | 1548 |  |  |
| KOSS.....           | 1558 |  |  |
| KRELL.....          | 1569 |  |  |
| KTV.....            | 1572 |  |  |
| Kurazai.....        | 4408 |  |  |
| KXD.....            | 1581 |  |  |

**L**

|                   |      |  |  |
|-------------------|------|--|--|
| Lasonic.....      | 1600 |  |  |
| Legend.....       | 1609 |  |  |
| Lenoxx.....       | 1618 |  |  |
| LG.....           | 1628 |  |  |
| Linksys.....      | 1640 |  |  |
| LINN.....         | 1641 |  |  |
| Liquid Video..... | 1644 |  |  |
| LIQUIDVIDEO.....  | 1644 |  |  |
| LITEON.....       | 1645 |  |  |
| LLOYD.....        | 3539 |  |  |
| Lloyd's.....      | 1648 |  |  |
| Lodgenet.....     | 1658 |  |  |
| Loewe.....        | 1660 |  |  |
| Logik.....        | 1661 |  |  |
| Luce.....         | 1672 |  |  |
| LUTRON.....       | 1679 |  |  |
| Lux Man.....      | 1682 |  |  |
| LUXMAN.....       | 1682 |  |  |
| LXI.....          | 1686 |  |  |

**M**

|                      |      |  |  |
|----------------------|------|--|--|
| MACOM.....           | 1693 |  |  |
| MAG.....             | 1701 |  |  |
| Magnasonic.....      | 1704 |  |  |
| Magnavox.....        | 1706 |  |  |
| Magnin.....          | 1708 |  |  |
| Majestic.....        | 1713 |  |  |
| Marantz.....         | 1724 |  |  |
| MARTA.....           | 1735 |  |  |
| Matsushita.....      | 1751 |  |  |
| Maxent.....          | 1757 |  |  |
| MCE.....             | 1766 |  |  |
| MCS.....             | 1770 |  |  |
| Media Center PC..... | 1777 |  |  |
| Medion.....          | 1787 |  |  |
| Megapower.....       | 1791 |  |  |
| Megatron.....        | 1795 |  |  |
| MEI.....             | 1796 |  |  |
| Memorex.....         | 1800 |  |  |
| MERIDIAN.....        | 1805 |  |  |
| MGA.....             | 1811 |  |  |
| MGN TECHNOLOGY.....  | 1812 |  |  |
| MICROGEM.....        | 4024 |  |  |
| Microsoft.....       | 1826 |  |  |
| MICROVISION.....     | 4409 |  |  |
| MICROYAL.....        | 4410 |  |  |
| Midland.....         | 1831 |  |  |
| Mind.....            | 1837 |  |  |

|                      |      |
|----------------------|------|
| MINOLTA .....        | 1841 |
| Mintek .....         | 1845 |
| Minutz.....          | 1847 |
| Misakai.....         | 4411 |
| MISSION .....        | 1852 |
| Mitsubishi.....      | 1855 |
| Monivision.....      | 1872 |
| Montgomery Ward..... | 4212 |
| Moteva.....          | 4412 |
| Motorola.....        | 1878 |
| MOVIE TIME.....      | 1880 |
| MTC.....             | 1889 |
| Multi Vision .....   | 1909 |
| Multitech.....       | 1907 |
| MUSTEK.....          | 1916 |
| Myron & Davis .....  | 4413 |

## N

|                        |      |
|------------------------|------|
| NAD .....              | 1926 |
| NAKAMICHI.....         | 1932 |
| NEC.....               | 1950 |
| NELSON .....           | 4414 |
| NEO.....               | 3947 |
| NEOSAT .....           | 4415 |
| NESA.....              | 1959 |
| NET.....               | 1961 |
| Net TV .....           | 1967 |
| Netgear.....           | 1964 |
| Nexus Electronics..... | 3948 |
| NexxTech.....          | 1990 |
| Nikei.....             | 1999 |
| Nikko.....             | 2000 |
| Niko.....              | 2002 |
| Niveus Media.....      | 2012 |
| NOBLEX.....            | 2013 |
| Norcent.....           | 2020 |
| NORSTAT .....          | 2025 |
| Northgate.....         | 2027 |
| Norwood Micro.....     | 2029 |
| NOVAPLEX.....          | 2034 |
| NOWTV .....            | 2039 |
| NSC.....               | 2042 |
| NSM.....               | 2043 |
| NTC.....               | 2045 |
| NuVision.....          | 2053 |
| Nyko.....              | 3759 |

## O

|                 |      |
|-----------------|------|
| OAK .....       | 2059 |
| Olevia.....     | 2067 |
| On Command..... | 2077 |
| Onking.....     | 2084 |
| ONKYO.....      | 2085 |
| Onwa.....       | 2087 |
| Oppo.....       | 2092 |
| Optimus .....   | 2095 |
| Optoma .....    | 2097 |
| Optonica.....   | 2099 |
| Orion.....      | 2111 |
| ORITRON.....    | 2112 |
| Otic.....       | 2125 |

## P

|                         |      |
|-------------------------|------|
| PACE.....               | 2134 |
| Pacific.....            | 2135 |
| Panasonic.....          | 2153 |
| PANDIGITAL .....        | 3868 |
| PANSAT .....            | 2158 |
| PARAGON.....            | 2161 |
| PARK.....               | 3951 |
| Penney.....             | 2182 |
| PENTAX.....             | 2183 |
| Petters.....            | 2189 |
| Philco.....             | 2192 |
| Philips.....            | 2195 |
| Philips-Magnavox.....   | 3715 |
| PHOTOSHARE .....        | 4416 |
| Pilot.....              | 2207 |
| PINNACLE.....           | 2210 |
| Pioneer .....           | 2212 |
| Piva.....               | 4417 |
| Planar.....             | 2217 |
| Polaroid.....           | 2230 |
| POLK AUDIO.....         | 2232 |
| Portland.....           | 2238 |
| POWER ACOUSTIK.....     | 4418 |
| Precision.....          | 2244 |
| Price Club .....        | 2252 |
| Prima.....              | 2253 |
| PRIMESTAR.....          | 2257 |
| Princeton.....          | 2258 |
| Princeton Graphics..... | 2258 |
| Prism.....              | 2261 |
| PROLINE.....            | 2274 |
| PROSAT .....            | 2278 |

|                |      |
|----------------|------|
| Proscan.....   | 2279 |
| Prosonic ..... | 2282 |
| PROTEC.....    | 2283 |
| Proton.....    | 2288 |
| Protron.....   | 2289 |
| Proview.....   | 2290 |
| Pulsar.....    | 2296 |
| PYLE.....      | 2303 |

## Q

|              |      |
|--------------|------|
| QUARTER..... | 2318 |
| QUARTZ.....  | 2319 |
| Quasar ..... | 2320 |

## R

|                    |      |
|--------------------|------|
| Radio Shack.....   | 3547 |
| RADIX.....         | 2335 |
| RANDEX.....        | 2343 |
| RCA.....           | 2351 |
| RCN.....           | 4419 |
| Realisitic.....    | 2354 |
| Realistic.....     | 2354 |
| REGAL.....         | 2370 |
| REGENCY.....       | 2371 |
| REGENT .....       | 2372 |
| REMBRANDT .....    | 2375 |
| REOC.....          | 2379 |
| REPLAYTV .....     | 2380 |
| RevolutionHD.....  | 3503 |
| Rhapsody.....      | 2387 |
| Ricavision.....    | 2388 |
| RICOH.....         | 2390 |
| RIO.....           | 2393 |
| RJ TECHNOLOGY..... | 2395 |
| ROGERS.....        | 4215 |
| Roku.....          | 2407 |
| ROSEN.....         | 2413 |
| Rotel.....         | 2414 |
| ROYAL.....         | 2419 |
| Runco .....        | 2423 |

## S

|               |      |
|---------------|------|
| SABA.....     | 2429 |
| SAE.....      | 2433 |
| Sampo.....    | 2446 |
| SAMSONIC..... | 2447 |
| Samsung.....  | 2448 |
| Samsux.....   | 2449 |

|                         |      |
|-------------------------|------|
| Samtron.....            | 2450 |
| SANKY .....             | 2456 |
| SANSONIC.....           | 3881 |
| Sansui.....             | 2458 |
| Santeca.....            | 4420 |
| Sanyo.....              | 2462 |
| Sceptre.....            | 2498 |
| SCIENTIFIC ATLANTA..... | 2503 |
| Scimitsu.....           | 2505 |
| Scotch.....             | 2506 |
| Scott.....              | 2508 |
| Sears.....              | 2514 |
| SEG.....                | 2522 |
| Selectron.....          | 4421 |
| Semp.....               | 2530 |
| SENSORY SCIENCE.....    | 2533 |
| Sharp.....              | 2550 |
| SHAW.....               | 4327 |
| Sheng Chia.....         | 2554 |
| Sherwood.....           | 2557 |
| Sherwood Newcastle..... | 3766 |
| SHINCO.....             | 2560 |
| SHINSONIC.....          | 2562 |
| SHINTOM.....            | 2563 |
| Shogun.....             | 2568 |
| SHURE.....              | 2571 |
| SIERRA I II III.....    | 3549 |
| SIGNAL.....             | 2581 |
| Signature.....          | 2582 |
| Simpson.....            | 2598 |
| SINGER.....             | 2599 |
| SIRIUS.....             | 2602 |
| SKARDIN .....           | 2607 |
| SKY NETWORK.....        | 4422 |
| SKYFI.....              | 4423 |
| Skyworth.....           | 2631 |
| SL MARX.....            | 2633 |
| SMARTPARTS.....         | 4424 |
| Sole.....               | 2655 |
| Sonic.....              | 2666 |
| SONIC BLUE.....         | 2667 |
| Sony.....               | 2679 |
| Soundesign .....        | 2684 |
| SOUNDSTORM.....         | 4425 |
| Sova.....               | 2690 |
| Soyo.....               | 2693 |
| Spectra.....            | 2697 |
| Spectra Vision.....     | 2699 |
| Spectroniq.....         | 2701 |

|                        |      |                    |      |
|------------------------|------|--------------------|------|
| SPRUCER.....           | 2702 | TELSAT.....        | 4428 |
| Squareview.....        | 2703 | Tera.....          | 2957 |
| SSS.....               | 2708 | TERAPIN.....       | 2958 |
| Stack 9.....           | 2710 | Tevion.....        | 2962 |
| STANDARD.....          | 2713 | TEXSCAN.....       | 2965 |
| Star Lite.....         | 2728 | Theta Digital..... | 2970 |
| Star Sight.....        | 2734 | Thomas.....        | 2971 |
| STAR TRAK.....         | 2720 | THOMSON.....       | 2972 |
| STARCHOICE.....        | 2716 | TIME WARNER.....   | 3518 |
| STARCOM.....           | 2722 | TIVAX.....         | 3956 |
| STARGATE.....          | 2723 | TiVo.....          | 2991 |
| Starlite.....          | 2728 | TMK.....           | 2994 |
| STS.....               | 2749 | TNCi.....          | 2996 |
| Studio Experience..... | 2750 | TOCOM.....         | 3000 |
| SunBrite.....          | 2759 | Toshiba.....       | 3021 |
| Sungale.....           | 2761 | Totevision.....    | 3024 |
| SUNKEY.....            | 4426 | Touch.....         | 3025 |
| SUPER GUIDE.....       | 2780 | TREDEX.....        | 3045 |
| Superscan.....         | 2786 | TruTech.....       | 3467 |
| Supersonic.....        | 2787 | TV86.....          | 3076 |
| Supra.....             | 2792 | TVA.....           | 4225 |
| Supremacy.....         | 2794 | TVS.....           | 3081 |
| Supre-Macy.....        | 2794 |                    |      |
| Supreme.....           | 2795 |                    |      |
| SV2000.....            | 2799 |                    |      |
| SVA.....               | 2800 |                    |      |
| Sylvania.....          | 2809 |                    |      |
| Symphonic.....         | 2810 |                    |      |
| Syntax.....            | 2814 |                    |      |
| Systemax.....          | 2817 |                    |      |

## T

|                    |      |
|--------------------|------|
| Tagar Systems..... | 2831 |
| Tandy.....         | 2843 |
| TAO.....           | 4427 |
| Tascam.....        | 2848 |
| TASHIKO.....       | 2850 |
| Tatung.....        | 2852 |
| TCL.....           | 2856 |
| Teac.....          | 2860 |
| Technics.....      | 2869 |
| Technika.....      | 2870 |
| Technol Ace.....   | 2875 |
| Techview.....      | 2883 |
| Techwood.....      | 2884 |
| Teknika.....       | 2895 |
| Telefunken.....    | 2914 |
| Telerent.....      | 2927 |
| TELEVIEW.....      | 2939 |

## U

|                   |      |
|-------------------|------|
| ULTIMATE TV.....  | 3091 |
| Ultra.....        | 3093 |
| UNIDEN.....       | 3101 |
| UNIKA.....        | 3102 |
| UNITECH.....      | 3105 |
| UNITED.....       | 3106 |
| UNITED CABLE..... | 3108 |
| Universal.....    | 3113 |
| US Logic.....     | 3124 |

## V

|                      |      |
|----------------------|------|
| Vector Research..... | 3137 |
| Venturer.....        | 3143 |
| VEOS.....            | 3144 |
| VERIZON.....         | 3146 |
| Victor.....          | 3155 |
| VIDEO CIPHER II..... | 3156 |
| VIDEO CONCEPTS.....  | 3157 |
| VIDEO TECH.....      | 4429 |
| Videocon.....        | 3163 |
| VIDEOSONIC.....      | 3171 |
| VIDEOTRON.....       | 3175 |
| VIDEOWAY.....        | 3176 |
| Vidikron.....        | 3178 |

|                  |      |
|------------------|------|
| Vidtech.....     | 3179 |
| VIEWSAT.....     | 3185 |
| Viewsonic.....   | 3186 |
| VIEWSTAR.....    | 3187 |
| Viking.....      | 3188 |
| Viore.....       | 3192 |
| VISIONETICS..... | 3199 |
| VISIONTEC.....   | 4052 |
| VISTA.....       | 4430 |
| Vizio.....       | 3211 |
| Voodoo.....      | 3215 |
| V-TECH.....      | 3728 |

## W

|                         |      |
|-------------------------|------|
| Wards.....              | 3231 |
| Waycon.....             | 3237 |
| WEB TV.....             | 4431 |
| Western Digital.....    | 4620 |
| Westing House.....      | 3249 |
| Westinghouse.....       | 3249 |
| Wharfedale.....         | 3255 |
| White Westinghouse..... | 3258 |
| WINEGARD.....           | 3268 |
| WONDER.....             | 4432 |
| Wyse.....               | 3288 |

## X

|                          |      |
|--------------------------|------|
| X10 HOME AUTOMATION..... | 4433 |
| X-BOX.....               | 3295 |
| XENIUS.....              | 3297 |
| XM RADIO.....            | 3311 |
| XR-1000.....             | 3316 |

## Y

|               |      |
|---------------|------|
| Yamaha.....   | 3326 |
| YAMAKAWA..... | 3327 |

## Z

|               |      |
|---------------|------|
| Zenith.....   | 3356 |
| ZENTECH.....  | 4031 |
| ZINWELL.....  | 3365 |
| ZT Group..... | 3370 |



© 2010 Koninklijke Philips Electronics N.V.

All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.

The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication thereof does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5333 1

October 2010

[www.philips.com](http://www.philips.com)

RTP/4010