


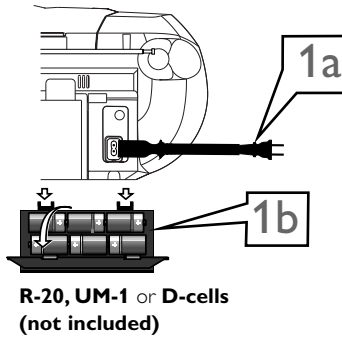


1 Choosing mains Supply

- a Connect the AC mains lead to the **AC MAINS** inlet and the wall socket..
- OR-
- b Open the battery door and insert **6 x D** batteries.



2 Listening to the Radio

- a Press **STANDBY ON** ϕ to on, then press **Source selector** to select **TUNER** (or press **TUNER** on the remote control).
- b Press and hold **PROGRAM** until **AUTOSTORE** appears.
 - Available stations are programmed.
- c Press **ALBUM/ PRESET - , +** until the desired preset station is displayed

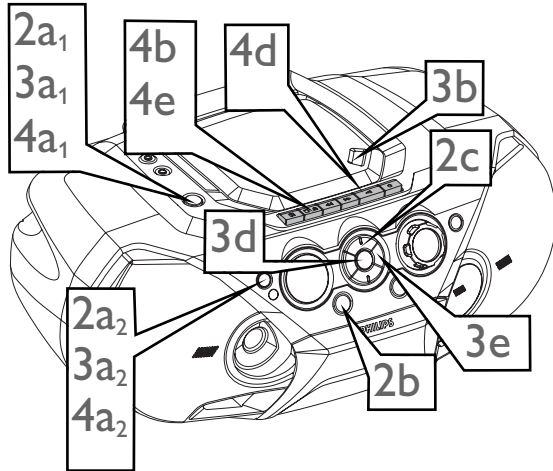

3 Playing CD/MP3/WMA

This player plays Audio Discs including CD-Rs/CD-RWs, and MP3/WMA CDs.

- a Press ϕ once or more to on, then select **CD** source.
- b Press **OPEN•CLOSE** to open the CD door.
- c Insert a CD/MP3 with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop CD playback, press **■**.

4 Playing a tape

- a Press ϕ once or more to on, then select **TAPE** source
- b Press **■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **◀** to start playback.
- e To stop the tape, press **■▲**.

STANDBY ON ϕ
power on/ off switch.

AUX
3.5 mm jack for external audio appliance

3.5 mm stereo head-phone socket

Telescopic antenna
Improves FM reception.

ALBUM/ PRESET - , +
Press to select an album. (MP3 only);
Press to select a preset radio station

MODE
Press to select different play modes: e.g. REPEAT or SHUFFLE(random order)

Source selector
Press to select CD(MP3-CD)/ TUNER/ AUX/ TAPE function

PROGRAM
Use to program CD tracks or preset radio stations.

CASSETTE RECORDER keys
Press to operate a tape.

OPEN•CLOSE
Press to open/close the CD door.

VOLUME
Turn to adjust volume level.

DBB
Press to turn the bass enhancement on(DBB1 or DBB2) /off.

■
Press to stop CD playback or erase a CD program.

FM•MW
Selects wavebands;
During playback, press to display MP3-CD information (MP3 only)

SEARCH ◀◀ ▶▶
Skips & searches CD tracks backwards/ forwards;
Tunes to radio stations (down/up).

REMOTE CONTROL

