

Quick Start Guide




Step A **Connect**

Step B **Setup**


Step C **Enjoy**

What's in the Box?

You should find these items upon opening the box.

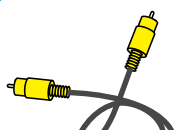

Composite Video Cable

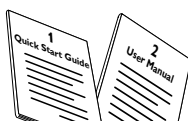


User Manual
Quick Start Guide



Remote control

Pull out the plastic protective sheet before use.

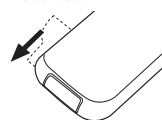

FM antenna
MW antenna



Audio cables



Component video cables

PHILIPS

Step A *Connect*

Tips

— See the *User Manual* for other TV connection options.

1

Connect the speaker cables.

2


Connect the MW and FM antennas.

3

Connect the component video cables (red/blue/green) and audio cables (white/red) to a TV.

4

Connect the power cords of the system and TV.

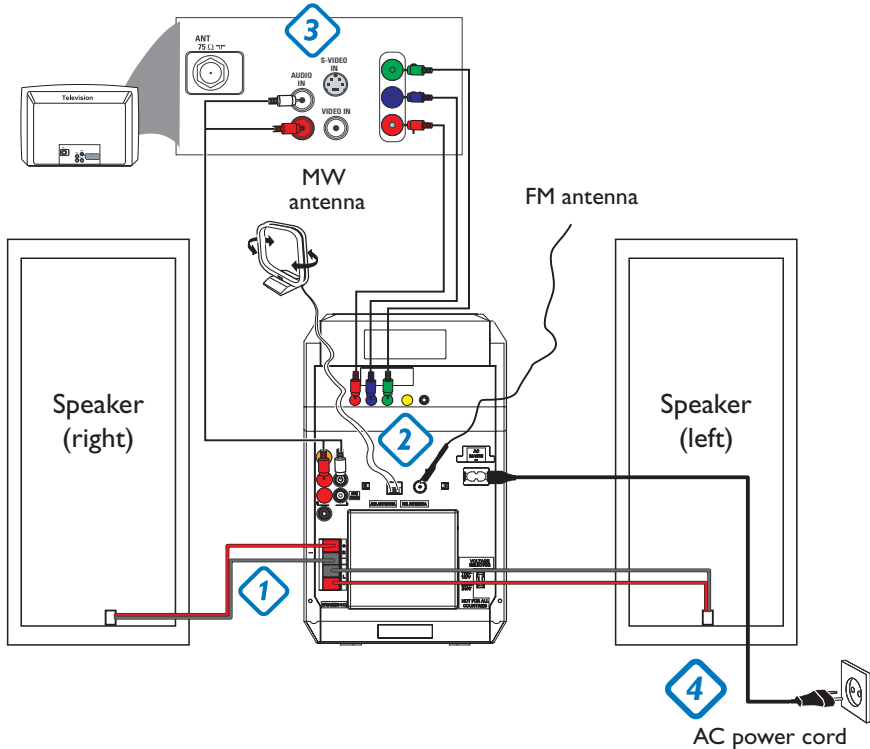

Step B *Setup*


Setting up the TV

1

Press **SOURCE** (DISC on the remote) to select disc source.

2

Turn on the TV and set it to the correct Video In channel.

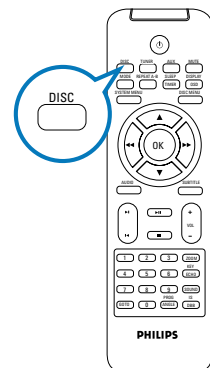

Step B Setup

Setting the clock

1

In standby mode, press and hold **CLOCK SET** on the system.

2


When the hour digits flash, press **SEARCH** ◀▶ (◀▶ on the remote) to set the hours.

3





Press **CLOCK SET** again and the minute digits flash. Then press **SEARCH** ◀▶ (◀▶ on the remote) to set the minutes.

4

Press **CLOCK SET** again to confirm the time setting.

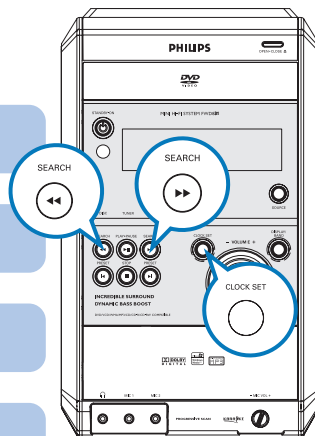


Setting system menu options

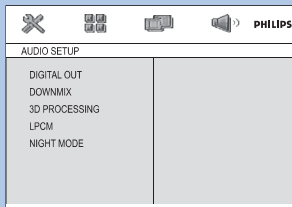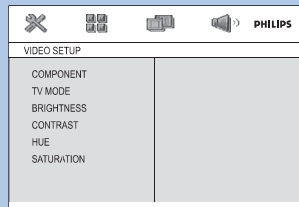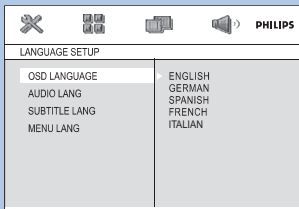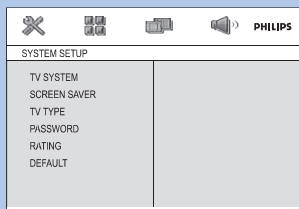


Tip

See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.

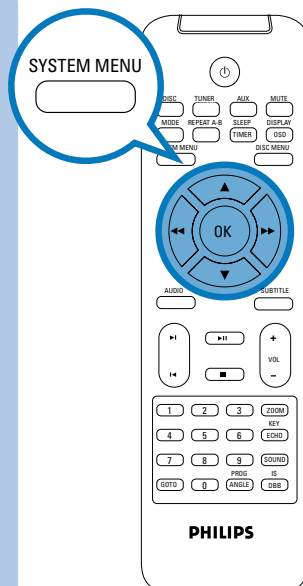

Step C Enjoy

Playing a disc

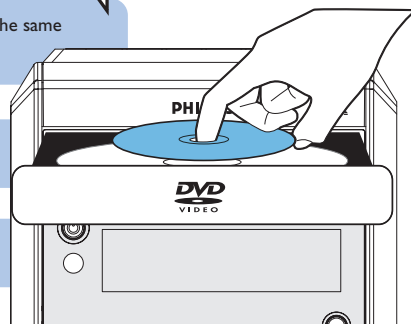

- 1 Press **OPEN•CLOSE** to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.

- 2 Playback will start automatically. If not press **PLAY/PAUSE** .

- 3 To stop playback, press **STOP** .

Programming and tuning to radio stations

- 1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.

- 2 Press **PROGRAM** for more than three seconds to program all available stations in order of waveband.

- 3 Press **PRESET** until the desired preset station is displayed.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

