




EN Quick start guide  
ZH-HK 快速啟用指南

PHILIPS




Quick start guide


What's in the box

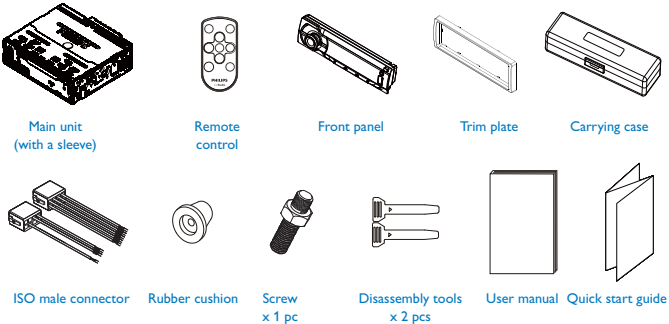


Connection: for cars with ISO connectors

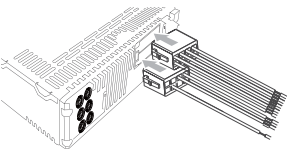

- 1 Connect the supplied male connector to the unit.
- 2 Check the car's wiring carefully and connect them to the supplied male connector:

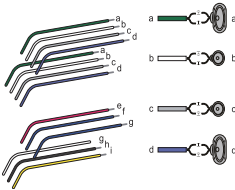

1	Green/black strip	Left speaker (Rear)
2	White/black strip	Left speaker (Front)
3	Gray/black strip	Right speaker (Front)
4	Purple/black strip	Right speaker (Rear)
e	Red	Ignition key +12V DC when ON/ACC
f	Blue	Motor/electric antenna relay control lead
g	Blue/white	Amplifier relay control lead
h	Black	Ground
i	Yellow	To the +12V car battery which is energized at all times

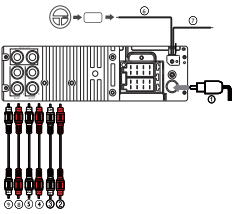

- 3 Connect the antenna and amplifier as illustrated, if applicable.

Connector	Connect to
1 ANTENNA	Antenna
2 FRONT LINE OUT R (Socket)	Front right speaker
3 FRONT LINE OUT L (Socket)	Front left speaker
4 REAR LINE OUT R (Socket)	Rear right speaker
5 REAR LINE OUT L (Socket)	Rear left speaker
6 OE REMOTE (Purple)	OE Remote
7 TEL MUTING (Blue)	To cellular phone system
8 REAR AUX LINE OUT R (Socket)	Rear Aux right
9 REAR AUX LINE OUT L (Socket)	Rear Aux left

Turn on

- To turn on the unit,
- Press  $\Phi$ .
- To turn off the unit,
- press and hold  $\Phi$  until the unit is turned off.

Select country/region

- 1 Press  $\Phi$  to turn on the unit.  
→ [SELECT OPERATING REGION] is displayed.

- 2 Rotate to select an option:
- [USA] (United States)
  - [LATIN] (Latin America)
  - [EUROPE] (Western Europe)
  - [M-EAST] (Middle East)
  - [ASIA] (Asia Pacific)
  - [JAP] (Japan)
  - [AUST] (Australia)

- 3 Press to confirm.

Set clock

- 1 Press **MENU** repeatedly until current time is flashed.
- 2 Rotate to set hour.
- 3 Press to confirm.
- 4 Rotate to set minute.
- 5 Press to confirm.

Listen to radio

- 1 Press **SOURCE** repeatedly to select radio mode.
- 2 Press **BAND** or / repeatedly to select band: [FM1], [FM2], [FM3], [AM1], or [AM2] .
- 3 Press and hold or until the frequency digit is flashed.
- 4 Press or to tune to a radio station manually.
- ↳ The radio station is broadcast.
  - To search for a radio station automatically, press or .

Store stations automatically

- 1 In Radio mode, press and hold **DBB** until [STORE - - ] is displayed.
- 2 Press to confirm.
- ↳ The six strongest stations of the selected band are saved in preset channel automatically.

Store stations manually

- 1 Tune to a station that you want to store.
- 2 Press a numeric button for 3 seconds.
- ↳ The station is saved in the selected channel.


Play from USB

- 1 Slide the USB socket cover marked to the left.
- 2 Insert the USB device into the USB socket.
- ↳ The unit starts playing from the USB device automatically.



Insert a card


- 1 Press to release the panel.
- 2 Push the left side of the panel rightward, then pull the panel towards you to disengage it from the chassis.
- 3 Insert the card into the card slot.
- ↳ The unit starts playing from the card automatically.

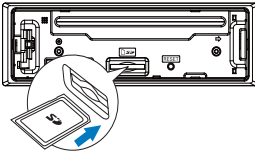

Reset


You can reset the unit to its default setting.

- 1 Detach the front panel.
- 2 Press the reset button by using a ball-point pen or a similar tool.
- ↳ Preset adjustments such as preset channels and sound adjustments are erased.



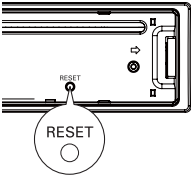


快速啟用指南

包裝盒內含物件

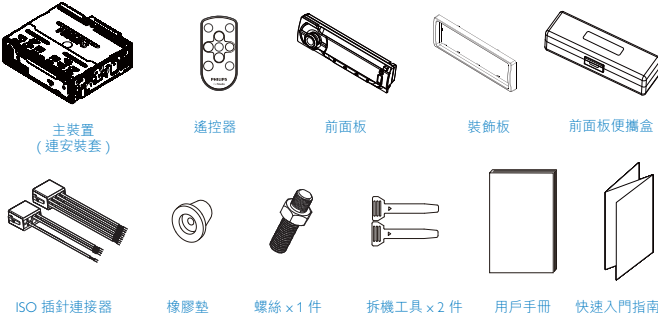

連接：適合具有 ISO 接頭的車輛

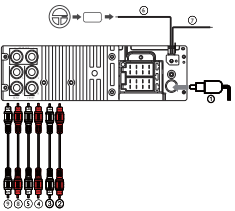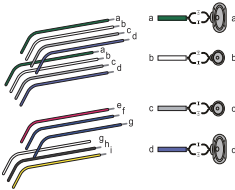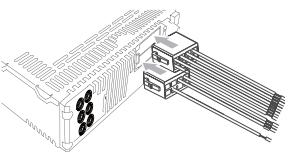

1	綠色/黑色線束	左喇叭 (後方)
2	白色/黑色線束	左喇叭 (前方)
3	灰色/黑色線束	右喇叭 (前方)
4	紫色/黑色線束	右喇叭 (後方)
e	紅色	點火開關 +12V DC，當處於 ON/ACC 狀態時
f	藍色	摩打/電動天線繼電器控制引線
g	藍色/白色	放大器繼電器控制引線
h	黑色	接地
i	黃色	連接至 +12V 汽車電池隨時進行充電

- 3 按照說明連接天線與放大器 (如果需要)。

接頭	連接至
1 ANTENNA	天線
2 FRONT LINE OUT R (插座)	前方右喇叭
3 FRONT LINE OUT L (插座)	前方左喇叭
4 REAR LINE OUT R (插座)	後方右喇叭
5 REAR LINE OUT L (插座)	後方左喇叭
6 OE REMOTE (紫色)	OE 遙控
7 TEL MUTING (藍色)	至流動手機系統
8 REAR AUX LINE OUT R (插座)	後方輔助右側
9 REAR AUX LINE OUT L (插座)	後方輔助左側

開啟

- 要啟動裝置，
- 按 .
- 要關閉裝置，
- 按住 直到裝置關閉為止。

選擇國家/地區

- 1 按 以開啟裝置。
- ↳ 將顯示 [SELECT OPERATING REGION]。

- 2 旋轉 以選擇選項：
- [USA] (美國)
  - [LATIN] (拉丁美洲)
  - [EUROPE] (西歐)
  - [M-EAST] (中東)
  - [ASIA] (亞太地區)
  - [JAP] (日本)
  - [AUST] (澳洲)

- 3 按 確認。

設定時鐘

- 1 重複按 **MENU**，直到目前時間閃爍為止。
- 2 旋轉 即可設定小時。
- 3 按 確認。
- 4 旋轉 即可設定分鐘。
- 5 按 確認。

調至收音機電台

- 1 重複按 **SOURCE** 即可選擇收音機模式。
- 2 重複按 **BAND** 或 / 即可選擇波段：[FM1]·[FM2]·[FM3]·[AM1] 或 [AM2]。
- 3 按住 或 直到頻率數字閃爍為止。
- 4 按 或 即可手動調至收音機電台。
- ↳ 收音機電台即指廣播。
  - 要自動搜尋收音機電台，按 或 .

自動儲存電台

- 1 在收音機模式中，按住 **DBB**，直到 [STORE - - ] 顯示為止。
- 2 按 確認。
- ↳ 選定波段訊號最強的六個電台將被自動儲存於預設頻道中。

手動儲存電台

- 1 調諧至您想要儲存的電台。
- 2 按數字按鈕 3 秒。
- ↳ 此電台被儲存到選定頻道中。


從 USB 播放

- 1 向左滑動帶有 標記的 USB 插槽蓋。
- 2 將 USB 裝置插入 USB 插槽。
- ↳ 將 USB 裝置插入 USB 插槽。



插入卡

- 1 按 以鬆開面板。
- 2 將面板的左面向右推，然後將面板朝自己的方向拉，即可從機箱取下面板。
- 3 將卡插入卡插槽中。
- ↳ 裝置將自動對卡中的內容進行播放。

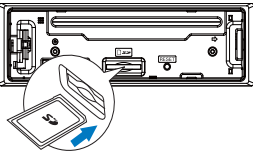

重設

您可以將裝置重設為其預設設定。

- 1 拆開前面板。
- 2 使用圓珠筆或類似工具按重設按鈕。
- ↳ 預設諸如預設頻道等調節，聲音調節將被清除。

