




AZ5140



PHILIPS

1 Choosing Power Supply

- Connect the AC power cord to the **AC~ Mains** inlet and the wall socket.
- OR- Open the **battery door** and insert 6 x C batteries (not included).

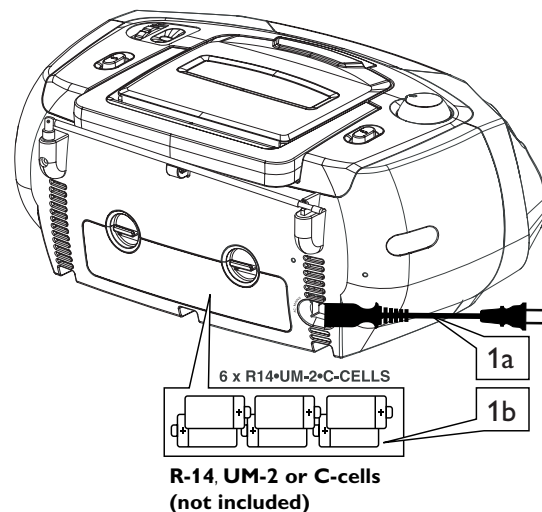

2 Listening to the Radio


- Push the **source selector** to **MW** or **FM**.
- Turn **TUNING** to tune to a station.

3 Playing a disc

This player plays Video CD, Audio Discs including CD-R/CD-RW, and MP3-CD.

For VCD playback:

- Connect the VIDEO OUT jack to the video input jack on the TV using the supplied video cable (yellow).
 - Turn on the TV and set it to the correct Video In channel.
- Adjust the **source selector** to **CD/VCD**.
 - Open the disc door.
 - Insert a disc with the printed side facing up and close the door.
 - Press **▶||** to start playback.
 - To stop disc playback, press **■**.

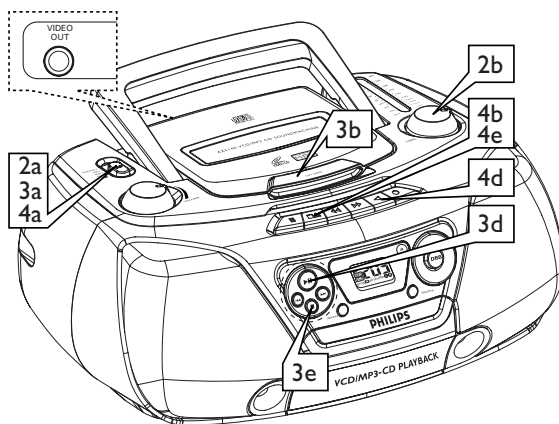

4 Playing a tape

- Adjust the **source selector** to **TAPE/OFF**.
- Press **■▲** to open the cassette holder.
- Insert a cassette and close the door.
- Press **◀** to start playback.
- To stop the tape, press **■▲**.



Source selector

Slide to select function: CD/VCD, radio (FM/MW), or tape

VOLUME

Turn to adjust volume level



Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward.



Press to start or pause disc playback

REPEAT

Press to select REPEAT mode

Press to stop disc playback, or erase a disc program

Telescopic antenna

Improves FM reception

LIFT TO OPEN

Lift to open the disc door

TUNING

Turn to tune to a station

DBB

Turns the bass enhancement on/off

SHUFFLE

Press to select SHUFFLE mode (random order)

Display

Shows disc functions

CASSETTE RECORDER keys

Press to operate a tape

VIDEO/AUDIO OUT

Connects to the VIDEO/AUDIO IN on the TV or VCR

