
CID3692


www.philips.com/welcome





EN Quick Start Guide

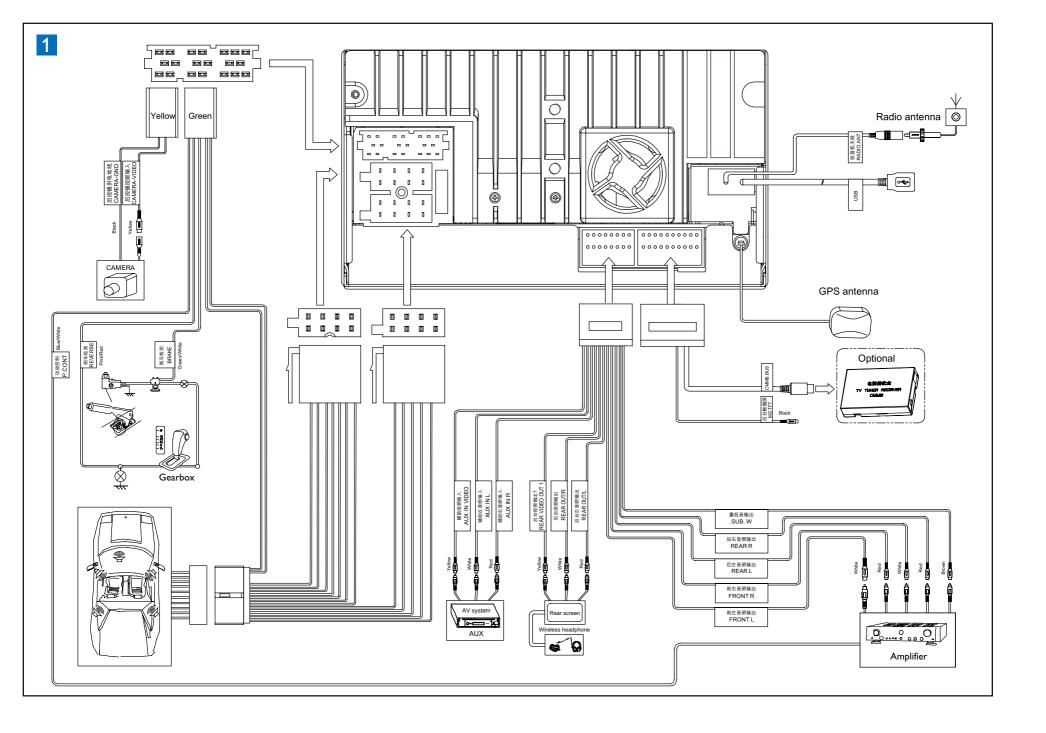




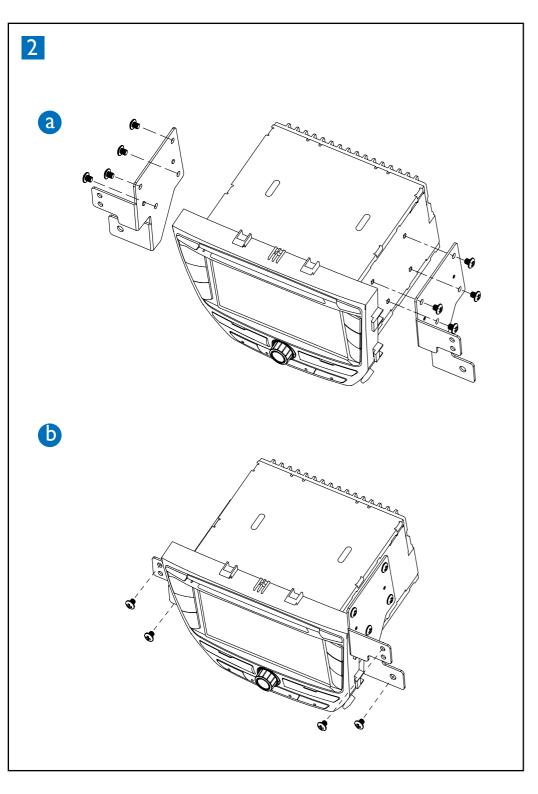

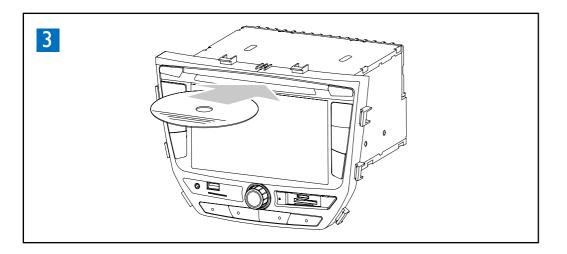

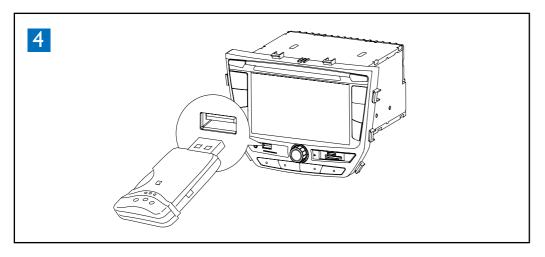

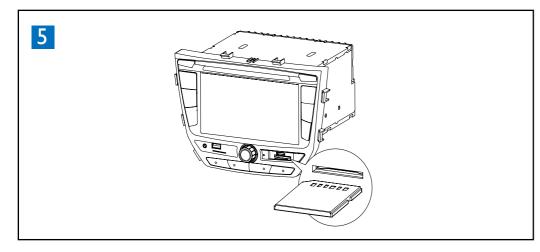

English

Connect wires 1

1 Check the car's wirings carefully, then connect them to the unit.

Mount in the dashboard 2

- 1 If the car does not have an on-board drive or navigation computer, disconnect the negative terminal of the car battery.
- 2 Ensure that the horizontal slant of the car dashboard opening is between 0 and 20 degrees. The unit cannot be used if the dashboard opening's slant angle is above 20 degrees.
- **3** Fix the mounting brackets to the unit with screws (supplied by the car manufacturer). **a**
- 4 Slide the unit into the dashboard and fix it to the car with four screws. ()
- 5 Reconnect the negative terminal of the car battery.

Turn on

- Press and hold O/MUTE/VOL to turn on the unit.
 - → The available OSD (On-Screen Display) languages are displayed.



- 2 Tap a language to select.
- To turn off the unit, press and hold ひ/ MUTE/VOL.

Set date and time

1 Tap the upper left corner to display the main menu.



- 2 Tap € in the middle right side of the screen.
- 3 Tap [Settings].
- 4 Tap [Time].
 - → The date/time setup menu is displayed.

- B			
Date		2009/5/1	
Clock Mode		24btr	1.
Time		02:13	

Set date

- 1 Tap [Date].
- 2 Tap on the displayed date information.
- 3 Tap \blacklozenge or \blacklozenge to set year, month and day.

Set clock mode

- Tap [Clock mode] .
- 2 Tap on [12Hr] or [24Hr] to select clock mode.

Set time

1

- Tap **[Time]**.
- 2 Tap on the displayed time.
- 3 Tap \blacklozenge or \blacklozenge to set hour and minute.

Use map

- Note

• You may need to upgrade the map (sold separately) before using it.

- 1 Tap the upper left corner to display home menu.
- 2 Tap [Navigation].
 - ➡ The navigation menu is displayed in a few seconds.
- **3** Refer to the map manual to operate the navigation tool.

Listen to Radio

- Tap ♠ to display the home menu.
- 2 Tap [Radio].
 - → Band and frequency information is displayed.



- **3** Tap on **FM** or **AM** to select band:
- 4 Briefly tap ◀ or ► to tune to a radio station by step.

Play disc 3

You can play video, audio or images stored on the following discs:

- DVD video, DVD-R, DVD-RW
- VCD
- Audio CD, CD-R, CD-RW
- 1 Insert a disc into the disc slot with the label side facing up.
 - \blacktriangleright Play starts automatically.

Connect USB device 4

- Open the AV-IN/USB socket cover.
- 2 Insert the USB device to the USB socket.
 - \blacktriangleright Play starts automatically.

Insert SD/MMC card 5

- Open the MAP/SD card socket cover.
- 2 Insert the SD/MMC card into the card slot.
 - ➡ Play starts automatically.

Make a call

1

3

- 1 Pair the phone with the unit.
- 2 Tap \bigstar to display the home menu.
 - Tap **[Bluetooth]**.
 - \mapsto The Bluetooth menu is displayed.

# 800	taasti /	No pute	ed device	1	
	清清				
	NX20)()			
					1
			-	x	1

- 4 Tap ♦ or ♥ to select the paired phone, then tap ♥.
- 5 Tap ♠ or ♥ to search for phone number from the following list:
 - [Missed calls]
 - [Received calls]
 - [Dialed calls]
 - [Phone book]
 - [Sim phone book]
 - [Local phone book]

Or tap III to dial number directly, then tap
to dial.

Receive call

By default, all incoming calls are received automatically.

- 1 If there is incoming call, **[Incoming call...]** flashes on the screen. Speak into the Bluetooth microphone.
- 2 When conversation ends, tap **(**red) to terminate the call.



