

Always there to help you

Register your product and get support at
www.philips.com/welcome



AJ7045D



User Manual

PHILIPS

Contents

1	Important	3
	Risk of swallowing batteries	3

2	Your clock radio	4
	What's in the box	4
	Overview of the main unit	5
	Overview of the remote control	6

3	Get started	7
	Install remote control battery	7
	Connect power	8
	Set clock	8
	Turn on	9

4	Play from iPod/iPhone	9
	Compatible iPod/iPhone	9
	Listen to audio from iPod/iPhone	9
	Charge the iPod/iPhone	10
	Adjust volume	10

5	Listen to FM radio	10
	Tune to FM radio stations	10
	Store FM radio stations automatically	10
	Store FM radio stations manually	11
	Select a preset radio station	11

6	Other features	11
	Set alarm timer	11
	Set sleep timer	12
	Play audio from an external device	12
	Adjust display brightness	13

7	Product information	13
	Specifications	13

8	Troubleshooting	14
----------	------------------------	-----------

9	Notice	14
----------	---------------	-----------

1 Important

- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer:



Warning

- Never remove the casing of this clock radio.
 - Never lubricate any part of this clock radio.
 - Never place this clock radio on other electrical equipment.
 - Keep this clock radio away from direct sunlight, naked flames or heat.
 - Make sure that you always have easy access to the power cord, plug or adaptor to disconnect the clock radio from the power.
-
- Make sure that there is enough free space around the product for ventilation.
 - The clock radio shall not be exposed to dripping or splashing.
 - Do not place any sources of danger on the clock radio (e.g. liquid filled objects, lighted candles).
 - Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.



Risk of swallowing batteries

- The product or remote control may contain a button cell battery, which is possible to be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.



2 Your clock radio

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

What's in the box

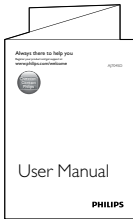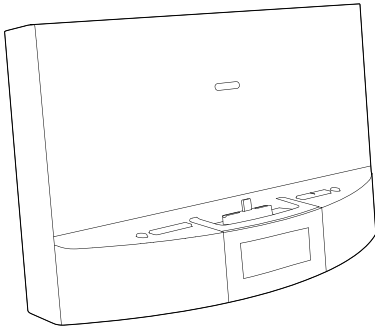


Overview of the main unit

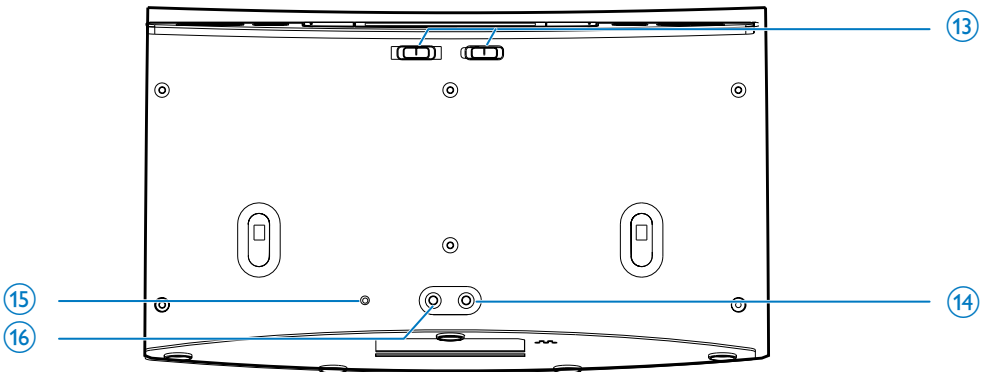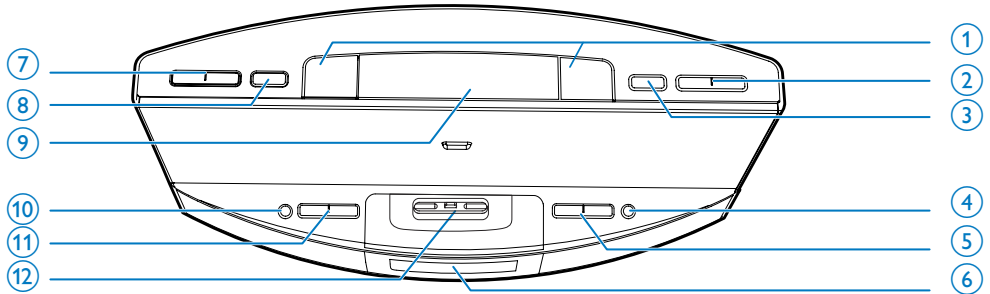


- ① **AL1/AL2**
 - Set alarm.
 - View alarm settings.
 - Activate or deactivate alarm timer.
- ② **TUNING ◀◀ / ▶▶**
 - Tune to an FM radio station.
 - Adjust hour, minute and hour format.
 - Skip to the previous or next track.
 - Search within a track.
- ③ **▶||**
 - Start or pause play.
- ④ **SLEEP**
 - Set sleep timer.
- ⑤ **VOLUME +/-**
 - Adjust volume.
- ⑥ **Display panel**
 - Show current information.
- ⑦ **PRESET ▲ ▼**
 - Select a preset radio station.
 - Scroll through the iPod/iPhone menu.
- ⑧ **SET TIME/PROG**
 - Set clock.
 - Scan/store FM radio stations.

- ⑨ **SNOOZE/BRIGHTNESS**
 - Snooze alarm.
 - Adjust display brightness.
- ⑩ **☰**
 - Turn on the clock radio.
 - Switch to standby mode.
- ⑪ **SOURCE**
 - Select a source.
- ⑫ **Dock for iPod/iPhone**
- ⑬ **AL1/AL2 RADIO BUZZ DOCK**
 - Select an alarm source for Alarm 1 or Alarm 2.
- ⑭ **DC IN**
 - Connect power.
- ⑮ **FM ANT**
 - Improve FM reception.
- ⑯ **AUDIO IN**
 - Connect an external audio device.

Overview of the remote control

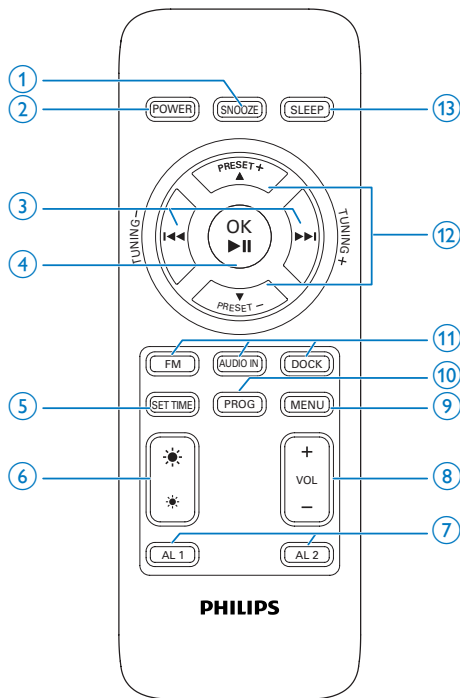

- ① **SNOOZE**
 - Snooze the alarm.
- ② **POWER**
 - Turn on the clock radio.
 - Switch to standby mode.
- ③ **◀▶ • TUNING +/-**
 - Tune to an FM radio station.
 - Adjust hour; minute and hour format.
 - Skip to the previous or next track.
 - Search within a track.
- ④ **OK / ▶▶**
 - Start or pause play.
 - Confirm a selection.
- ⑤ **SET TIME**
 - Set time.

- ⑥  Adjust display brightness.
- ⑦ **AL1/AL2**
 - Set alarm.
 - View alarm settings.
 - Activate or deactivate alarm timer.
- ⑧ **VOL +/-**
 - Adjust volume.
- ⑨ **MENU**
 - Access iPod/iPhone menu.
- ⑩ **PROG**
 - Scan/store radio stations.
- ⑪ **Source selection buttons: FM, AUDIO IN, DOCK**
 - Select a source.
- ⑫ **PRESET +/- ▲ ▼**
 - Select a preset radio station.
 - Scroll through the iPod/iPhone menu.
- ⑬ **SLEEP**
 - Set sleep timer.

3 Get started

Always follow the instructions in this chapter in sequence.

Install remote control battery



Caution

- Risk of explosion! Keep the battery away from heat, sunshine or fire. Never discard the battery in fire.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery contains chemical substances, so it should be disposed of properly.
- Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.




Note

- You can only use AC power as power supply. The pre-installed lithium CR2032 battery can only back up time and alarm settings.

For first-time use:

Remove the protective tab to activate the battery.


To replace the battery

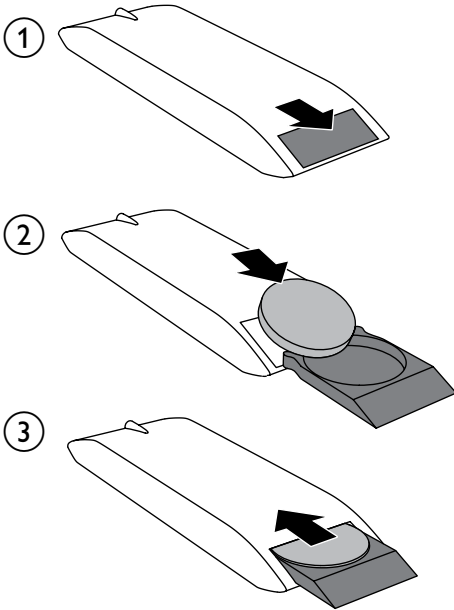

Connect power



! Caution

- Risk of product damage! Make sure that the power voltage corresponds to the voltage printed on the back or underside of the clock radio.
- Risk of electric shock! When you unplug the AC adapter, always pull the plug from the socket. Never pull the cord.

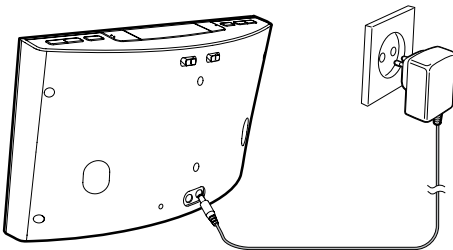

Set clock

- 1 In standby mode, press and hold **SET TIME** for two seconds to activate clock setting mode.
↳ [12H] (12 hour) or [24H] (24 hour) blinks.
- 2 Press **◀◀ / ▶▶** to adjust the hour format.
- 3 Press **SET TIME** to confirm.
↳ The hour digits blink.
- 4 Repeat steps 2-3 to set the hour and minute.
↳ The set time is displayed.

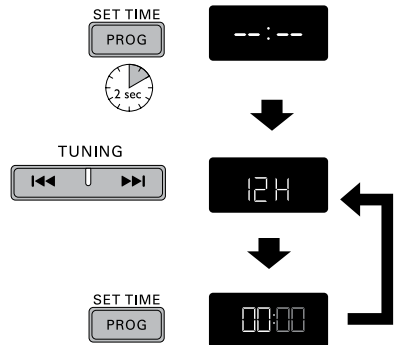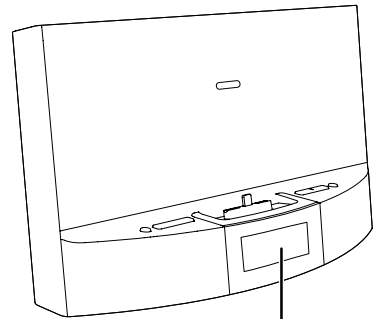

≡ Note

- When an iPod/iPhone is connected, the clock radio synchronizes time from the iPod/iPhone automatically.

Turn on

Press ϕ .

- ↳ The clock radio switches to the last selected source.
- To switch the clock radio to standby mode, press ϕ again.

4 Play from iPod/iPhone

You can enjoy audio from iPod/iPhone through this clock radio.

Compatible iPod/iPhone


The clock radio supports these iPod and iPhone models:

Made for:

- iPod touch (5th generation)
- iPod nano (7th generation)
- iPhone 5

Listen to audio from iPod/iPhone

- 1 Place the iPod/iPhone in the dock.

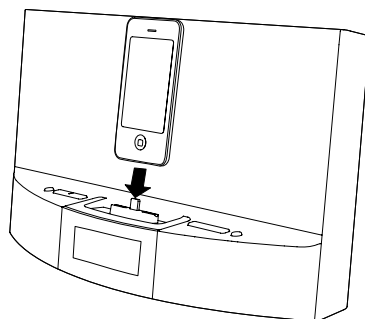

- 2 Press **SOURCE** repeatedly or **DOCK** on the remote control to select iPod/iPhone mode.
- 3 Play audio on the iPod/iPhone.
 - To pause or resume play, press **▶||**.
 - To skip to a track, press **◀◀ / ▶▶**.
 - To search during play, press and hold **◀◀ / ▶▶**, then release to resume normal play.
 - To navigate the menu: press **MENU**, then press **▲ / ▼** to select, and press **OK** to confirm.

To remove the iPod/iPhone:

Pull the iPod/iPhone out of the dock.

Charge the iPod/iPhone

When the clock radio is connected to power, the docked iPod/iPhone starts charging.

Adjust volume

You can adjust volume by pressing **VOL +/-** repeatedly.

5 Listen to FM radio

Tune to FM radio stations



Tip

- Position the antenna as far as possible from TV, VCR, or other radiation source.
- For better reception, fully extend and adjust the position of the antenna.

- 1 Press **SOURCE** repeatedly or **FM** on the remote control to select FM tuner source.
- 2 Press and hold **TUNING +/-** for two seconds.
 - ↳ The clock radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more radio stations.

To tune to a station manually:

Press **TUNING +/-** repeatedly until you find optimal reception.

Store FM radio stations automatically



Note

- You can store a maximum of 20 FM radio stations.

In tuner mode, press and hold **PROG** for two seconds.

- ↳ The clock radio stores all the available FM radio stations, and broadcasts the first available station automatically.

Store FM radio stations manually

- 1 Tune to an FM radio station.
- 2 Press **PROG**.
↳ The preset number begins to blink.
- 3 Press **PRESET +/-** repeatedly to select a number.
- 4 Press **PROG** again to confirm.
- 5 Repeat steps 1-4 to store other stations.

Note

- To remove a pre-stored station, store another station in its place.

Select a preset radio station

In tuner mode, press **PRESET +/-** repeatedly to select a preset radio station.

6 Other features

Set alarm timer

In standby mode, you can set two alarms to ring at different time.


Note

- Make sure that you have set the clock correctly.

- 1 Press and hold **AL1/AL2** for two seconds to activate alarm setting mode.
↳ The hour digits blink.
- 2 Press **◀◀ / ▶▶** repeatedly to adjust the hour.
- 3 Press **AL1/AL2** to confirm.
- 4 Repeat steps 2-3 to set the minute and alarm volume.
↳ The corresponding alarm icon is displayed.

Select alarm source

For alarm sound, you can select buzzer; your last listened radio channel, or the latest played audio on your iPod/iPhone.

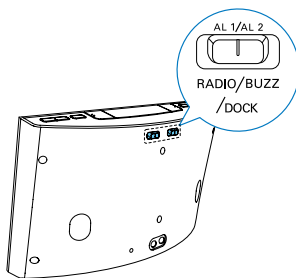

Tip

- If **DOCK** is selected as the alarm source, yet the audio cannot be played, buzzer will sound when alarm time comes.

Activate/deactivate alarm timer

- 1 Press **AL1/AL2** to view alarm settings.
- 2 Press **AL1/AL2** again to activate or deactivate the alarm timer:
 - ↳ The alarm icon appears if alarm timer is on and disappears if it is off.
 - To stop the ringing alarm, press the corresponding **AL1/AL2**.
 - ↳ The alarm repeats ringing for the next day.

Snooze the alarm

When alarm sounds, press **SNOOZE**.

- ↳ The alarm snoozes and repeats ringing nine minutes later.

Set sleep timer

This clock radio can switch to standby mode automatically after a preset period.

- Press **SLEEP** repeatedly to select the sleep timer period (in minutes).
 - ↳ When the sleep timer is activated, **zZ** appears.

To deactivate the sleep timer:


- Press **SLEEP** repeatedly until **[OFF]** (off) appears.

15 → 30 → 60 → 90 → 120
↑ OFF

Play audio from an external device


You can listen to audio from an external device through this clock radio.

- 1 Connect an audio cable to:
 - the **AUDIO IN** socket on the clock radio.
 - the headphone socket on an external device.

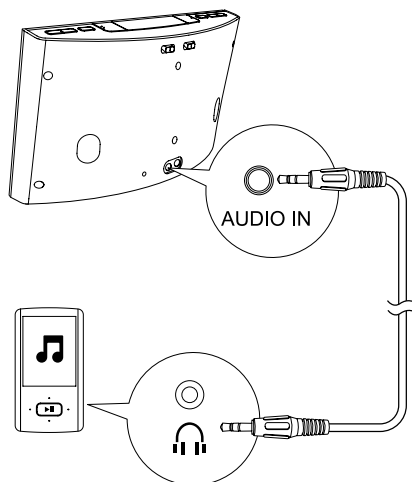

- 2 Press **SOURCE** repeatedly or **AUDIO IN** on the remote control to select the Audio-in source.
- 3 Play the external device (refer to its user manual).

Adjust display brightness

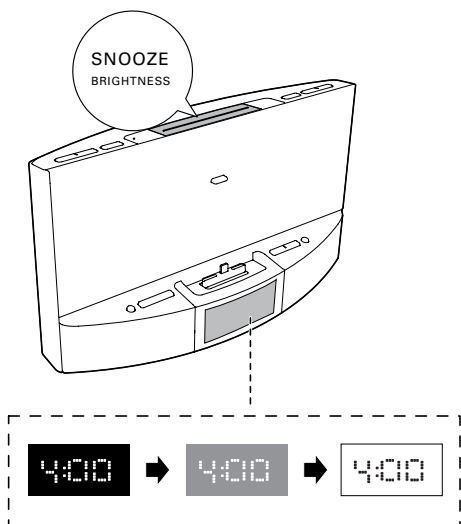

7 Product information

Note

- Product information is subject to change without prior notice.

Specifications

Amplifier

Rated Output Power 20W RMS

Tuner

Tuning Range	FM: 87.5 - 108 MHz
Sensitivity	
- Mono, 26dB S/N Ratio	FM: <22 dBf
Search Selectivity	FM: <30 dBf
Total Harmonic Distortion	FM: <3%
Signal to Noise Ratio	FM: >50 dBA

General information

AC Power	Model: AS190-100-AE180; Input: 100-240 V~, 50/60Hz, 0.7A; Output: 10V \equiv 1.8 A
Operation Power Consumption	<15 W
Standby Power Consumption	<1 W
Max. load for iPod/iPhone	5V \equiv 1 A
Dimensions - Main Unit (W x H x D)	290 x 159 x 113 mm
Weight - Main Unit	1.36 kg

8 Troubleshooting

Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Ensure that the AC power plug of the clock radio is connected properly.
- Ensure that there is power at the AC outlet.

No response from the clock radio

- Disconnect and reconnect the AC power plug, then turn on the clock radio again.

Poor radio reception

- Keep the clock radio away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the FM antenna.

Alarm does not work

- Set the clock/alarm correctly.

Clock/alarm setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/alarm.

9 Notice



This product complies with the radio interference requirements of the European Community.

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries

because correct disposal helps to prevent negative consequences for the environmental and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



“Made for iPod” and “Made for iPhone” mean that an electronic accessory has been designed to connect specifically to iPod or iPhone respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance. iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries.

Note

- The type plate is located on the bottom of the apparatus.



This is CLASS II apparatus with double insulation, and no protective earth provided.



Specifications are subject to change without notice
2013 © WOOX Innovations Limited. All rights reserved.
This product was brought to the market by WOOX
Innovations Limited or one of its affiliates, further referred
to in this document as WOOX Innovations, and is the
manufacturer of the product. WOOX Innovations is the
warrantor in relation to the product with which this booklet
was packaged. Philips and the Philips Shield Emblem are
registered trademarks of Koninklijke Philips N.V.

AJ7045D_12_UM_V2.0

