



PHILIPS


AZ1226

1 Choosing Power Supply

- a Open the **battery door** and insert 6 x C batteries (not included).

-OR-

 - b Connect the AC power cord to the **AC Mains** inlet and the wall socket.

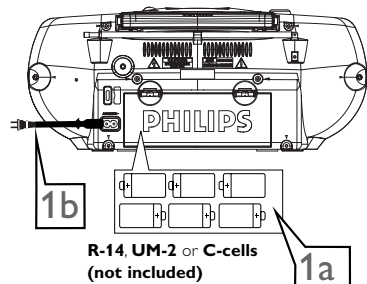

R-14, UM-2 or C-cells
(not included)

2 Listening to the Radio


- a Push the **source selector** to **RADIO**.
- b Adjust **MW•FM** to **MW** or **FM**.
- c Turn **TUNING** to tune to a station.

3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

IMPORTANT: For a disc with CD Audio tracks and MP3 files, only the CD audio tracks will be played.

- a Adjust the **source selector** to **CD/MP3**.
- b Open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

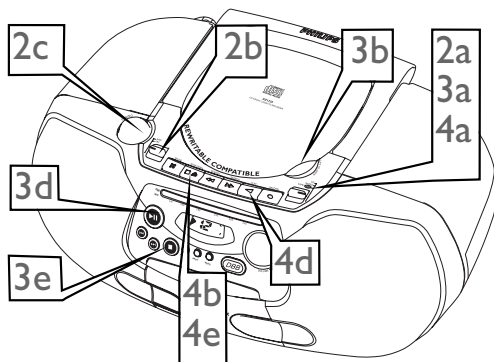 

4 Playing a tape

- a Adjust the **source selector** to **TAPE/OFF**.
- b Press **■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **◀** to start playback.
- e To stop the tape, press **■▲**.

• Remote control not supplied

MW•FM

Slide to select waveband

TUNING

Turn to tune to a station.

CASSETTE RECORDER keys

Press to operate a tape.

Display

Shows disc functions

▶||

Press to start or pause disc playback..

SEARCH



Briefly press to skip to the beginning of the current/previous/ later disc track; During disc playback, press and hold to find a particular passage backward/forward.



Press to stop disc playback or erase a disc program.

Telescopic antenna

Improves FM reception.

LIFT TO OPEN

Lift to open the disc door.

Source selector

Slide to select function: CD/MP3-CD, radio or tape.

VOLUME

Turn to adjust volume level.

DBB

Press to turn the bass enhancement on/off.

MODE

 
Press to select different play modes, such as REPEAT or SHUFFLE (random order)

PROG

Use to program disc tracks and review a disc program.

ALBUM+ (up)

For MP3-CD only:
Press to select albums

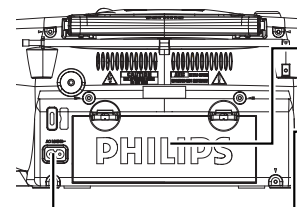

Battery door

AC MAINS

inlet for the AC power cord.

