




Switch the handset On/Off

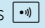
Press and hold  key for 3 seconds to switch off the handset in idle mode.

Short press  key to switch on the handset.

Keypad lock/unlock

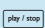
Press and hold  key for 2 seconds to lock/unlock the keypad in idle mode.


Paging


1. Press  key on the base station. All the registered handsets start to ring.
2. Once retrieved, press any key on the handset to end the paging.

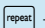
Listen to messages recorded on the answering machine (for SE745 only)

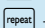
Your answering machine is activated by default. If you have new messages, the message counter on your base station will blink with the indication of the number of new messages received.

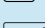
Press  on the base station to play phone messages (the first recorded message will be played first).

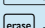
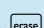
Press  again to stop message playback.

Press  to skip the current message and play the next message.

Press  to go back to the previous message (if pressed within 1 second of current message playback).

Press  to replay current message (if pressed after 1 second of current message playback).


Press  to adjust speaker volume during message playback.

Press  to delete the current message during message playback. Long press  in idle mode to delete all messages (except unread messages).

Refer to your SE745 User Manual for details about the answering machine function.

Frequently asked questions

For more information, please refer to the User Manual that came with your phone.

Problem	Solution
<ul style="list-style-type: none">• There's no dialling tone!	<ul style="list-style-type: none">• Check the connections• Charge the batteries• Use the line cable provided in the box
<ul style="list-style-type: none">• Caller cannot hear me clearly!	<ul style="list-style-type: none">• Move closer to the base station• Move the base station at least one metre away from any electrical appliances
<ul style="list-style-type: none">• SEARCHING... is displayed on handset and  icon is blinking!	<ul style="list-style-type: none">• Move closer to the base station• Make sure that your base station is correctly plugged• Reset your unit and restart handset registration
<ul style="list-style-type: none">• Caller's number is not displayed!	<ul style="list-style-type: none">• Check your subscription with your network operator

Need help?

User Manual

Refer to the User Manual that came with your SE745.

Online help

www.philips.com/support



- 1 Connect
- 2 Install
- 3 Enjoy

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2007 © Koninklijke Philips Electronics N.V. All rights reserved.
www.philips.com



3111 285 38641
Printed in China

PHILIPS

What's in the box



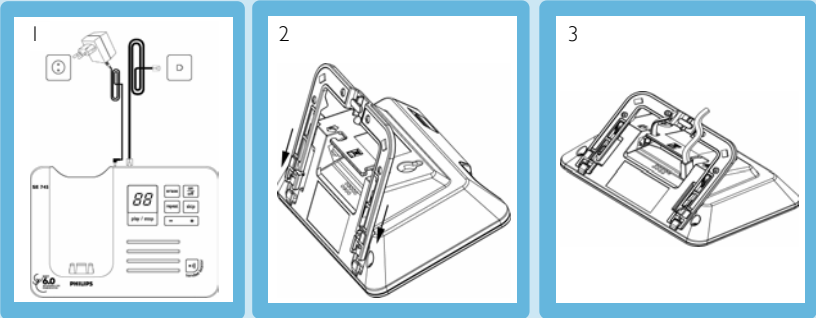 
*You may find in the box the line adaptor delivered separately from the line cable. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket. In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

WARNING Always use the cables and batteries that came with your phone.

1 Connect

Connect the base station

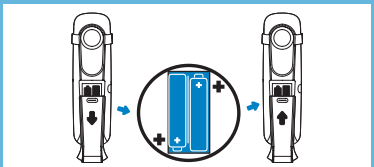
1. Place the base station in a central location near the telephone line socket and electricity socket.
2. Place the base station face down so that you can see the bottom of the base station. Attach the base support to your base station by fitting the tabs of the base support into the corresponding slots on the base unit. Push into place until a click sound is heard.
3. Connect the line cord and the power cable to their corresponding connectors at the bottom of the base station as shown.
4. Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.



2 Install

Insert rechargeable batteries and charge

Insert batteries



Charge handset for 24 hours



Configure your phone (if necessary)

After charging your phone for a few minutes, a Welcome screen may appear depending on the country where you live. If the Welcome screen appears:

1. Scroll \uparrow/\downarrow to the word WELCOME in your preferred language and press \square SELECT to confirm your selection.
2. Scroll \uparrow/\downarrow to your country and press \square SELECT to confirm your selection.
3. Press \uparrow/\downarrow to your operator (if necessary) and press \square SELECT again to confirm your selection.

Set date and time

1. Press \square MENU in idle mode, scroll \uparrow/\downarrow to **Clock & Alarm** and press \square SELECT, press \square SELECT again to enter **Set Date/Time**.
 2. Enter the current time (HH:MM) and current date (DD/MM/YY) and press \square OK.
- A validation tone is emitted and your phone is now ready for use.

3 Enjoy

Make a call

Dial the number and press \square key.

OR

Press \square key to take the line and dial the number.

Answer a call

When the phone rings, press \square key.

End a call

To end a conversation, press \square key.

Adjust earpiece volume

During a call, press \uparrow/\downarrow to select from **Volume 1** to **Volume 5**.

Set the ring melody

1. Press \square MENU in idle mode, scroll \uparrow/\downarrow to **Personal Set** and press \square SELECT, press \square SELECT to enter **Handset Tones**, scroll \uparrow/\downarrow to **Ring Melody** and press \square SELECT.
 2. Scroll \uparrow/\downarrow to your desired melody to play the melody.
 3. Press \square SELECT to set the ring melody.
- A validation tone is emitted and the screen returns to previous menu.

Store a contact in the phonebook

1. Press \square MENU in idle mode, scroll \uparrow/\downarrow to **Phonebook** and press \square SELECT, press \square SELECT to enter **New Entry**.
 2. Enter the name of the contact (maximum 14 characters) and press \square OK.
 3. Enter the phone number and press \square OK.
 4. Scroll \uparrow/\downarrow to choose a group (<No Group>, <Group A>, <Group B>, <Group C>) and press \square SELECT.
- A validation tone is emitted.

Access the phonebook

1. Press \square in idle mode and scroll \uparrow/\downarrow to browse the phonebook.
2. To view the details of a phonebook entry, scroll \uparrow/\downarrow to the phonebook entry and press \square VIEW.
3. To dial a number from the phonebook, scroll \uparrow/\downarrow to the phonebook entry and press \square .