

Quick start guide



 
Step A *Connect*

Step B *Setup*




Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

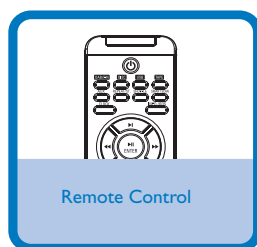

   
Pull out the plastic protective sheet before use.

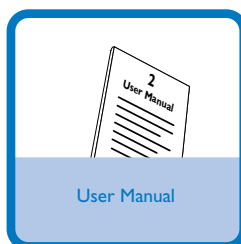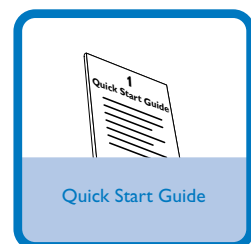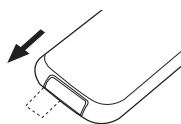

Step A *Connect*

1 Connect the speaker cables.

 2 Connect the power cord of the system..

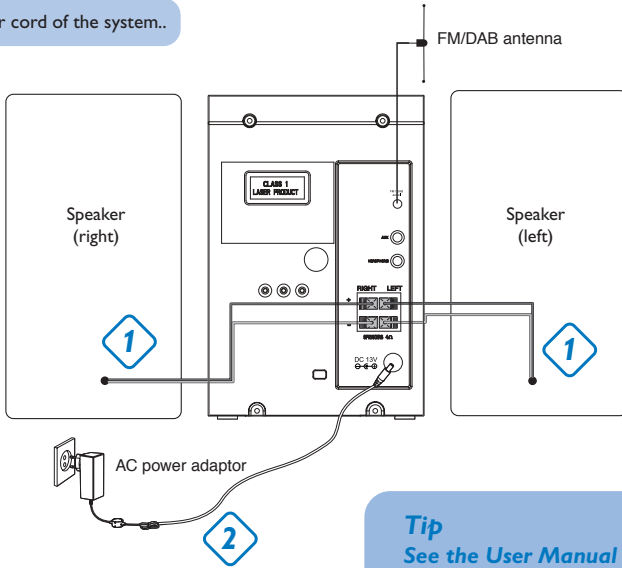

Tip
See the User Manual for how to connect other equipment to this system.

Step B *Setup*

 
Setting the clock

1 In standby or active mode, press **CLOCK** on the remote.

2 When the hour digits flash, press **TUNING** (◀▶) on the front panel (or ◀ / ▶ on the remote control) to set the hours.

3 Press **CLOCK** again and the minute digits flash. Then press **TUNING** (◀▶) or ◀ / ▶ again to set the minutes.

4 Press **CLOCK** again to confirm the time setting.

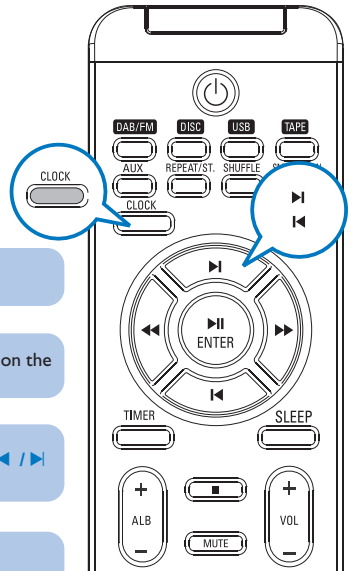

Playing a disc

1

Press **SOURCE** on the front panel to select CD or press **DISC** on the remote control.

2

Press **OPEN/CLOSE** ▲ to open the CD compartment.

3


Insert a disc with the printed side facing up. Press **OPEN/CLOSE** ▲ again to close the compartment.

4

Press ►|| to start playback.

5

 To stop playback, press ■.

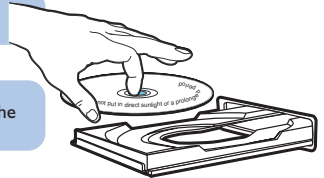


Tip

See the *User Manual* for detailed playback operations.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

 1

Insert the USB device's USB plug into the socket  on the set.

2

Press **SOURCE** once or more (or **USB** on the remote control) to select USB.

3

 
Play the USB's audio files as you do with the albums/tracks on a CD.

Programming and tuning to radio stations

1 Press **SOURCE** on the front panel repeatedly (or **DAB/FM** on the remote control) to select the tuner source.

2 Press **PROGRAM** for more than two seconds to program all available stations.

3 Press **ALBUM/PRESET** ▼ or ▲ (or ◀ / ▶ on the remote control) until the desired preset station is displayed.

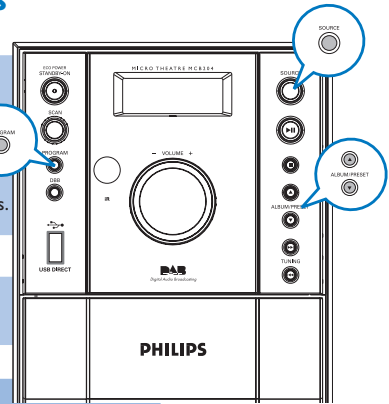

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Tuning to DAB stations

1 Press **SOURCE** on the front panel to select DAB (or press **DAB/FM** on the remote control) to start automatic search for available DAB stations.

2 Press and hold **SCAN** on the front panel (or **SMART SCAN** on the remote control) to scan all band III frequencies.

3 At the completion of full scan, press ◀◀▶▶ on the front panel or press ◀ / ▶ on the remote control to select your desired DAB channels.

4 Press **ENTER/▶ II** to confirm and tune to your selected channel.

Tips

- If the reception is poor, hang up one end of the T-shape FM/DAB antenna and keep the other end at horizontal angle to it.
- See the User Manuals for detailed instructions on DAB operations.

