 


Register your product and get support at

www.philips.com/support

M345

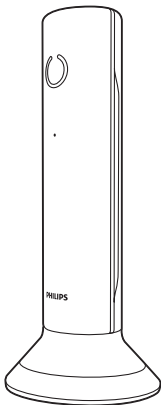

Short user manual

PHILIPS

Important safety instructions











Warning





- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.
- Refer to safety information before using the product.
- Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.
- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Do not allow the product to come into contact with liquids.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid hearing damage.

1 Overview



 







In call

-  Phonebook
-  Access the redial list.
-  Adjust the volume.
-  Recall (network dependent).
-  End calls.
-  Enter a pause (press and hold).
-  Turn the speaker on/off.
-  Mute/unmute the microphone.




In menu

-  Confirm / Select / Enter the option menu.
-  Cancel / back
-  Up / down
-  Exit menu.

Standby

 
-  Access the main menu.
-  Access the redial list. / Switch the ambient light on/off (press and hold).
-  Phonebook
-  Call log
-  Make and receive calls.
-  Switch the handset on/off (press and hold).
-  Make intercom call (press and hold).
-  Lock/unlock the keypad (press and hold).
-  Make and receive calls through the speaker.
-  Listen to new message from the answer machine. / Access the answer machine menu.

In text input




 


 


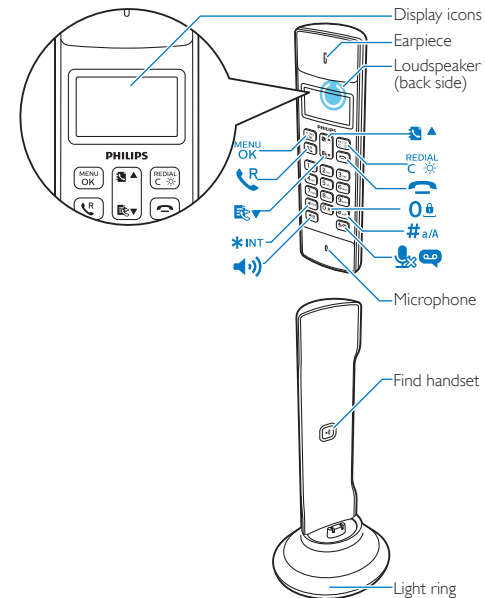 




-  Delete text.
-  Enter a space.
-  Switch upper/lower case (press and hold).

Light ring

 
Standby	White / blue / purple
Incoming call	Flashing green
On a call	Green
Notifications (missed calls, new voice mails, new incoming messages etc.)	Flashing red
Alarm	Flashing amber



Display icons

-  It displays the connection between the handset and the base. The more bars are shown, the better the signal strength is.
-  It remains steadily on when browsing incoming calls in the call log.
-  It indicates an outgoing call in the redial list.
-  It flashes when there is a new missed call or when browsing new missed calls. It remains steadily on when browsing the missed calls in call log that are already read.
-  It flashes when receiving incoming call. It remains steadily on during a call.
-  The speaker is on.
-  The ringer is off.
-  The alarm is activated.
-  Answering machine: it flashes when there is a new message or when the memory is full. It remains steadily on when the telephone answering machine is turned on.
-  Voice messages indicator: flashes for new messages, is steady for reviewed messages. * This is network dependent
-  It is displayed when you scroll up/down a list or increase and decrease the volume.
-  There are more digits on the right. Press  to read.
-  The ECO+ mode is activated.

 
2 Connect

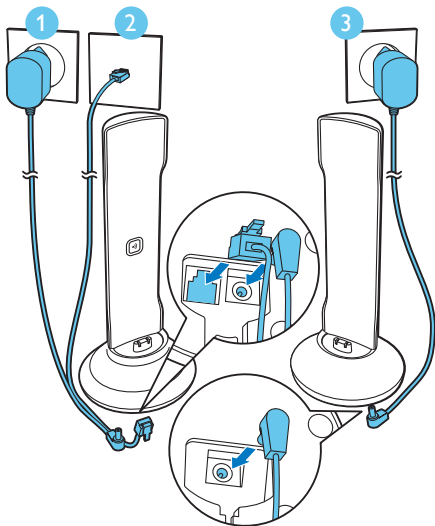



Multi-handset version only.

 
3 Get started

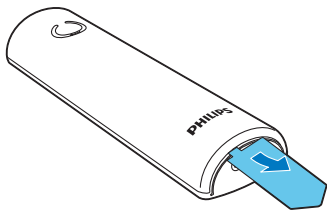Configure your phone



- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).
- 3 Set the country and language if prompted.
- 4 Set the date and time.
 - If the time is in 12-hour format, press  /  to select **[am]** or **[pm]** (country dependent).


Charge your phone

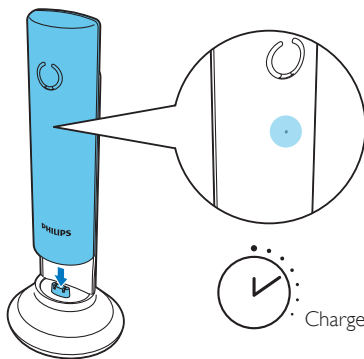

 > 70%

 40% - 70%

 10% - 40%

 Flashing: low battery

4 Enjoy

Phonebook

Add record

- 1 Press .
- 2 Select **[Phonebook]** > **[Add new]**.
- 3 Follow on-screen instructions.

Call from the phonebook

- 1 Press .
- 2 Select a record and press .

Direct access memory

You have 2 direct access memories (Keys 1 and 2). To dial the saved phone number automatically, press and hold on the keys in standby mode. Depending on your country, keys 1 and 2 are preset to the voice mail number and information service number of your service provider respectively. (network dependent).

Call log

Call from the call log

- 1 Press .
- 2 Select a record and press .

View record

Press  >  > **[View]**.

Save record

- 1 Press  >  > **[Save number]**.
- 2 Follow on-screen instructions.

Delete record

- 1 Press  >  > **[Delete]**.
- 2 Follow on-screen instructions.

Redial list

Call from the redial list

- 1 Press .
- 2 Select a record and press .

Save record

- 1 Press  >  > **[Save number]**.
- 2 Follow on-screen instructions.

Delete record

- 1 Press  >  > **[Delete]**.
- 2 Follow on-screen instructions.

Telephone answering machine (for M345 only)



Turn the answering machine on or off

- 1 Press  > **[Answ. Machine]** > **[On/off]**.
- 2 Follow on-screen instructions.

Listen to the incoming messages





Press  > **[Answ. Machine]** > **[Play]**.

Delete an incoming messages

- 1 When you listen to the message, press  to enter the options menu.
- 2 Select **[Delete]**, then press  to confirm.

Register additional handsets

You can register additional handsets to the base station.

- 1 Press .
- 2 Select **[Services]** > **[Register]**, then press  to confirm.
- 3 Press and hold  on the base station for 10 seconds.
- 4 Enter the system PIN/passcode (0000).
- 5 Press  to confirm the PIN/passcode.
→ Registration is complete in less than 2 minutes.

Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Press .
- 2 Select **[Services]** > **[Reset]**, then press  to confirm.
- 3 Follow on-screen instructions.



Note

- You may recall the original PIN/passcode by following this procedure.



Technical data

Battery

- Philips: 2 x AAA NiMH 1.2 V Rechargeable 550 mAh batteries

Use only the supplied batteries.

Adapter (base and charger)

	Input:	Output:
MEIC:	100-240 V~	6 Vdc
MN-A102-U130	50/60 Hz 200 mA	400 mA
Tenpao:	100-240 V~	6 Vdc
S003IB0600040	50/60 Hz 150 mA	400 mA
P/N: R017886V-B		

Phonebook with 50 entries

Call log with 20 entries

Talk time: 16 hours

Standby time: 180 hours

RF output power: <24 dBm

Frequency Band: 1880 MHz ~ 1900 MHz



Note


- You can find the Declaration of Conformity on www.p4c.philips.com.

? Frequently asked questions

No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Unregistered]**, register your handset (see the section on “Register additional handsets”).



If I fail to pair (register) the additional handsets to the base station, what do I do?

Your base memory is full. Access  > **[Services]** > **[Unregister]** to unregister the unused handsets and try again.

My handset is in searching or unavailable status, what do I do?

- Make sure that the base station has power supply.
- Register the handset to the base station.
- Move the handset closer to the base station.

I have chosen a wrong language which I cannot read, what do I do?

- 1 Press  to go back to the standby screen.
- 2 Press  to access the main menu screen.
- 3 The following options will appear on the screen:

[Phone setup]	>	[Language]
[Réglages]	>	[Langue]
[Telefon-Setup]	>	[Sprache]
[Config. telef.]	>	[Lingua]

- 4 Select them to access the language options.
- 5 Select your own language.

I have chosen a wrong country in Welcome screen, what do I do?

Reset your phone settings to the original factory settings (see the section on “Restore default settings”).

I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

The handset on the charger does not charge or the battery discharges too fast.

 
- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. If the docking tone is turned on, you can hear the docking tone when you place the handset on the charging cradle.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- The battery is not fully recharged. Leave the handset on the charging cradle for at least 8 hours or until the battery icon on the handset stops scrolling and indicates full bar.
- The batteries are old or defective. Purchase and replace with new rechargeable batteries with the same specifications.

Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.
- The phone receives interference from the DSL (digital subscriber line) connection. Install a DSL filter to prevent the noise. Contact your service provider for the DSL filter.

The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

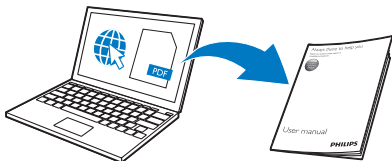

www.philips.com/support

To access the user instructions online, use the reference model number written on the product label at the bottom of the base station.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license from Koninklijke Philips N.V.



UMS_M345
05_EN_V2.0
WK17124