



AZ1316




PHILIPS

## 1 Choosing Power Supply

a Connect the AC power cord to the **AC Mains** inlet and the wall socket.

-OR-

b Open the **battery door** and insert 6 x C batteries (not included).

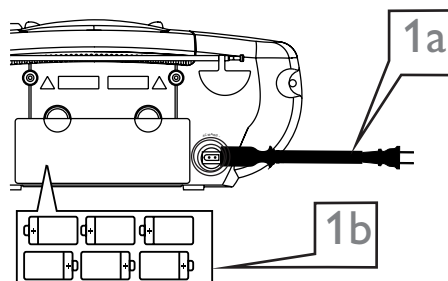

R-14, UM-2 or C-cells  
(not included)

## 2 Listening to the Radio

- a Push the **source selector** to **AM** or **FM**.
- b Press and hold **PROG** until **Auto** flashes.
- Available stations are programmed.
- c Press **ALBUM/ PRESET -, +** (on the remote control ▲, ▼) until the desired preset station is displayed.

## 3 Playing a disc

This player plays Audio Discs including CD-R/CD-RW, and MP3-CD.

**IMPORTANT:** For a disc with CD Audio tracks and MP3 files, the MP3 files may be unplayable, depending on the encoding software..

- a Adjust the **source selector** to **CD/MP3**.
- b Press **OPEN•CLOSE** to open the disc door.
- c Insert a disc with the printed side facing up and close the door.
- d Press **▶||** to start playback.
- e To stop disc playback, press **■**.

## 4 Playing a tape

- a Adjust the **source selector** to **TAPE/OFF**.
- b Press **■▲** to open the cassette holder.
- c Insert a cassette and close the door.
- d Press **◀** to start playback.
- e To stop the tape, press **■▲**.

**Telescopic antenna**  
Improves FM reception.

**Source selector**  
Slide to select function:  
CD/MP3, radio (AM, FM) or tape.

**⏮ ⏭**  
Skips & searches CD tracks backwards/ forwards;  
Tunes to radio stations (down/up).

**DBB**  
Press to turn the bass enhancement on/off.

**▶||**  
Press to start or pause disc playback.

**■**  
Press to stop disc playback or erase a disc program.

**Display**  
Shows disc functions

**CASSETTE RECORDER keys**  
Press to operate a tape.

**OPEN•CLOSE**  
Press to open/close the disc door.


**MODE**  
Press to select different play modes, such as REPEAT or SHUFFLE (random order)

**PROG**  
Use to program CD tracks or preset radio stations.

**VOL ▲, ▼**  
Press to adjust volume level.

**ALBUM/ PRESET -, +**  
Press to select an album. (MP3 only);  
Press to select a preset radio station.

## REMOTE CONTROL

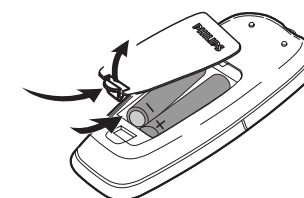

Insert 2 batteries, type **AAA, R03** or **UM4** (not included)

