






Register your product and get support at
www.philips.com/welcome

HTS3231




Quick Start

     
PHILIPS

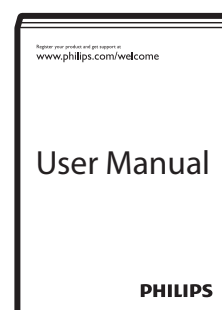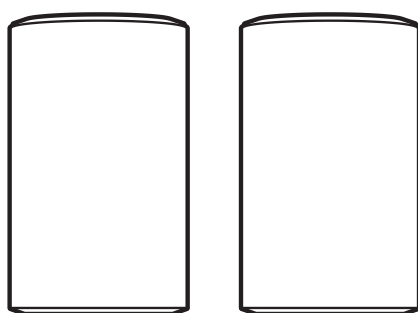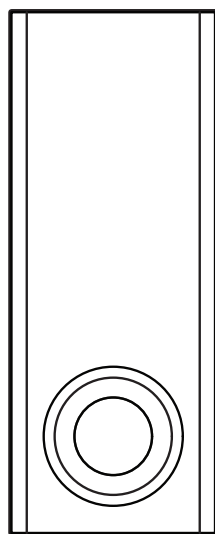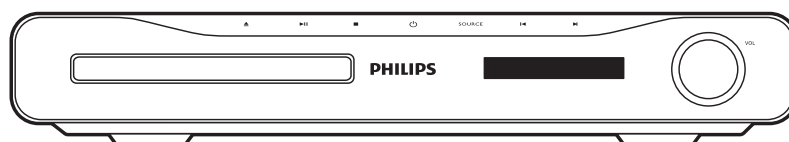

FM Antenna

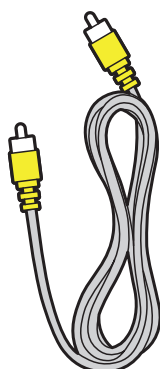 


Video Cable

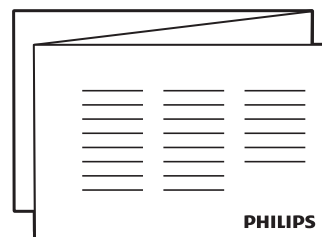 


1


 
①



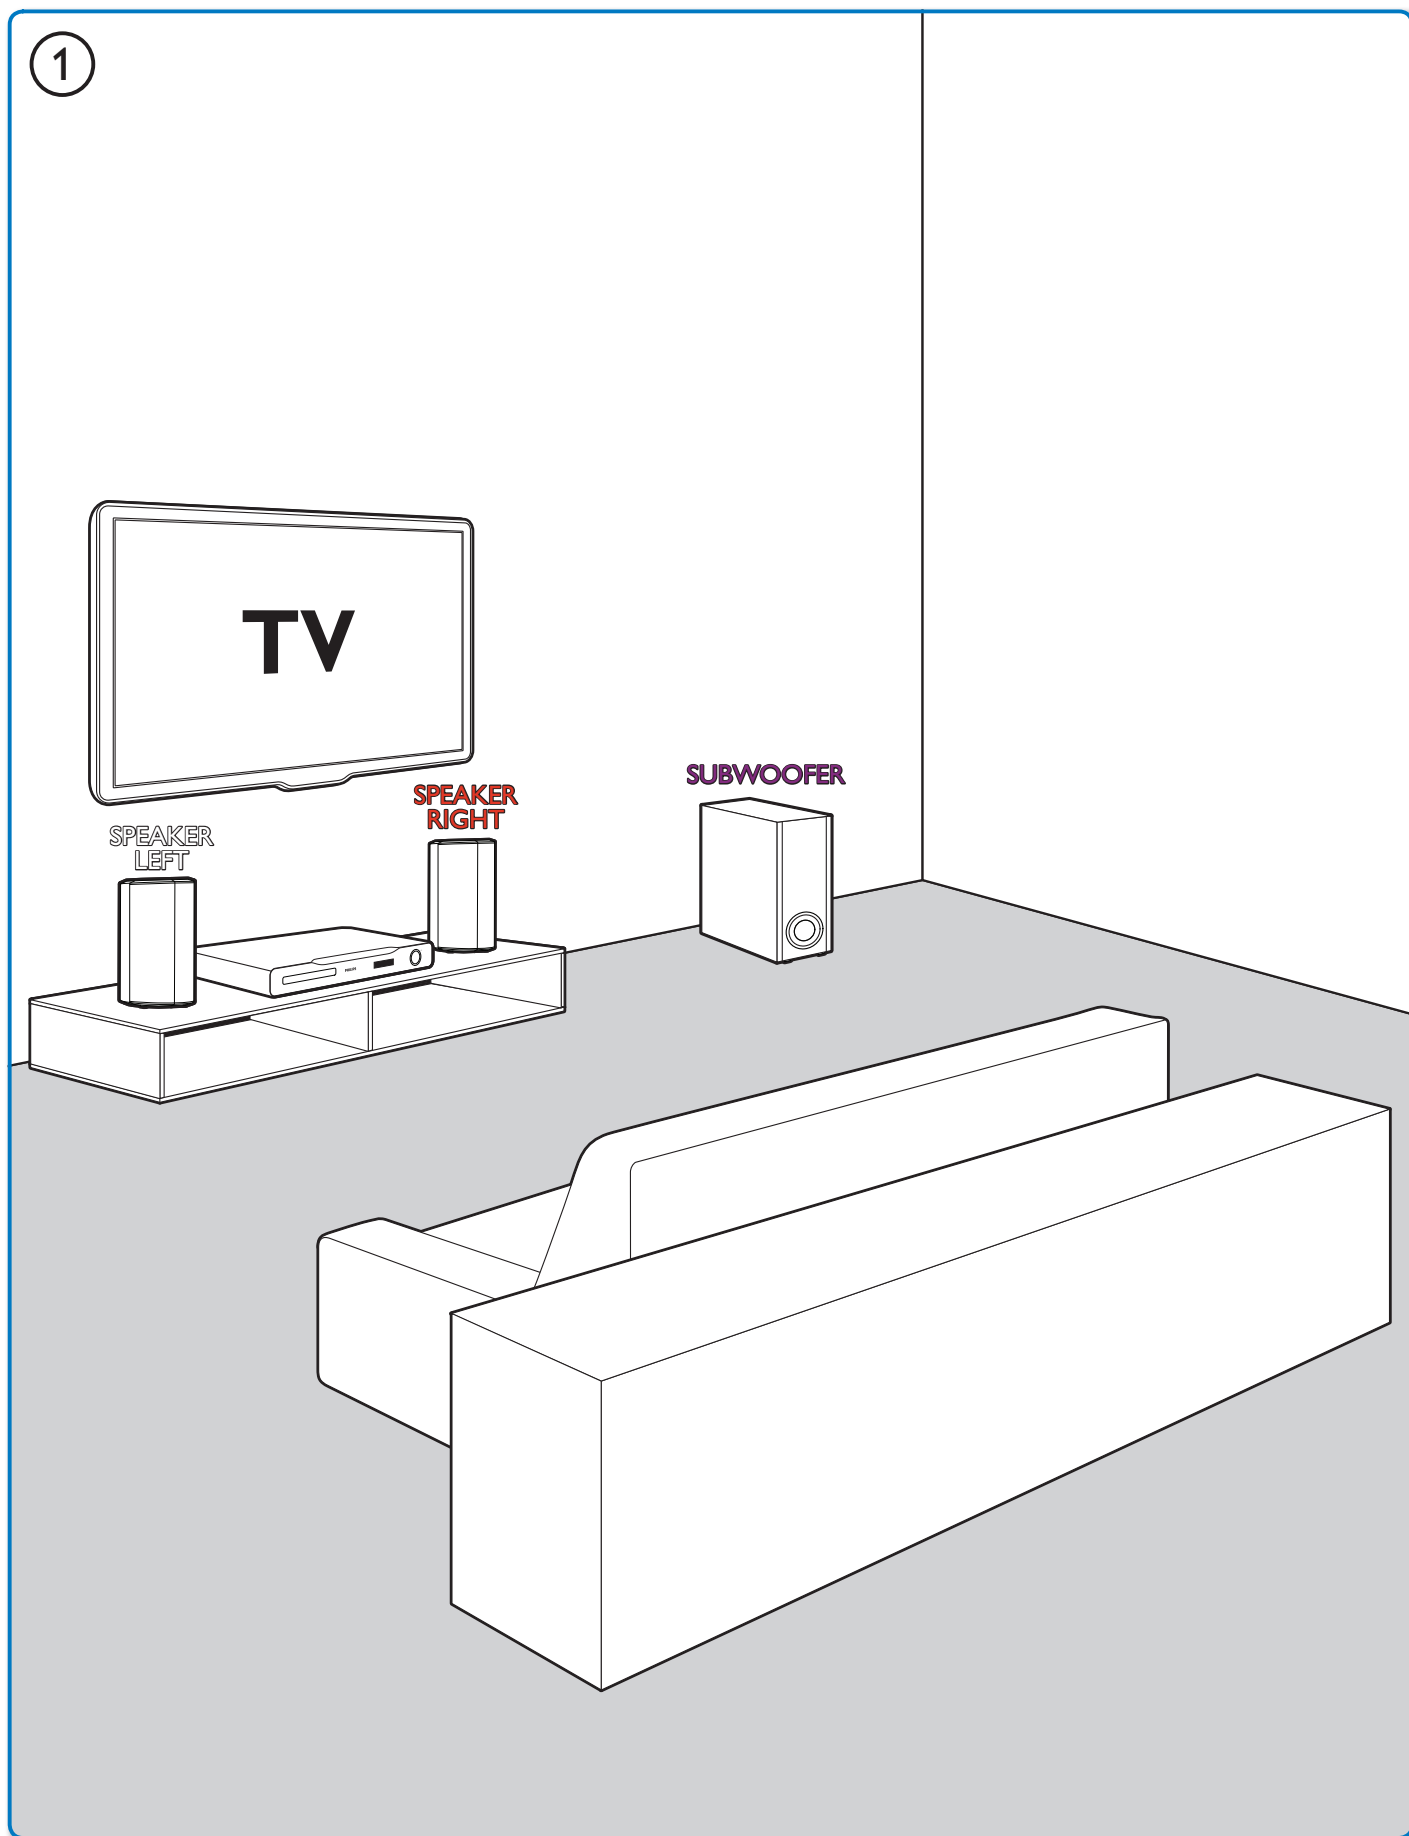


2

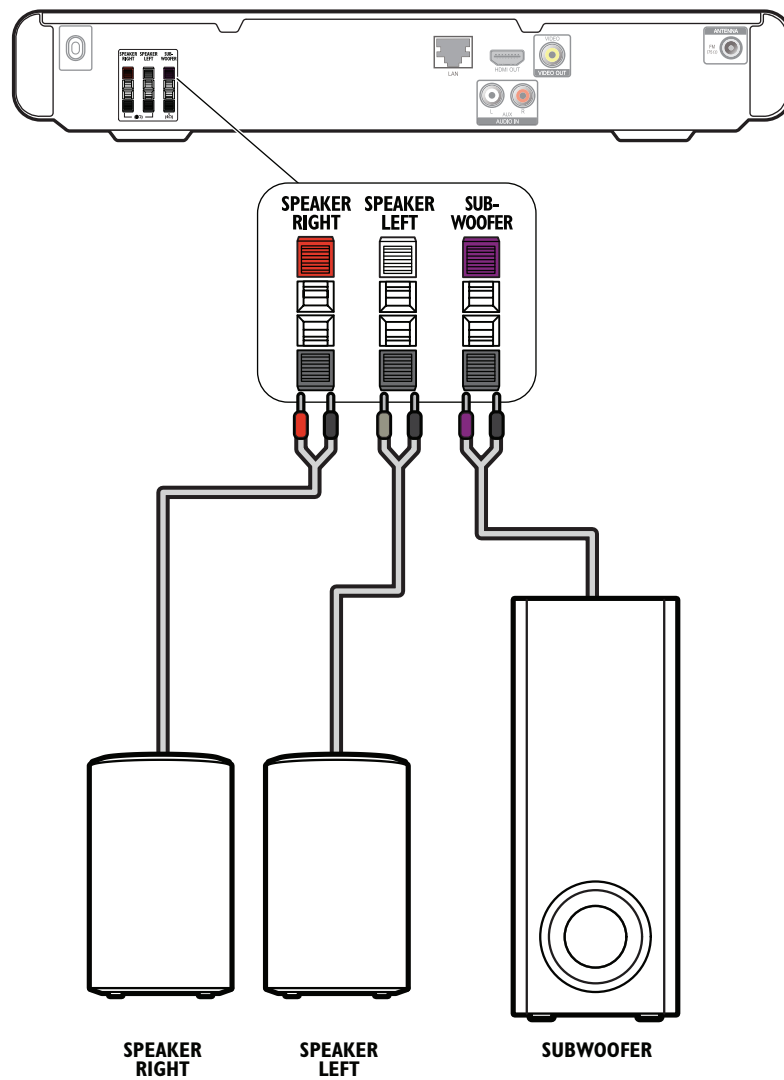 


3

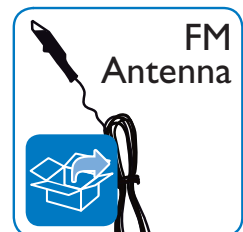 
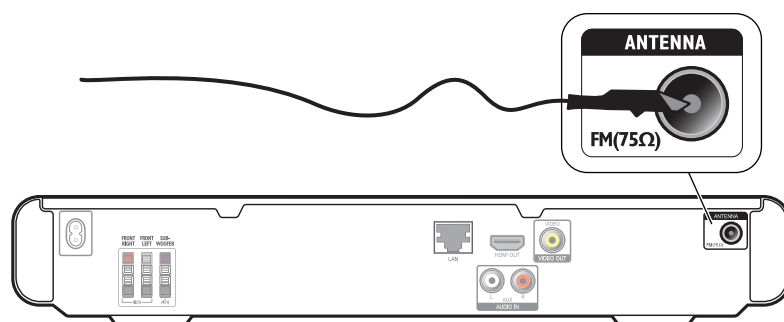 


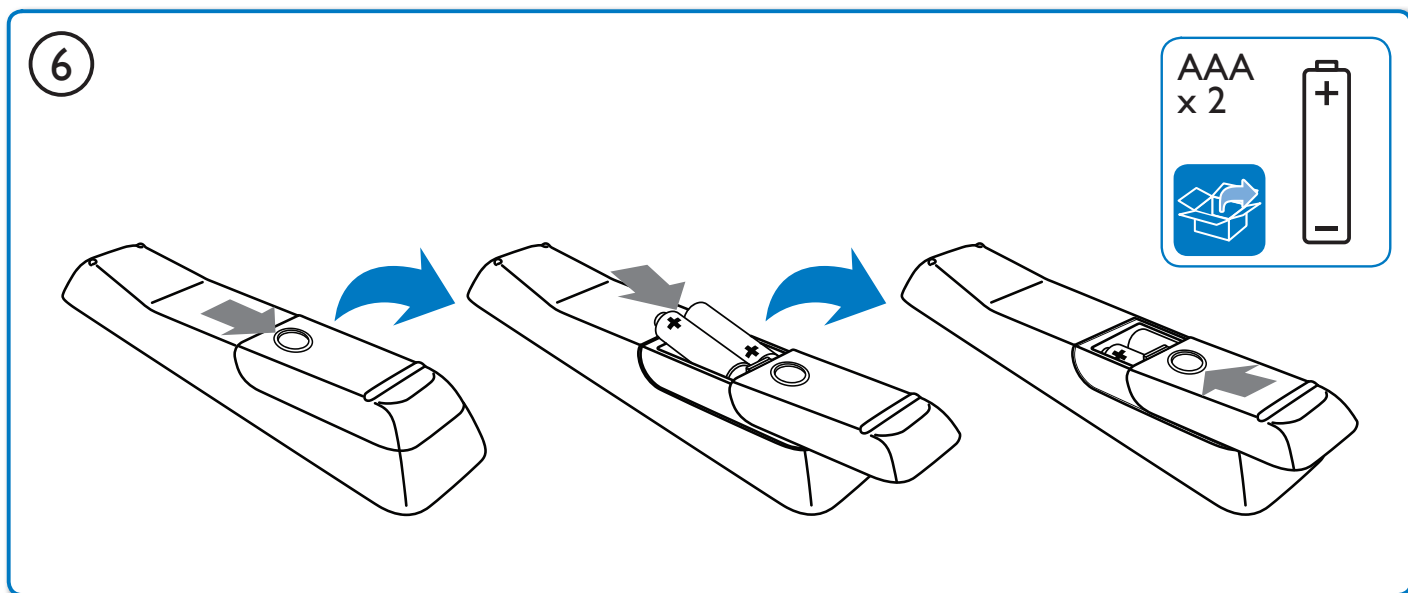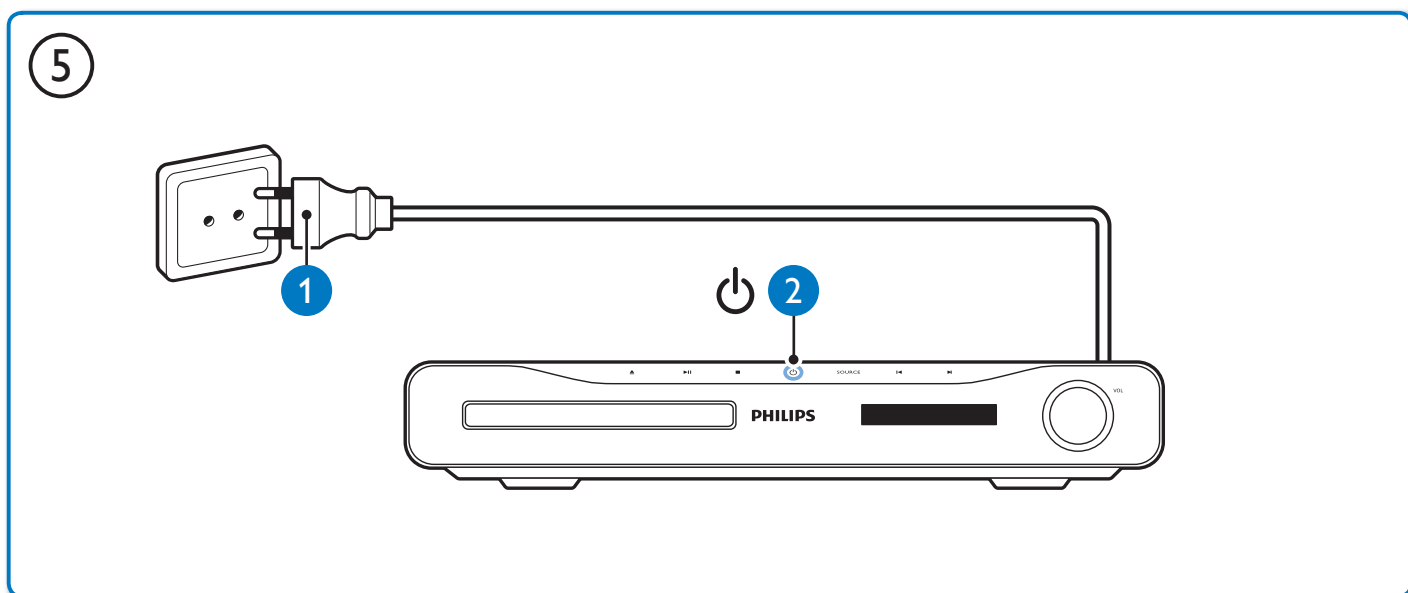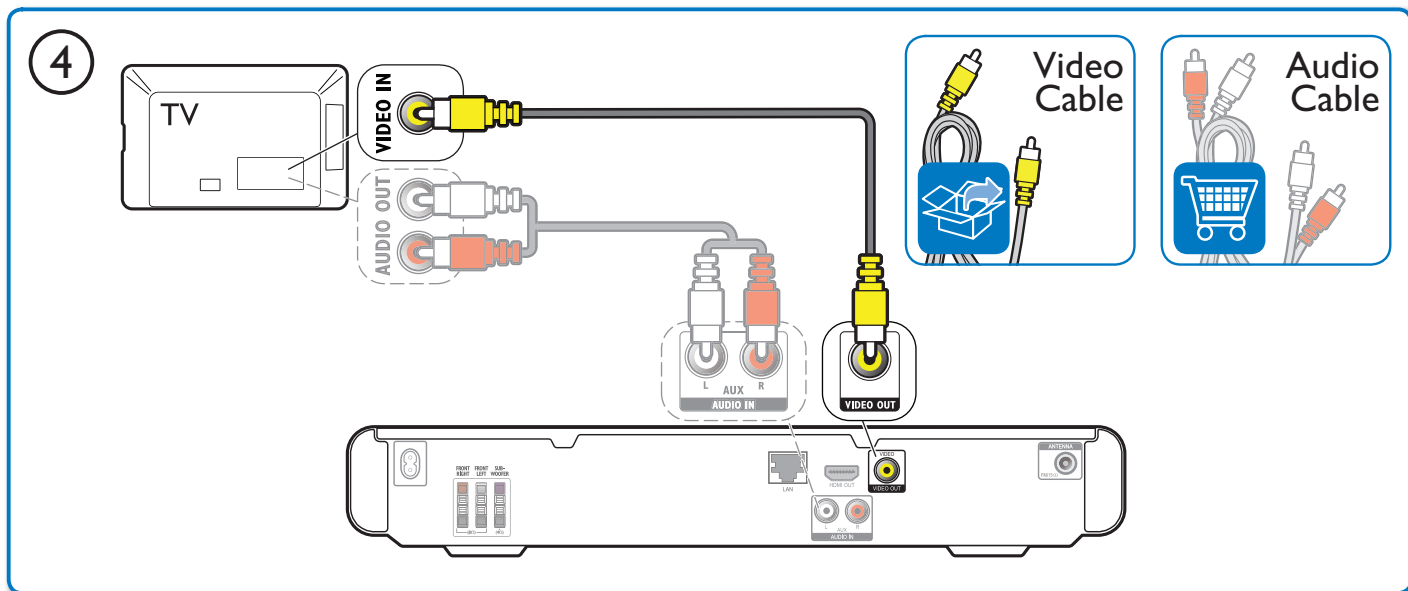   

2

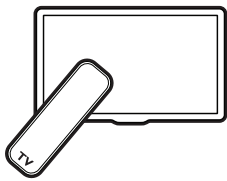 


1

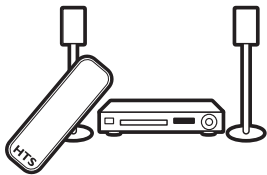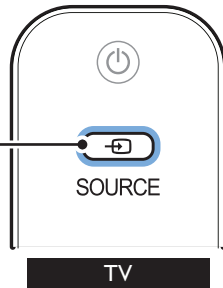  


2

3

 4

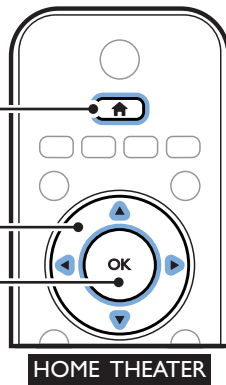


HOME THEATER

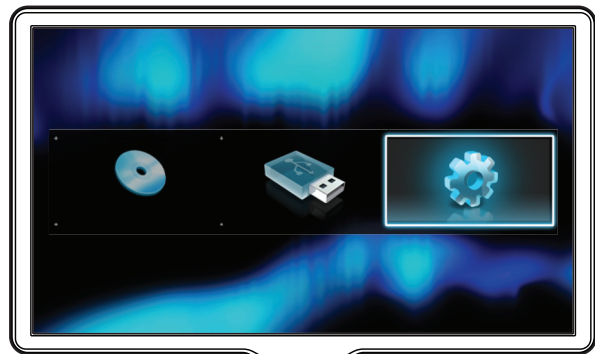 

5

 6

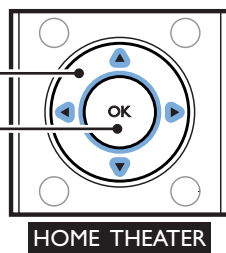


HOME THEATER

Video Setup	Menu Language	English
Audio Setup	Audio	•
Network Setup	Subtitle	•
EasyLink Setup	Disc Menu	•
Preference Setup	Parental Control	•
Advanced Setup	Screen Saver	•
	Auto Subtitle Shift	•
	Change Password	•

7

 8


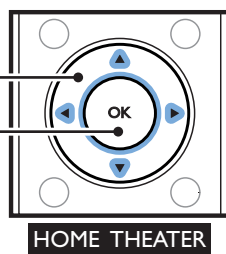


HOME THEATER



Menu Language	Auto (ENG)
Audio	English
Subtitle	Čestina
Disc Menu	Dansk
Parental Control	Deutsch
Screen Saver	Español
Auto Subtitle Shift	Français
Change Password	Italiano

3

  DISC

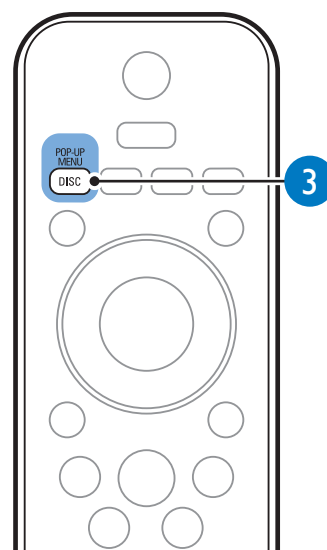
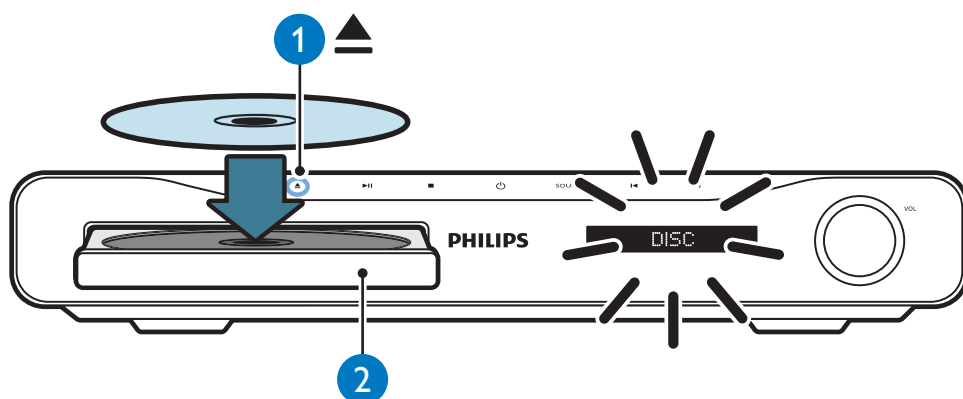


FM



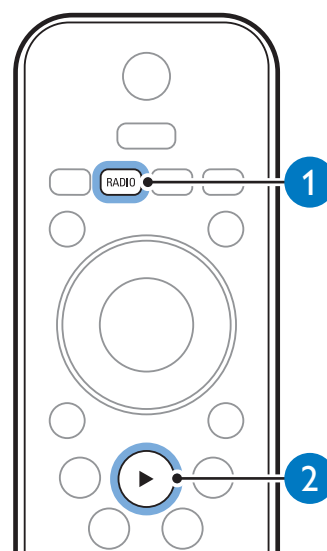 
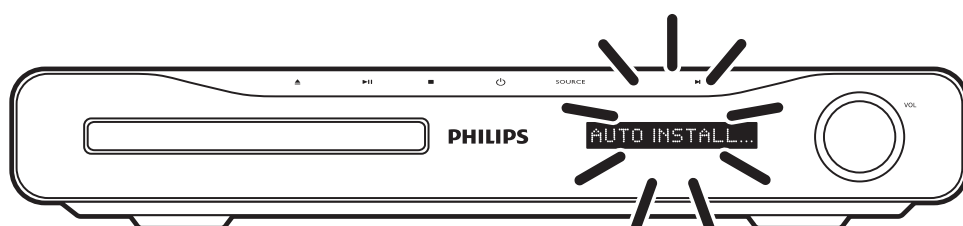 




MP3

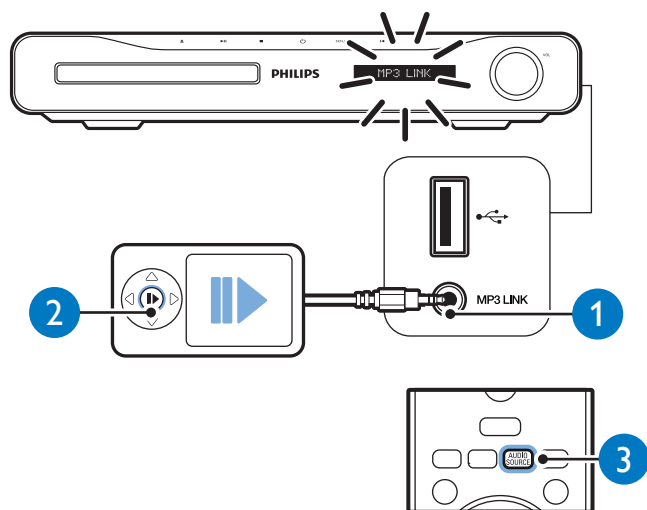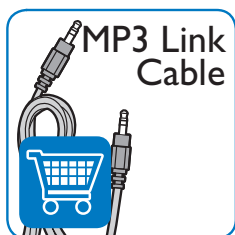  

USB

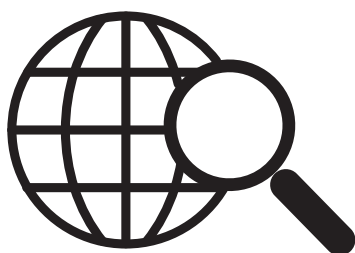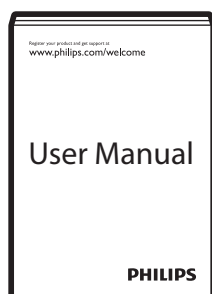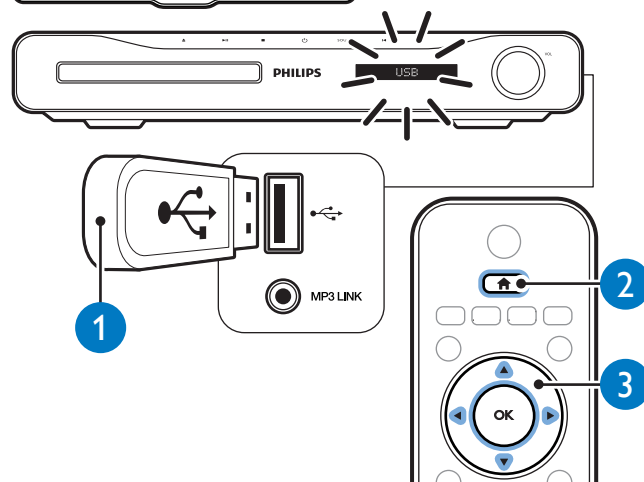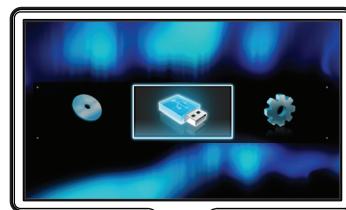    

www.philips.com/support



Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V.
or their respective owners.
2010 © Koninklijke Philips Electronics N.V. All rights reserved.
sgsna_1052/12_v1



Be responsible
Respect copyrights

