

# Quick Start Guide



Step A *Connect*

Step B *Setup*


Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.




2 x AC power cable  
1 x power plug adaptor

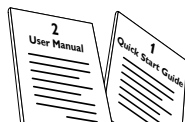

Quick Start Guide  
User Manual




Remote Control with 2  
AAA batteries

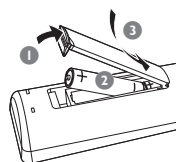

1 x MP3 link cable



 1 x FM wire antenna



1 x AM loop antenna



1 x DIN cable

**PHILIPS**

## Step A Connect


- 1 Connect the AM and FM antennas.
- 2 Connect the speaker cables.
- 3 Connect the subwoofer and the main unit with the supplied DIN cable.
- 4 Connect the supplied AC power cables to the main unit and the subwoofer.
- 5 To turn on or off the subwoofer, press **POWER** switch on the back of the subwoofer.

### Note

If your power supply voltage is 110V-127V, adjust the voltage selector (on the back of the main unit) to 110V-127V.

### Tip


See the User Manual on how to connect other equipment to this Mini Hi-Fi.

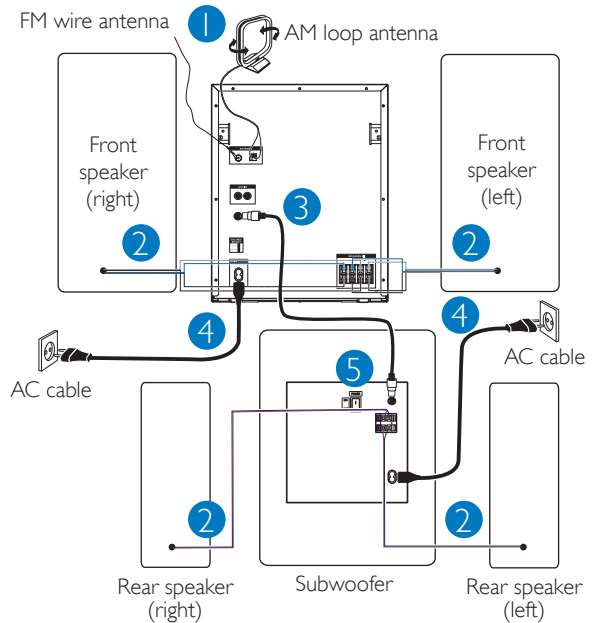

## Step B Setup

### Set clock


- 1 In the standby mode, press **PROG/CLOCK** (or **CLOCK** on the remote control) to activate the clock setting mode.  
→ The 12 hour or 24 hour format is displayed.
- 2 Press **ALBUM/PRESET +/-** (or **ALBUM +/-<< / >>**) on the remote control repeatedly to select 12 hour or 24 hour format.
- 3 Press **PROG/CLOCK** (or **CLOCK** on the remote control) again to confirm.  
→ The clock digits are displayed and begin to blink.
- 4 Press **ALBUM/PRESET +/-** (or **ALBUM +/-<< / >>**) on the remote control to set the hour.
- 5 Press **<< / >>** (or **TITLE +/- < / >**) on the remote control to set the minute.
- 6 Press **PROG/CLOCK** (or **CLOCK** on the remote control) to confirm.

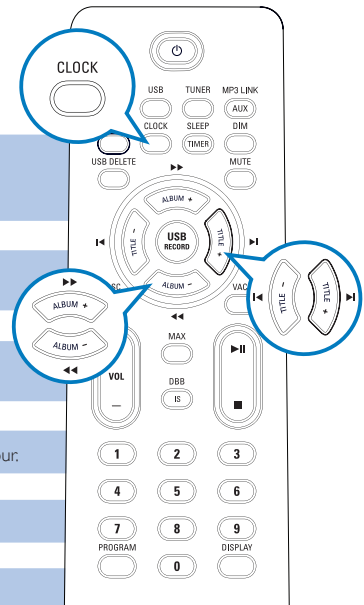

# Step C Enjoy


## Play disc

- 1 Press **DISC 1/2/3** (or **CD 1/2/3** on the remote control) to select the disc source.
- 2 Press **OPEN/CLOSE** on the main unit to open the disc compartment.
- 3 Load up to two discs on the disc trays, with the printed side facing up  
→ To load the third disc, press **DISC CHANGE** on the main unit to rotate to the disc tray.
- 4 Press **OPEN/CLOSE** to close the disc compartment.
- 5 Press **▶||** to start play.
- 6 To stop play, press **■**.  
To select a disc, press **DISC 1/2/3** (or **CD 1/2/3** on the remote control).

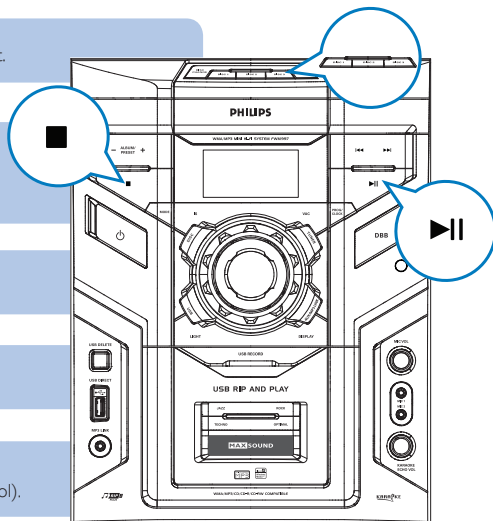


## Listen to radio

- 1 Press **TUNER** repeatedly to select FM or AM.
- 2 Press **PROG/CLOCK** (or **PROGRAM** on the remote control) for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET +/-** (or **TITLE+/-** ◀▶ on the remote control) to select a preset number.

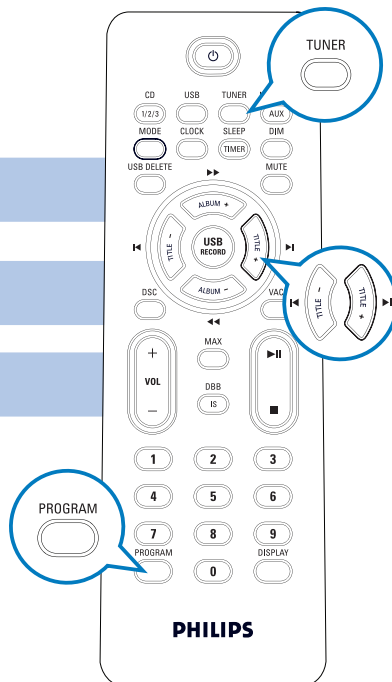



## Play USB

With this Mini Hi-Fi, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Mini Hi-Fi).

- 1 Insert the USB device's USB plug into the socket  on the main unit.
- 2 Press **USB** to select the USB source.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

## USB record

- 1 Insert the USB device's USB plug into the socket  on the main unit.
- 2 Prepare the source to record from.
- 3 Press **USB RECORD** to start recording.
- 4 To stop recording, press .

**Tip**  
*Detailed play features and additional functions are described in the supplied user manual.*



© Royal Philips Electronics N.V. 2008  
All rights reserved.

<http://www.philips.com>

