

## 4 帮助

设备未启动



长按10秒重启

详情请参阅用户手册中的支持信息



Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited, or one of its affiliates, and MMD Hong Kong Holding Limited, is the warrantor in relation to this product.


SA7200\_93\_UM\_V1.0



PHILIPS


MP3播放器  
SA7200

## 快速入门指南

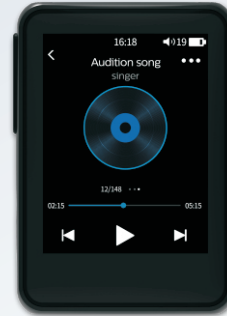

注册您的产品，并在获得支持  
[www.philips.com/support](http://www.philips.com/support)

## 打开包装

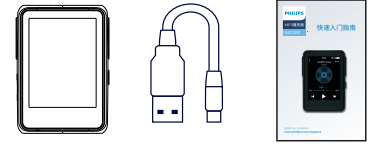

## 插卡设计




电脑规格/PC requirements

兼容/Compatible with

Windows 7/8/10/Mac OS

## 1 安装

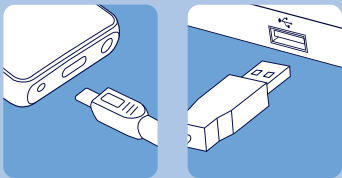

## 2 传输




如果找不到“飞利浦”文件夹：

1. 检查电脑USB接口是否正常工作，
2. 检查电脑操作系统是否支持，
3. 拔出设备重新插入。

注：如果以上操作均无效果请联系产品售后，我们竭诚为您服务！

## 3 使用

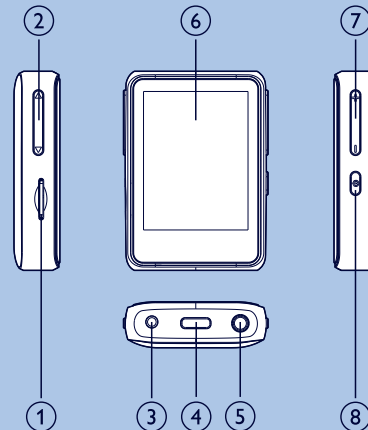

①	TF卡插口
②	上一曲/下一曲
③	2.5mm耳机插口
④	充电或传输数据
⑤	3.5mm耳机插口
⑥	触摸屏
⑦	音量加/减
⑧	长按开关机，开机状态下，短按锁屏/亮屏