

Register your product and get support at
www.philips.com/welcome

CED229



English	3
Español	23

Português do Brasil	49
---------------------	----

PHILIPS

Contents

1 Important	4
--------------------	---

2 Your car audio system	5
Introduction	5

3 Play	6
Load and eject discs	6
Insert and remove USB device	7
Insert and remove SD/MMC card	7
Skip/search	7
Intro play	8
Repeat play	8
Random play	9
Select Language	9
Dynamic Bass Boost	9
MAX sound	10
Zoom	10

4 Radio	11
Select tuner sensitivity	11
Manual tune to a radio station	11
Auto tune to a radio station	12
Store stations manually	12
Store stations automatically	12
Select the preset station	12
Select stereo or mono broadcasting	12

5 System settings	13
Adjust general settings	13
Select DVD video settings	13
Select language settings	14
Adjust radio settings	14

6 Other settings	15
Select equalizer settings	15
Control zone settings	15
Other sound settings	16
Select Video Output format	16
Turn on or off the screen backlight	16
Reset	16
Replace fuse	17

7 Product information	18
General	18
Disc player	18
Tuner	18
LCD	18
Compatible USB devices	18
Supported formats	18
Unsupported formats	19

8 Troubleshooting	20
--------------------------	----

9 Notice	21
-----------------	----

1 Important

- Read and understand all instructions before you use the apparatus. If damage is caused by failure to follow instructions, the warranty does not apply.
- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.
- This unit is designed for negative ground (earth) 12 V DC operation only.
- To reduce the risk of traffic accident, do not watch video during driving.
- To ensure safe driving, adjust the volume to a safe and comfortable level.
- Improper fuses can cause damage or fire. When you need to change the fuse, consult a professional.
- Use only the supplied mounting hardware for a safe and secure installation.
- To avoid short circuit, do not expose the apparatus, remote control or remote control batteries to rain or water.
- Never insert objects into the ventilation slots or other openings on the apparatus.
- Never place any objects other than discs into the disc tray/slot.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Risk of damage to the screen! Never touch, push, rub or strike the screen with any object.
- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.
- Clean the apparatus with soft, damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the apparatus.

2 Your car audio system

Congratulations on your purchase, and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.Philips.com/welcome.

Read this user manual carefully before you install and use the unit. Save it for future reference.

Introduction

With the in-car audio system, you can enjoy your drive while you listen to:

- FM or AM (MW) radio
- Audio from a USB drive, a SD/SDHC card, external devices.
- Music CDs
- DVD and VCD video

3 Play

Make sure that the disc or device contains playable music or video.

Note

 
- For CDs recorded in multiple sessions, only the first session is played.
- Does not support MP3 Pro audio format.
- It may not support and display special characters track name (ID3) or album name properly.
- It cannot play some WMA is protected by Digital Rights Management (DRM).
- The system does not display or play the folders or files that exceed the supporting limit.

Warning

 
- To reduce the risk of traffic accident, do not watch video during driving.


Load and eject discs

- 1 Press  to open the front panel.

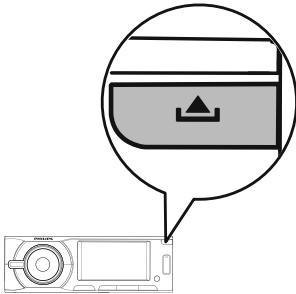




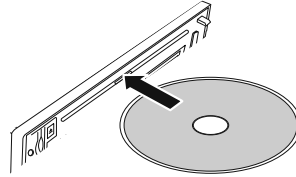


- 2 Insert the disc into the disc slot with label side facing up.
↳ Play resumes from the point where it was last stopped.



 
- 3 To remove the disc, press the  button.
↳ When the disc is ejected, the unit switches to TUNER mode automatically.

 - 4 Close the front panel.
↳ After a few seconds, the screen illuminates.


- For video discs, press  or  to select an item, then press  to start playing.
- For discs that contain MP3s, WMAs, or JPEGs, press  or  to select a folder, track or picture. Press  to start playing.

Tip

- If the disc is blocked in the disc compartment, press and hold the  button until the disc comes out.


Insert and remove USB device

 - 1 Slide down the USB socket cover.

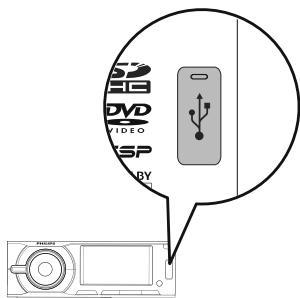

- 2 Insert the USB device into the USB socket.
↳ The unit starts playing from the USB device automatically.
- 3 To remove the USB device, press OK/MUTE to turn off the unit.
- 4 Remove the USB device.

 
- 2 Insert SD or SDHC card into the card slot.
↳ The unit starts playing from the SD/SDHC card automatically.

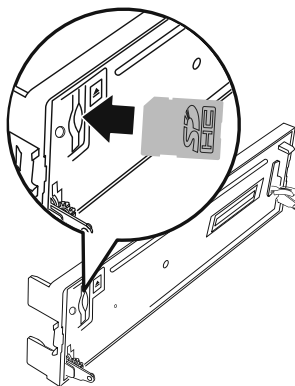

- 3 To remove the SD or SDHC card, press OK/MUTE to turn off the unit.
- 4 Press the card until you hear a click sound.
↳ The card is now disengaged.

Insert and remove SD/MMC card

 
- 1 Press to open the front panel.

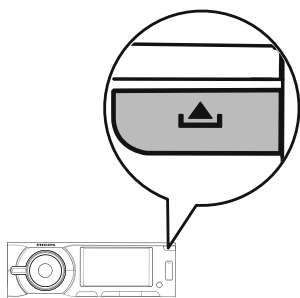


Skip/search

During video and audio disc play

 - To skip to a specified chapter or track, press the numeric buttons.

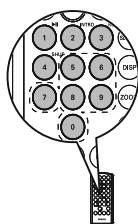

 
- To skip to the previous or next chapter or track, press **⏮** or **⏭**.

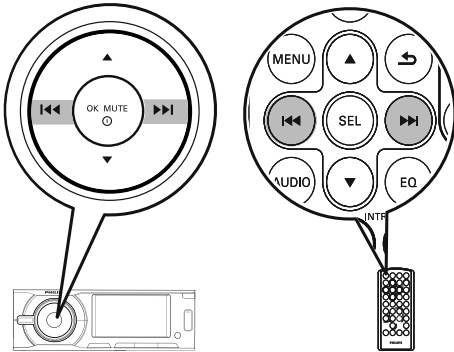

- To search backward or forward quickly, press **⏮** or **⏭** for 3 seconds.
- Press **1** **⏭** to resume normal play.

During MP3/WMA play

 
- To select a specific song folder, press **↶** twice to display the folder list. Press **▲** or **▼** to select, and then press **OK MUTE** to confirm.
- To select a specific track, press **▲** or **▼** within the folder. Press **OK MUTE** to confirm.
- To skip to a specified chapter or track, press the numeric buttons.

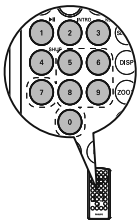

Intro play

This feature plays the first 10 seconds of each audio track.

 
Press the **INTRO 2** button to enable and disable this function.

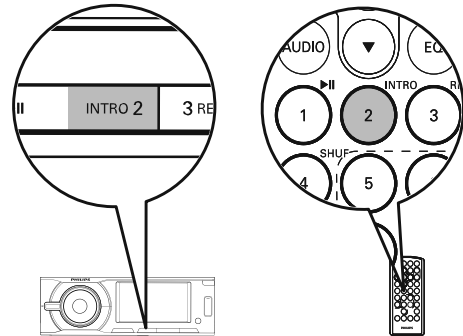

Repeat play

There are 3 standard modes of repeat play for video, audio, and MP3/WMA.

 
Press the **3 REP** button repeatedly to select.

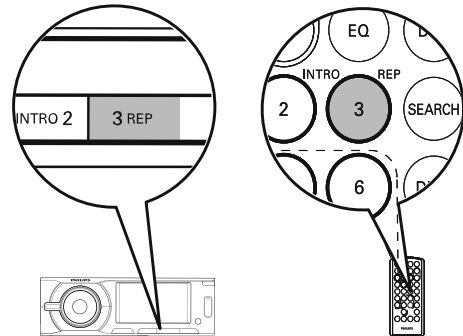

- [REP ONE]**: play the current chapter or track repeatedly.
- [REP DIR]**: play the current folder repeatedly.
- [REP ALL]**: play all chapters in the title or all tracks repeatedly.
- [REP CANCEL]**: cancel repeat play.

Random play

 
There are 3 standard modes of random play for audio and MP3/WMA. Press the **SHUF 4** button repeatedly to select.

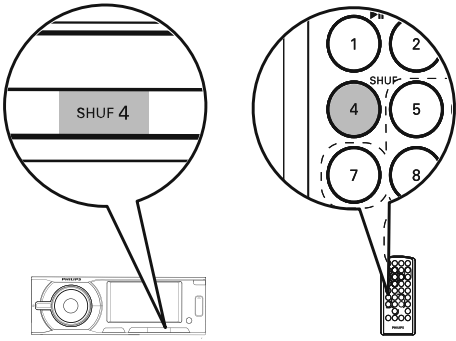

- **[SHUFFLE ALL]:** start random play for all tracks.
- **[SHUFFLE DIR]:** start random play in current folder.
- **[SHUFFLE OFF]:** cancel random play.


Select Language

 Subtitle
You can select the subtitle language if the DVD or DivX discs contain two or more subtitle languages. During play, press **SUBTITLE** on the remote control repeatedly until the language is selected.

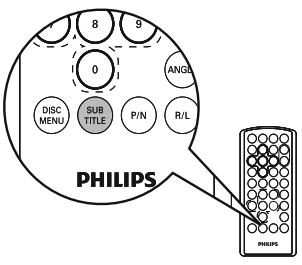


Audio

 You can select the audio language if the video discs contain two or more audio channels. During play, press **R/L** on the remote control repeatedly until the language is selected.

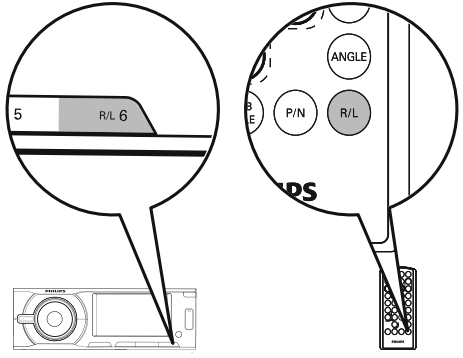


Dynamic Bass Boost

 - 1 Press **MAX SOUND / DBB** on the car audio system for 3 seconds or press **DBB** on the remote control.
 - ↳ **[DBB ON]:** The Dynamic Bass Boost (DBB) function is on.
 - ↳ **[DBB OFF]:** The DBB function is off.
- 2 Press **DBB** again to change the DBB setting.

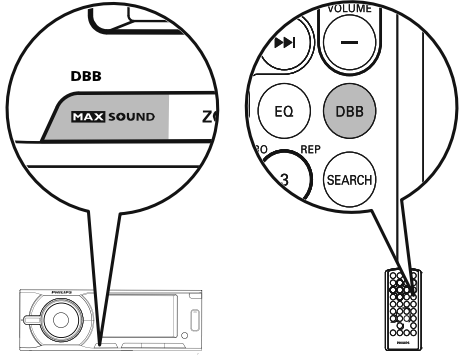

MAX sound

 
- 1 Press **MAX SOUND** / **DBB** to produce an instant boost in bass and maximize volume.
- 2 Press **MAX SOUND** / **DBB** again to turn off.

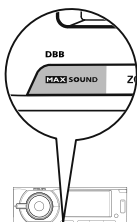



Zoom

To zoom in and out of video images and pictures:

 - 1 Press **ZOOM** on the remote control repeatedly.
↳ **[ZOOM]** is displayed.

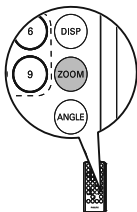

  - 2 Press the navigation buttons to pan across the display.

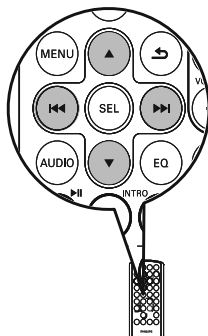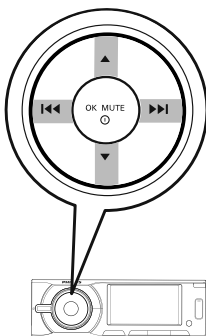


4 Radio


Select tuner sensitivity

Before you start to search for radio station, you can select tuner sensitivity.

 - 1 Press **MENU**.
↳ The main menu is displayed.

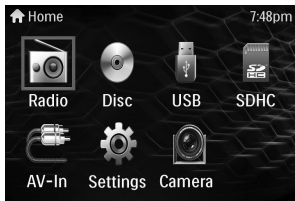

 
- 2 Press the navigation buttons to select **[SETTINGS]**, then press **SEL** on remote control or **OK/MUTE** on the car audio to confirm.
- 3 Press **▲** or **▼** button to select **Ⓜ**.

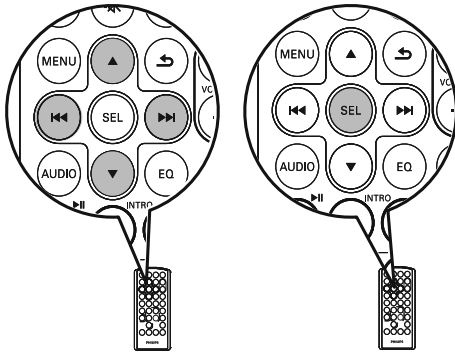


- 4 Press **▶▶** to select **[LOC_DX]**,
- 5 Press **▶▶** again to reach the **[LOC_DX]** option list.
 - **[LOC]**: only broadcast local stations with strong signals.
 - **[DX]**: broadcast any stations with strong and weak signals.
- 6 Press **▲** or **▼** button to select **[LOC]** or **[DX]**, then press **SEL** on remote control or **OK/MUTE** on the car audio to confirm.

Manual tune to a radio station

 - 1 Press **SOURCE** until you select radio.

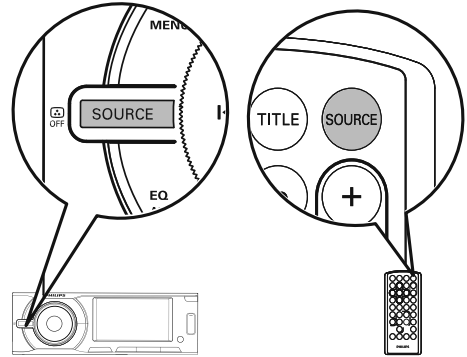

 - 2 Press and hold **▲** or **▼** to select band.
↳ **[FM-1]**, **[FM-2]**, **[FM-3]**, **[FM]**, **[MW-1]**, or **[MW-2]** is display.

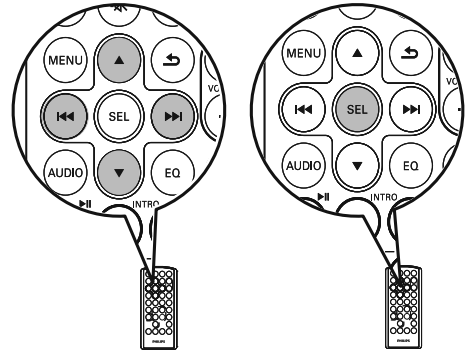

- 3 Press **◀◀** or **▶▶** to tune to a radio station manually.



 
Auto tune to a radio station

In [RADIO] mode, press and hold **◀◀** or **▶▶** for 3 seconds.

Store stations manually

You can store up to 6 stations in each band.

- 1 Tune to the station which you want to store.
- 2 Press and hold the numeric buttons (1 to 6) for 3 seconds.

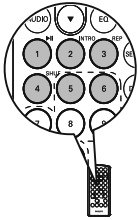

Store stations automatically

You can store up to 6 stations in each band.

- 1 Press **SEARCH** on the remote control or **SEARCH** on the unit.
↳ The six strongest stations of the selected band are saved in preset channels 1-6 automatically.

Select the preset station

 
- 1 Press and hold **▲** or **▼** to select band.
↳ [FM-1], [FM-2], [FM-3], [FM], [MW-1], or [MW-2] is display.
- 2 Press the numeric button (1 to 6) to select the preset station.

Select stereo or mono broadcasting

- 1 Press **MENU**.
↳ The main menu is displayed.



- 2 Press the navigation buttons to select [SETTINGS].
- 3 Press **SEL** on the remote control or **OK/MUTE** on the unit to confirm.

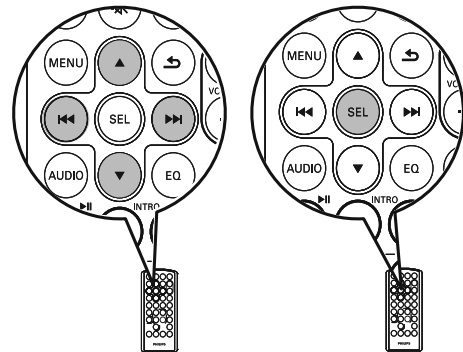

- 4 Press **▲** or **▼** buttons to select the radio setting **☑**.
- 5 Press **▶▶** to select [STEREO_MONO].
- 6 Press **▶▶** again to reach the [STEREO_MONO] option list.
- 7 Press **▲** or **▼** to select [STEREO] or [MONO].
- 8 Press **SEL** on the remote control or **OK/MUTE** on the unit to confirm.

 
5 System settings

Within system settings, there are:


- General settings,
- DVD settings,
- Language settings, and
- Radio settings.

Adjust general settings

- 1 Press MENU.

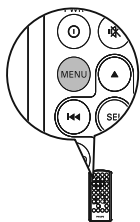

 - 2 Press the navigation buttons to select [SETTINGS], the press to confirm.

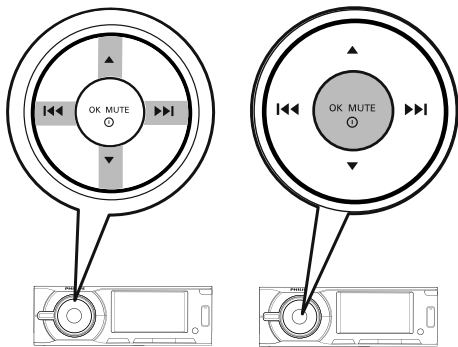

↳ The settings menu is displayed

 


- 3 Press or buttons to select the general setting .
- 4 Press , and then or to select the sub-menus.

Select DVD video settings

You can adjust the settings for the video output and the screen display.


- 1 Press MENU.
- 2 Press the navigation buttons to select [SETTINGS], the press to confirm.

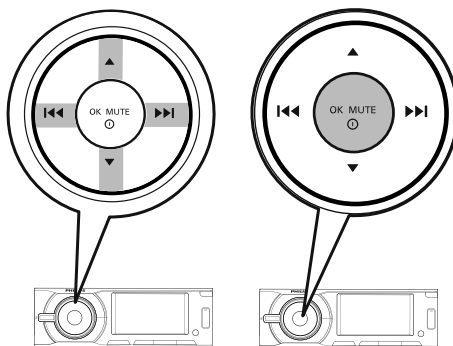


 ↳ The general settings menu is displayed




 


- 3 Press or buttons to select the DVD setting .
- 4 Press , and then or button to select the sub-menus.

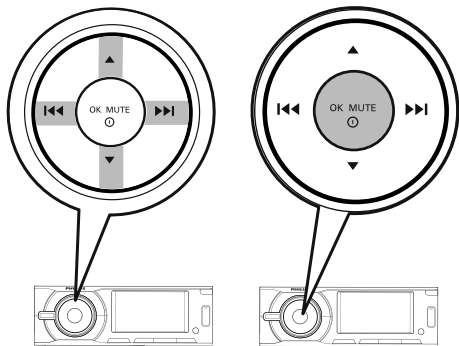Select language settings


- 1 Press MENU.
- 2 Press the navigation buttons to select [SETTINGS], the press  to confirm.

 


↳ The settings menu is displayed




 
 

 


- 3 Press  or  buttons to select the language setting .
- 4 Press , and then  or  button to adjust.

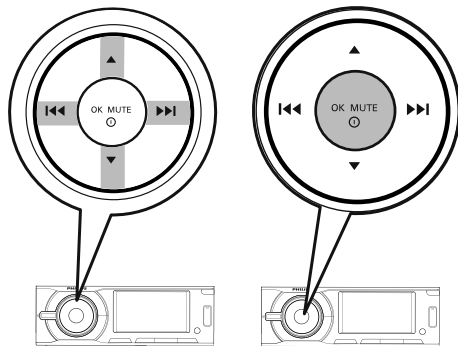Adjust radio settings

- 1 Press MENU.
- 2 Press the navigation buttons to select [SETTINGS], the press  to confirm.



↳ The settings menu is displayed

- 3 Press  or  buttons to select the radio setting .
- 4 Press , and then  or  button to select [LOC_DX] or [STEREO_MONO].
- 5 Press , and then  or  button to select your preferred settings.

6 Other settings

Select equalizer settings

 
You can select preset equalizer settings, and they are:

- [USER]
- [TECHNO]
- [ROCK]
- [CLASSIC]
- [JAZZ]
- [OPTIMAL]
- [FLAT]
- [POP]


Note

- Only when you select [USER], then you can adjust the sound value of [BASS] and [TREBLE].

1 Press EQ/AUDIO.

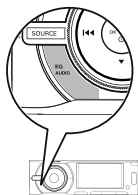

 ↳ The current equalizer setting is displayed.

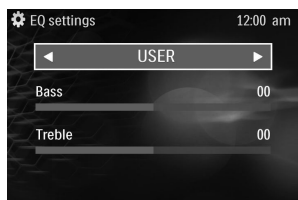

2 Press **◀** or **▶** to select one of the preset equalizer settings.

3 You can also select [USER], and then press **OK/MUTE** to confirm.

 
4 Then, press **▲** or **▼** to select of [BASS] and [TREBLE].

5 Press **◀◀** or **▶▶** to adjust the values.

6 Press **↵** to exit.

Control zone settings

1 Press ZONE.

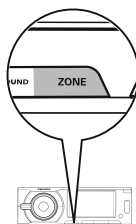

↳ The current zone setting is displayed.



 
2 Then, you can select one of the following methods to preset zone settings.

- Press **◀◀** or **▶▶**;
 - Turn the control knob; or
 - Press **ZONE** continuously.
- Here are the options of zone setting:
- [ALL] - all speakers are in same volume level.
 - [LEFT] - front left speaker is louder than the rest of the speakers.
 - [RIGHT] - front right speaker is louder than the rest of the speakers.
 - [FRONT] - the front speakers are louder than the rear speakers.


Other sound settings

You can adjust the front and rear speaker balance, and the left and right speaker balance.

- 1 Press and hold EQ/AUDIO for 3 seconds.

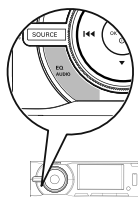

↳ The following options are displayed.

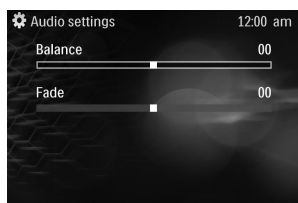 


- 2 Press ▲ or ▼ to select the audio settings to be adjusted.

- **[BALANCE]:** 7L to 7R (L= left speaker ; R= right speaker)
- **[FADE]:** 7R to 7F (R= rear speaker ; F= front speaker)

- 3 Press ◀▶ or ▶▶ to change the value, and then press ^{OK/MUTE} to confirm.

 
- You can also turn the control knob to select a value.

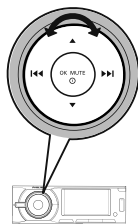

- 4 Press ↵ to exit.

Select Video Output format

 The default video output format is based on the format that is broadcast in your country. If the picture is distorted, change the video output. Simply press the P/N button repeatedly to select the correct video output format.

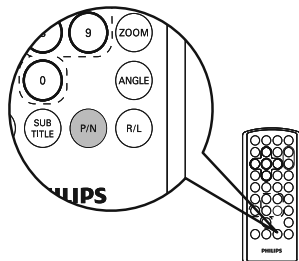


Turn on or off the screen backlight

To turn on or off the screen backlight of the system, press and hold **SOURCE**.

Reset

To reset the car audio system to its default setting:

 
- 1 Detach the front panel.
- 2 Press **RESET** by using a ball-point pen or similar tool.
↳ All settings are erased except clock.

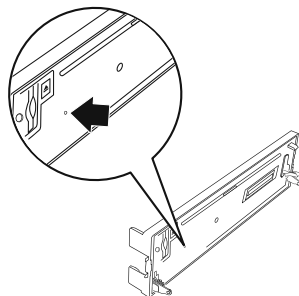

Replace fuse

If the system does not power on, the fuse may be damaged and need replacement.

 - 1** Detach the front panel and take out the system.
- 2** Check the electric connection.
- 3** Buy a new fuse that matches the voltage of the damaged fuse (15A).
- 4** Replace the fuse.

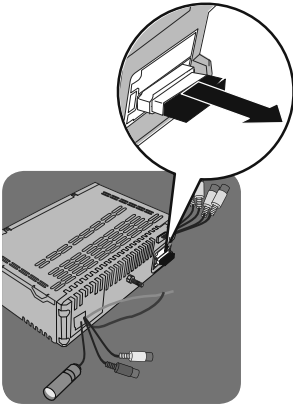

7 Product information



Note

- Product information is subject to change without prior notice.

General

Power supply	12V DC (11V - 16V), negative ground
Fuse	15A
Suitable speaker impedance	4-8 Ω
Continuous power output	18W × 4 channels
Line output voltage	2.0V
Aux-in level	500mV
Dimensions (W × H × D)	188 × 58 × 194 mm
Weight	1.7kg

Disc player

System	DVD / CD audio / MP3 system
Frequency response	20Hz - 20k Hz
Signal / noise ratio	> 75dB
Total harmonic distortion	Less than 1%
Channel separation	> 55dB
Video signal format	NTSC / PAL / AUTO
Video output	1.0V

Tuner

Frequency range - FM	87.5 - 108.0 MHz (100kHz per step in auto search and 50kHz per step in manual search)
Frequency range - AM (MW)	530 - 1710 kHz (10kHz)
Usable sensitivity - FM	8 μV
Usable sensitivity - AM (MW)	30 μV

LCD

Screen size	3 inches (16:9)
Display resolution	960 × 240 dots
Contrast ratio	300
Brightness	250 cd/m ²

Compatible USB devices

- USB flash memory (USB 2.0 or USB1.1)
- USB flash player (USB2.0 or USB1.1)
- Memory cards (SD / MMC / SDHC)

Supported formats

- USB or memory file format: FAT16, FAT32
- MP3 bit rate (data rate): 32 - 320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums / folders: maximum 99
- Number of tracks / titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

Unsupported formats

- Empty albums: an empty album is an album that does not contain MP3 / WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, and PCM audio files.
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format
- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32 kHz, 44.1 kHz, and 48 kHz
- Supported bit-rates: 32 ~ 256 (Kbps), variable bit rates

8 Troubleshooting



Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this system, check the following points before requesting service. If the problem remains unresolved, go to the Philips web site (www.philips.com/support). When you contact Philips, make sure that your system is nearby and the model number and serial number are available.

No power

- Car engine has not been started. Start the car engine.
- Connections is incorrect.
- Fuse has been damaged. Replace fuse.

No sound

- Volume is too low. Adjust volume.
- Speaker connections is incorrect.

No response to the remote control

- Ensure that the path between the remote control and the unit is clear from obstacles.
- From a close distance, point the remote control directly at the unit.
- Replace the remote control battery.
- The function does not work. Refer to the instructions.

Disc does not play

- Disc is upside down. Ensure the printed side is upwards.
- Disc is dirty. Clean the disc with a clean, soft, lint-free cloth. Wipe the disc outwards from the center.
- Disc is defective. Try another disc.
- Incompatible disc is used. Try another disc.
- Disc rating exceeds the restrict setting. Change the rating settings to lower one.
- Disc region code is not compatible with the unit. Use disc with proper region code.

Disc is blocked in the disc compartment

- Press and hold ▲ until the disc comes out.

No image

- Parking brake wire connection is incorrect. Check the parking wiring.

Image flashes or distorted

- Video DVD settings do not match with the DVD. Adjust video DVD settings.
- Video connection is improper. Check the connections.

Noise in broadcasts.

- Signals are too weak. Select other stations with stronger signals.
- Check the connection of the car antenna.
- Change broadcast from stereo to mono.

Preset stations lost.

- Battery cable is not connected correctly. Connect the battery cable to the terminal that is always live.

Fuse is broken

- The Fuse type is incorrect. Replace it with a 15A fuse.
- Speaker wire or power wire is grounded. Check the connections.

Display show ERR-12

- USB/SD/MMC data error. Check the USB device or SD/MMC card.

9 Notice



Be responsible
Respect copyrights

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Manufactured under license from Dolby Laboratories.

"Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

Other trademarks and trade names are those of their respective owners.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

2010 © Koninklijke Philips Electronics N.V. All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of

Koninklijke Philips Electronics N.V. or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



© 2011 Koninklijke Philips Electronics N.V.

All rights reserved.

CED229_UM_55_V1.0WK11213

