Always there to help you

Register your product and get support at www.philips.com/support



HTB5150KD



User manual



Contents

1	Help and support	2
	Use onscreen help (user manual)	2
	Navigate onscreen help	2
2	Important	3
	Safety	3
	Care for your product	4 4
	Care of the environment	4
	3D health warning	4
3	Your home theater	—— 5
	Remote control	5 5 7 7
	Main unit	7
	Connectors	7
_		
4	Connect and set up Placement	9
	Connect to TV	10
	Connect digital devices through HDMI	11
	Connect audio from TV and other	
	devices	11
	Set up EasyLink (HDMI-CEC control)	12
	Connect and set up a home network	13
_		
5	Use your home theater Access the home menu	15 15
	Discs	16
	Data files	17
	USB storage devices	18
	Audio, video, and picture options	19
	Radio	20
	MP3 player	21
	iPod or iPhone	21
	Smartphone control	22
	Browse Smart TV	23
	Internet radio	25
	Browse PC through DLNA	25
	Karaoke	27
	Choose sound	27

6	Change settings Language settings Picture and video settings Audio settings Parental control settings Display settings Energy saving settings Speaker settings Restore default settings	29 29 29 30 30 30 31
7	Update software Check software version Update software through USB Update software through the Internet Update the onscreen help	31 31 32 32 33
8	Product specifications	34
	Troubleshooting	37
9	Troubleshooting	3/
	Notice Copyright Open source software RMVB end user agreement (Asia Pacific and China only) Compliance Trademarks	40 40 41 41 41 41
10	Notice Copyright Open source software RMVB end user agreement (Asia Pacific and China only) Compliance	40 40 41 41 41

Help and support

Philips provides extensive online support. Visit our website at www.philips.com/support to:

- download the complete user manual
- print the quick start guide
- watch video tutorials (available only for selected models)
- find answers to frequently answered questions (FAQs)
- · email us a question
- chat with our support representative.

Follow the instructions on the website to select your language, and then enter your product model number:

Alternatively, you can contact Philips Consumer Care in your country. Before you contact Philips, note down the model number and serial number of your product. You can find this information on the back or bottom of your product.

Use onscreen help (user manual)

For easy access, the onscreen help (user manual) is stored on your home theater. The onscreen help has two panels.

- The left panel contains two tabs Contents and Index. Navigate the Contents or Index to select a topic. The legends used to display the Contents are as follows:
 - ▶: Press **OK** to expand the subtopics.
 - ▼: Press OK to collapse the subtopics, or press Navigation buttons (up/ down) to select a topic.
- To move between the left and right panel, press Navigation buttons (left/right).
- The right panel contains the content of the selected topic. For additional help on the content, scroll down the page to see Related topics.

Use the home theater remote control to select and navigate the onscreen help (see 'Navigate onscreen help' on page 2).

Navigate onscreen help

Press a button on your remote control to use onscreen help.

Button	Action
HELP	Access or exit onscreen help.
OK	Display the selected page, or
	expand subtopics in Contents.
Navigation	Up: Scroll up or move to the
buttons	previous page.
	Down: Scroll down or move to
	the next page.
	Right: Navigate to the right
	panel or next index entry.
	Left: Navigate to the left panel
	or previous index entry.
⇒ BACK	Move up in the Contents or
	Index.
	From the right panel, move to
	the Contents on the left panel.
I◀	Display the last viewed page in
(Previous)	history.
►I (Next)	Display the next page from
	history.

2 Important

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
 Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.



This is CLASS II apparatus with double insulation, and no protective earth provided.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

3D health warning

If you or your family has a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.

To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time. If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first.


Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under six years of age as their visual system is not fully developed yet.

3 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers(e.g. notification of product software upgrade), register your product at www.philips.com/welcome.

Remote control

This section includes an overview of the remote control.

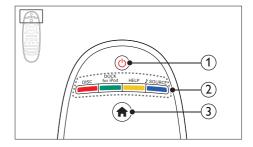

① (Standby-On)


- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

(2) Source buttons / Color buttons

- Color buttons: Select tasks or options for Blu-ray discs or Smart TV services.
- **DISC**: Switch to disc source.
- **DOCK for iPod**: Switch to Philips dock for iPod or iPhone.
- **HELP**: Access the onscreen help.
- SOURCE: Select an audio input source or radio source.

(3) ♠ (Home)

Access the home menu.

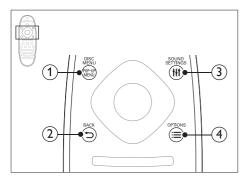

(1) POP-UP MENU/DISC MENU

Access or exit the disc menu when you play a disc.

2 SACK


- Return to a previous menu screen.
- In radio mode, press and hold to erase the current preset radio stations.

(3) HI SOUND SETTINGS

Access or exit sound options.

(4) ≡ OPTIONS

- Access more play options while playing a disc or a USB storage device.
- In radio mode, set a radio station.

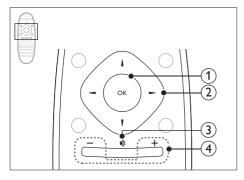

① **OK**Confirm an entry or selection.

2 Navigation buttons

- Navigate menus.
- In radio mode, press left or right to start auto search.


- In radio mode, press up or down to tune the radio frequency.
- During network and password setup, press left to delete a character.

③ **' (**Mute)

Mute or restore volume.

(4) +/- (Volume)

Increase or decrease volume.

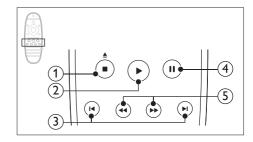

1 ■ (Stop) / ▲ (Open/Close)

- Stop play.
- Press and hold for three seconds to open or close the disc compartment.

(Play)

Start or resume play.

③ I ✓ / ►I (Previous/Next)


- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.

4 II (Pause)

Pause play.

(5) ◀◀ / ▶▶ (Fast Backward/Fast Forward)

Search backwards or forward. Press repeatedly to change the search speed.

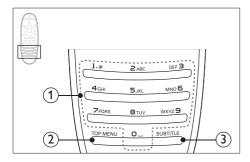

(1) Alphanumeric buttons


- Enter values or letters (using SMS style entry).
- In radio mode, select a preset radio station.
- 2 TOP MENU

Access the main menu of a video disc.

3 SUBTITLE
Select subtitle language for video.

Main unit

This section includes an overview of the main unit.

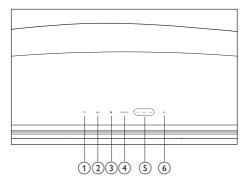

- (1) \circlearrowleft (Standby-On) Switch the home theater on or to standby.
- 2 ►II (Play/Pause)
 Start, pause or resume play.

(3) **■** (Stop)

- · Stop play.
- In radio mode, press and hold to erase the current preset radio stations.

(4) SOURCE

Select an audio or video source for the home theater.

5 4+/-


Increase or decrease volume.

6 ≜ (Open/Close)
Open or close the disc compartment.

Connectors

This section includes an overview of the connectors available on your home theater.

Rear left

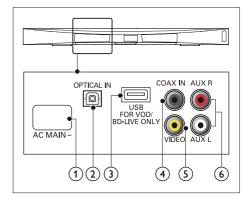

- 1 AC MAINS~ Connect to the power supply.
- ② OPTICAL IN Connect to an optical audio output on the TV or a digital device.
- 3 USB FOR VOD/BD-LIVE ONLY (VOD is not available in China)
 - Slot for a USB storage device to rent online videos (Not available in China).
 - Slot for a USB storage device to access BD-Live.

(4) COAX IN

Connect to a coaxial audio output on the TV or a digital device.


(5) VIDEO

Connect to the composite video input on the TV.

(6) AUX

Connect to an analog audio output on the TV or an analog device.

Rear right

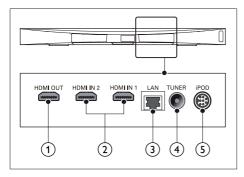

1 HDMI OUT (ARC) Connect to the HDMI input on the TV.

(2) HDMI IN1 / HDMI IN2

Connect to the HDMI output on a digital device.

(3) LAN


Connect to the LAN input on a broadband modem or router.

(4) TUNER

Signal input from an antenna, cable or satellite.

(5) DOCK for iPod

Connect to a Philips dock for iPod or iPhone. (Model: Philips DCK306x, sold separately for some models)

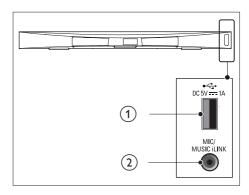


(1) ← (USB)

Audio, video or picture input from a USB storage device.

MUSIC iLINK / MIC (MIC is available only in selected models)

- Audio input from an MP3 player or a microphone.
- Audio input from a microphone (Available only in selected models).

 Subwoofer connectors



1 LED

- When the power is on, the LED turns on.
- During pair up for wireless connection between the home theater and the subwoofer, the LED blinks.
- When the wireless connection succeeds, the LED turns on again.

(2) CONNECT

Press and hold to enter the pairing mode for the home theater and the subwoofer.

- Woltage selector (For some regions only) Switch the voltage selector to the local power line voltage.
- 4 AC MAINS~ Connect to the power supply.

4 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.


For information about the basic connections of your home theater and accessories, see the quick start guide.



- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

Placement

Place the subwoofer at least 1 meter (3 feet) away from your home theater, and ten centimeters away from the wall. For best results, place your subwoofer as shown below.

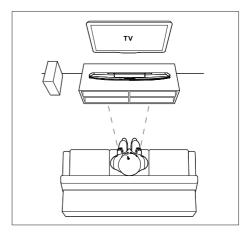



The home theater and the subwoofer automatically pair up when you switch on the home theater and the subwoofer.

Connect to TV


Connect your home theater to a TV to watch videos. You can listen to the TV audio through your home theater speakers.

Use the best quality connection available on your home theater and TV.

Option 1: Connect to TV through HDMI (ARC)

Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC), If your TV is HDMI ARC compliant, you can hear the TV audio through your home theater by using a single HDMI cable.

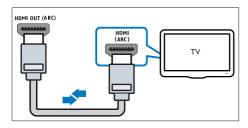

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.
 - The **HDMI ARC** connector on the TV might be labeled differently. For details, see the TV user manual.
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
 - HDMI-CEC is a feature that enables CEC compliant devices that are


connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater (see 'Set up EasyLink (HDMI-CEC control)' on page 12)

If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page

Option 2: Connect to TV through standard HDMI

Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

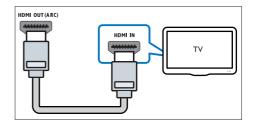

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the **HDMI** connector on the TV
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 11).
- 3 On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
 - HDMI-CFC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 12)

4 If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 13)




Note

 If your TV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV. However, some of the features may not be available.

Option 3: Connect to the TV through composite video

Basic quality video

 If your TV does not have HDMI connectors, use a composite video connection. A composite connection does not support high-definition video.



- Using a composite video cable, connect the VIDEO connector on your home theater to the VIDEO IN connector on the TV.
 - The composite video connector might be labeled AV IN, COMPOSITE, or BASEBAND.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 11).
- When you watch TV programs, press SOURCE on your home theater repeatedly to select the correct audio input.
- 4 When you watch videos, switch your TV to the correct video input. For details, see the TV user manual

Connect digital devices through HDMI

Connect a digital device such as a set-top box, games console, or camcorder to your home theater through a single HDMI connection. When you connect the devices in this way and play a file or game, the

- video is automatically displayed on your TV. and
- audio is automatically played on your home theater.
- Using a High Speed HDMI cable, connect the HDMI OUT connector on your digital device to the HDMI IN 1/2 on your home theater.
- 2 Connect your home theater to TV through HDMI OUT (ARC).
 - If the TV is not HDMI CEC compliant, select the correct video input on your TV
- 3 On the connected device, turn on HDMI-CEC operations. For details, see the user manual of the device.
 - If you cannot hear the digital device audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 13)
 - You can also press SOURCE on your home theater repeatedly to select the correct HDMI input.

Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.

Use the best quality connection available on your TV, home theater, and other devices.




Note

 When your home theater and TV are connected through HDMI ARC, an audio connection is not required (see 'Option 1: Connect to TV through HDMI (ARC)' on page 10).

Option 1: Connect audio through a digital optical cable

 
Best quality audio



- Using an optical cable, connect the OPTICAL connector on your home theater to the OPTICAL OUT connector on the TV or other device.
 - The digital optical connector might be labeled SPDIF or SPDIF OUT.

Option 2: Connect audio through a digital coaxial cable


Good quality audio

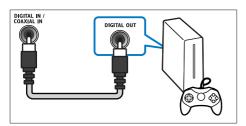

- Using a coaxial cable, connect the COAXIAL connector on your home theater to the COAXIAL/DIGITAL OUT connector on the TV or other device.
 - The digital coaxial connector might be labeled DIGITAL AUDIO OUT.

Option 3: Connect audio through analog audio cables

Basic quality audio

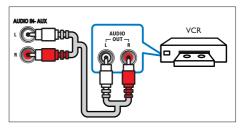

Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device

Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control



Note

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

Enable EasyLink

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- Select [EasyLink] > [EasyLink] > [On].On your TV and other connected devices
 - On your TV and other connected devices, turn on HDMI-CEC control. For details, see the user manual of the TV or other devices.
 - On your TV, set the audio output to 'Amplifier' (instead of TV speakers).
 For details, see the TV user manual.

EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): When a video disc is in the disc compartment, press ► (Play) to wake up the TV from standby, and then play a disc.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [System Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Input Mapping] (Audio input mapping):If system audio control does not work, map the connected device to the correct audio input connector on your home theater. (see 'Set up the audio' on page 13)



To change the EasyLink control settings, press
 (Home), select [Setup] > [EasyLink].

Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, do the following:

- Check that you have enabled EasyLink on all the devices, (see 'Set up EasyLink (HDMI-CEC control)' on page 12) and
- on your TV, set the audio output to "Amplifier" (instead of TV speakers). For details, see the TV user manual, and
- setup the EasyLink audio control.
- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [EasyLink] > [System Audio Control] > [On].
 - To play the audio from the TV speakers, select [Off], and skip the following steps.
- 4 Select [EasyLink] > [Audio Input Mapping].
- Follow the onscreen instructions to map the connected device to the audio inputs on your home theater:
 - If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

Connect and set up a home network

Connect your home theater to a network router through wired or wireless network connection, and enjoy:

- Streamed multimedia content
- Smartphone control (see 'Smartphone control' on page 22)
- Smart TV (see 'Browse Smart TV' on page 23)
- Internet radio (see 'Internet radio' on page 25)

Software update (see 'Update software through the Internet' on page 32)



Caution

Familiarize yourself with the network router, media server software and networking principles. If necessary, read documentation that accompanies the network components. Philips is not responsible for lost, damaged, or corrupt data.


Before you start

- For Smart TV. Video call, and software updates, make sure that the network router has access to the Internet with highspeed connection and is not restricted by firewalls or other security systems.
- Make the necessary connections described in the guick start guide, and then switch the TV to the correct source for your home theater.

Set up the wired network

What you need

- A network cable (RI45 straight cable).
- A network router (with DHCP enabled).

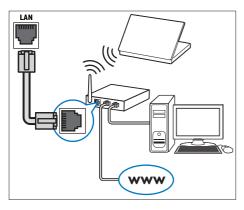

- Using a network cable, connect the LAN connector on your home theater to the network router.
- Press **(Home)**.
- Select [Setup], and then press OK.


- Select [Network] > [Network installation] > [Wired (Ethernet)].
- Follow the onscreen instructions to complete the setup.
 - If connection fails, select [Retry], and then press **OK**.
- 6 Select [Finish], and then press OK to exit.
 - To view the network settings, select [Setup] > [Network] > [View network settings].

Set up the wireless network

Your home theater has a built-in Wi-Fi for easy access to a wireless network.

What you need

A network router (with DHCP enabled). For best wireless performance, coverage, and compatibility, use 802.11n router.

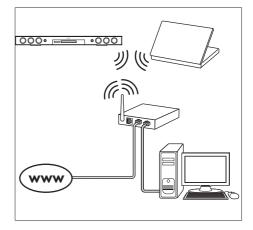

- Press **(Home)**.
- Select [Setup], and then press OK.
- Select [Network] > [Network installation] > [Wireless (Wi-Fi)], and then press OK.
- Follow the onscreen instructions to select and set up the wireless network.
 - If connection fails, select [Retry], and then press OK,

- 5 Select [Finish], and then press OK to exit.
 - To view the network settings, select [Setup] > [Network] > [View wireless settings].

Personalize the network name

Name your home theater to easily identify it on your home network.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [Name your Product:].
- 4 Press the Alphanumeric buttons to enter the name.
- 5 Select [Done], and then press OK to exit.

5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

- Make the necessary connections described in the quick start guide and the user manual.
- Complete the first-time setup. First-time setup appears when you turn on your home theater for the first time or if you do not complete the setup.
- Switch the TV to the correct source for your home theater (for example, HDMI, AV IN).

Access the home menu

The home menu provides easy access to connected devices, setup and other useful features in your home theater.

- 1 Press ♠ (Home).
 - → The home menu is displayed.
- 2 Press the Navigation buttons and OK to select the following:
 - [play Disc]: Start disc play.
 - **[browse USB]**: Access the USB content browser
 - **[browse iPod]**: Access the iPod or iPhone content browser.
 - [Smart TV]: Access Smart TV.
 - [Internet Radio]: Access Internet radio through your home theater.
 - **[browse PC]**: Access the computer content browser.
 - [HDMI 1]: Select the digital device connected to HDMI IN 1 on your home theater.
 - [HDMI 2]: Select the digital device connected to HDMI IN 2 on your home theater.

- [Setup]: Access menus to change video, audio and other settings.
- [Help]: Access onscreen user manual.
- 3 Press ♠ (Home) to exit.

Discs

Your home theater can play DVDs, VCDs, CDs, and Blu-ray discs. It can also play discs that you've made at home, such as CD-R discs of photos, videos, and music.

- 1 Insert a disc into the home theater.
- If the disc does not play automatically, press DISC or select [play Disc] from the home menu.
- 3 Use the remote control to control play (see 'Play buttons' on page 16).
 - It is normal to hear a little noise when you play a Blu-ray disc. This does not mean that your home theater is faulty.

Play buttons

Button	Action
Navigation buttons	Navigate menus. Up/Down: Rotate the picture clockwise or counter-clockwise.
OK	Confirm an entry or selection.
► (Play)	Start or resume play.
II	Pause play.
	Stop play.
_	Press and hold for three seconds
	to open or close the disc compartment.
	Skip to the previous or next track, chapter or file.
44 / >>	Search fast backwards or forward. When a video is paused, search slow backwards or forward.
SUBTITLE	Select subtitle language for video.
DISC/ POP-UP MENU	Access or exit the disc menu.

Button	Action
=	Access the advanced options
OPTIONS	when you play your audio, video,
	or media files (see 'Audio, video,
	and picture options' on page 19).

Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 Press HI SOUND SETTINGS.
- 2 Select AUD SYNC, and then press OK.
- 3 Press the Navigation buttons (up/down) to synchronize the audio with the video.
- 4 Press **OK** to confirm.

Play Blu-ray 3D disc

Your home theater can play Blu-ray 3D video. Read the 3D health warning before playing a 3D disc.

What you need

- A 3DTV
- A pair of 3D glasses that are compatible with your 3D TV
- A 3D Blu-ray video
- A high speed HDMI cable
- 1 Using the high speed HDMI cable, connect your home theater to a 3D compatible TV.
- Make sure that the 3D video setting is enabled. Press ♠ (Home), select [Setup] > [Video] > [Watch 3D video] > [Auto].
 - To play 3D discs in 2D mode, select [Off].
- 3 Play a Blu-ray 3D disc and put on the 3D glasses.
 - During video search and in certain play modes, the video is displayed in 2D.
 The video display returns to 3D when you resume play.



To avoid flickering, change the brightness of the display.

Bonus View on Blu-ray

On Blu-ray discs that support the Bonus View, enjoy extra content such as commentaries in a small screen window. Bonus View is also known as picture-in-picture.

- 1 Enable Bonus View in the Blu-ray disc menu.
- 2 While you play the movie, press **□** OPTIONS.
 - → The options menu is displayed.
- 3 Select [PIP selection] > [PIP].
 - Depending on the video, PIP menu [1] or [2] is displayed.
 - To disable Bonus View, select [Off].
- 4 Select [2nd audio language] or [2nd Subtitle Language].
- 5 Select the language, and then press OK.

BD-Live on Blu-ray

Access additional features on the Blu-ray discs with BD-Live content, such as internet chats with the director, the latest movie trailers, games, wallpaper, and ringtones.

BD-Live services and content vary from disc to disc.

What you need

- Blu-ray disc with BD-Live content
- a USB storage device, with at least 1 GB of memory
- 1 Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 13).
- Connect a USB storage device to your home theater.
- 3 Press ♠ (Home) and select [Setup].
- 4 Select [Advanced] > [Local storage].
- 5 Select [USB].
- 6 Select [Advanced] > [BD-Live security] > [Off] to enable BD-Live.
 - To disable BD-Live, select [On].

- 7 Select the BD-Live icon in the disc menu, and then press OK.
 - → BD-Live starts to load. The loading time depends on the disc and your internet connection.
- 8 Press the Navigation buttons to navigate BD-Live, and then press OK to select an option.



Note

To clear the memory on the storage device, press
 (Home), select [Setup] > [Advanced] > [Clear memory].

Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 34).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press ■.
 - To resume the video from where you stopped, press ► (Play).
 - To play the video from the start, press OK.



lote

 To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 While playing video, press **SUBTITLE** to select a language.
- 2 For DivX or RMVB/RM videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press OPTIONS.
 - → The options menu is displayed.
- 4 Select [Character set], and then select a character set that supports the subtitle.

Europe, India, LATAM, and Russia

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Europe]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian
[Greek]	Greek
[Baltic]	Estonian, Latvian and Lithuanian

Asia Pacific and China

Character Set	Language
[Chinese]	Simplified Chinese

Character Set	Language
[Standard]	Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian Portuguese, Spanish, Swedish, Turkish
[Chinese- Traditional]	Traditional Chinese
[Korean]	English and Korean

VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [DivX®VOD Code].

 → The DivX VOD registration code for
 - → The DivX VOD registration code for your home theater is displayed.

USB storage devices

Enjoy pictures, audio, and video stored on a USB storage device such as an MP4 player or digital camera.

What you need

- A USB storage device that is formatted for FAT or NTFS file systems, and complies with the Mass Storage Class.
- A media file in one of the supported file formats (see 'File formats' on page 34).



Note

- If you use a USB extension cable, USB HUB, or USB multi-reader, the USB storage device may not be recognized.
- 1 Connect a USB storage device to the (USB) connector on your home theater.

- 2 Press ♠ (Home).
 - Select [browse USB], and then press OK.

 → A content browser is displayed.
- 4 Select a file, and then press **OK**.
- Press the play buttons to control play (see 'Play buttons' on page 16).

Audio, video, and picture options

Use advanced features when you play pictures, audio and video files from a disc or a USB storage device.

Audio options

While playing audio, repeat an audio track, a disc, or a folder.

- 1 Press **□ OPTIONS** repeatedly to cycle through the following functions:
 - RPT TRAC / RPT FILE: Repeat the current track or file.
 - RPT DISC / RPT FOLD: Repeat all the tracks on the disc or the folder;
 - RPT RAND: Play audio tracks in random order.
 - RPT OFF: Turn off the repeat mode.

Video options

While watching video, select options such as subtitles, audio language, time search, and picture settings. Depending on the video source, some options are not available.

- 1 Press **≡ OPTIONS**.
 - → The video options menu is displayed.
- 2 Press the Navigation buttons and OK to select and change:
 - [Audio language]: Select audio language for video.
 - [Subtitle Language]: Select subtitle language for video.

- [Subtitle shift]: Change the subtitle position on the screen.
- [Info]: Display information about what is playing.
- [Character set]: Select a character set that supports the DivX subtitle.
- [Time search]: Skip to a specific part of the video by entering the time of the scene.
- [2nd audio language]: Select the second audio language for Blu-ray video
- [2nd Subtitle Language]: Select the second subtitle language for Blu-ray video.
- [Titles]: Select a specific title.
- [Chapters]: Select a specific chapter.
- [Karaoke] (Available in selected model and region): Change the karaoke settings.
- [Angle list]: Select a different camera angle.
- [Menus]: Display the disc menu.
- [PIP selection]: Display Picture-in-Picture window when playing a Blu-ray disc that supports the Bonus View.
- **[Zoom]**: Zoom into a video scene or picture. Press the **Navigation buttons** (left/right) to select a zoom factor.
- [Repeat]: Repeat a chapter or title.
- [Repeat A-B]: Mark two points within a chapter or track to repeat play, or turn off the repeat mode.
- [Picture settings]: Select a predefined color setting.
- [Audio sync]: Delay the audio to match the video.
- [2D to 3D]: Select 2D or 3D video.

Picture options

While viewing a picture, zoom into the picture, rotate it, add animation to a slideshow, and change the picture settings.

- 1 Press **≡ OPTIONS**.
 - → The picture options menu appears.

- Press the Navigation buttons and OK to select and change the following settings:
 - [Rotate +90]: Rotate the picture 90 degree clockwise.
 - [Rotate -90]: Rotate the picture 90 degree counter-clockwise.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
 - [Info]: Display picture information.
 - [Duration per slide]: Select the display speed for each picture in a slide show.
 - [Slide animation]: Select animation for the slide show.
 - [Picture settings]: Select a predefined color setting.
 - [Repeat]: Repeat a selected folder.
 - [2D to 3D]: View 2D or 3D photo slideshow.

Musical slideshow

If the picture and audio files are from the same disc or USB storage device, you can create a musical slideshow.

- 1 Select an audio track, and then press OK.
- 2 Press SACK, and go to the picture folder:
- 3 Select a picture, and then press ► (Play) to start the slideshow.
- **4** Press to stop slideshow.
- 5 Press again to stop music.



 Make sure that the picture and audio formats are supported by your home theater (see 'File formats' on page 34).

Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.



Note

- AM and digital radio are not supported.
- If no stereo signal is detected, or if fewer than five stations are found, you are prompted to install the radio stations again.
- 1 Connect the FM antenna to the **TUNER** at the back of your home theater.
 - For the best reception, place the antenna away from your TV or other sources of radiation.
- Press > SOURCE repeatedly until RADIO appears on the display panel.
 - → If you have already installed the radio stations, the last channel that you listened to is played.
 - If you have not installed any radio stations, the message AUTO
 INSTALL...PRESS PLAY appears on the display panel. Press ► (Play).
- 3 Use the remote control to listen or to change radio stations.

Play buttons	
Button	Action
I ◀ / ▶ I	Select a preset radio station.
or	
Alphanumeric	
buttons	
Navigation	Left/Right: Search for a radio
buttons	station.
	Up/Down: Fine tune a radio
	frequency.
	Press to stop the installation of
	radio stations.
→ BACK	Press and hold to erase the
	preset radio station.

≡ OPTIONS	Manual:
	 Press ≡ OPTIONS.
	2) Press I◀ / ▶I to select your
	preset.
	 Press ≡ OPTIONS again
	to store the radio station.
	Automatic: Press and hold for
	three seconds to reinstall the
	radio stations.
SUBTITLE	Toggle between the stereo
	and mono sounds.

Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz. When you switch the tuning grid, all preset radio stations are erased.

- 1 Press & SOURCE repeatedly until RADIO appears on the display panel.
- 2 Press ■
- Press and hold ► (Play) to toggle between 50 kHz or 100 kHz.

MP3 player

Connect a MP3 player to play audio files.

What you need

- An MP3 player.
- A 3.5mm stereo audio cable.
- Using the 3.5mm stereo audio cable, connect the MP3 player to the MUSIC iLINK connector on your home theater.
 - If you use 6.5mm stereo audio cable, connect the MP3 player to your home theater using a 3.5mm - 6.5mm converter jack.
- Press J SOURCE repeatedly until MUSIC I-LINK appears on the display panel.
- 3 Press the buttons on the MP3 player to select and play audio files.

iPod or iPhone

Connect a Philips dock to play music, photos, and videos from your iPod or iPhone.

What you need

- A Philips dock (model: Philips DCK306x, sold separately for some models): to purchase it, visit www.philips.com/welcome
- A yellow composite video cable.
- 1 Connect the Philips dock to the **DOCK** for iPod connector on your home theater.
- To view slideshow from your iPod or iPhone on your TV, connect the dock to the TV by using the yellow composite cable.
- 3 Switch on the iPod or iPhone, and place it on the dock,
 - Charge your iPod/iPhone on the dock while the home theater is in iPod mode.

Play music

- 1 Dock your iPod or iPhone.
- 2 Press DOCK for iPod on the home theater remote control.
- **3** Browse your iPod or iPhone screen to select the music.
- 4 Play the music on your iPod or iPhone.
 - → The music is heard on your home theater.

Browse the audio content from your TV (extended mode):

- 1 Press ♠ (Home).
- Select [browse iPod], and then press OK.→ A content browser is displayed.
- 3 Press Navigation buttons to browse the audio content.
- 4 Press the play buttons to control play (see 'Play buttons' on page 16).
 - The local keys on your iPod or iPhone are disabled.
- 5 To exit the dock mode, press ♠ (Home).

21

Play video and slideshow

- 1 Dock your iPod or iPhone (see 'iPod or iPhone' on page 21).
- 2 Press DOCK for iPod on the home theater remote control.
- 3 Switch the TV to the AV/VIDEO source (corresponding to the yellow composite cable).
 - → The TV screen goes blank.
- 4 From the iPod or iPhone screen, browse and play a video or photo slideshow.
 - → The video or photo slideshow is displayed on your TV.

Smartphone control

Use your mobile device such as iPhone (iOS 3.1.3 and above), Android phone (2.1 and above), iPad, or tablet to:

- Control your home theater
- Browse a data disc or USB storage device
- Switch to FM radio or Internet radio
- Browse Smart TV
- Personalize your sound settings
- Stream and share content from the devices on your home network

Before you start

- Connect your home theater, mobile device, and other DLNA-compatible devices to the same home network.
 - For better video quality, use wired connection whenever possible.
- Personalize the network name for your home theater (see 'Personalize the network name' on page 15).
- Download Philips MyRemote application on your mobile device.
 - For iPhone or iPad, search for the app in **App Store** (App Store).
 - For Android based phone or tablet, search for the app in Market (Market).

Control your home theater

- 1 On the mobile device, access MyRemote application.
- 2 Select your home theater (by its network name) from the home screen.
 - → A browsing bar is displayed at the bottom of the screen.
 - If your home theater is not found, check the network connection or tap the **Devices** tab on your mobile device to search again.
- 3 Select one of the following tabs to access more options.
 - To return to the previous screen, press back button.

Option	Action
Арр	Return to the home screen of your
Home	device.
Media	DISC: Browse and play a file stored
	on a data disc.
	USB : Browse and play a file stored
	on a USB storage device.
	FM radio: Switch to FM radio.
	Internet radio: Switch to Internet
	radio. Make sure that your home
	network has internet access.
Remote	Access the remote control on your
	mobile device. Swipe the screen
	to the left or right to access more
	buttons. Only the relevant buttons
	are enabled on your mobile device.
	Some functions such as standby
	and long press, are not available on
	the mobile device.
Sound	MySound: Personalize the sound
	setting to suit your preference.
	Surround: Select a surround sound
	setting.

4 Follow the onscreen instructions to select an option or complete the set up.

Stream multimedia content (SimplyShare)

Philips SimplyShare allows you to use your smartphone to stream multimedia content (such as pictures, audio and video files), and play through your home theater or any DLNA-compatible device in the same home network.

Before you start

- Install a DLNA-compliant media server application on your mobile device, such as Twonky Media Server:
- Enable media sharing of files. For details, check the user manual of the media server software software.
- On the mobile device, launch the media server application. For iPhone or Android phone, access **MyRemote** application.
- 2 From the menu of your mobile device, select SimplyShare.
 - Your home theater and other devices on the home network are automatically detected and displayed on the screen.
- 3 Select a device on the network.
 - → The folders in the selected device are displayed. Depending on the media server, the folder names may vary.
 - If you cannot see the folders, make sure that you enable media sharing on the selected device so that the content is available for sharing.
- 4 Select a media file to play.
- From the menu on your mobile device, select the home theater to stream the media file to your home theater.
 - Some media files may not display or play due to compatibility issues.
 For your home theater, check the supported file formats.
- 6 Use your mobile device to control play.

Browse Smart TV

Use SmartTV to access variety of internet applications and specially adapted internet websites.

For interactive discussions on Smart TV services, visit the Smart TV forum at www.supportforum.philips.com



Note

- Koninklijke Philips Electronics N.V. bears no responsibility for content provided by SmartTV service providers.
- 1 Connect your home theater to a home network with high-speed Internet access (see 'Connect and set up a home network' on page 13).
- 2 Press ♠ (Home).
- 3 Select [Smart TV], and then press OK.
- 4 Follow the onscreen instructions to confirm the onscreen message.
 - → The Smart TV home page is displayed.
- Use the remote control to select applications and enter text (for example, email address, web URL, passwords, etc) (see 'Navigate SmartTV' on page 23).

Navigate Smart TV

Ü			
Button	Action		
Navigation	Select an application or		
buttons	navigate.		
ОК	Confirm an entry or selection.		
	Access the onscreen		
	keyboard to enter text.		
⇒ BACK	Return to the previous page.		
	Delete a character in any text		
	entry box.		
≡ OPTIONS	Access options related to		
	current activity.		
Alphanumeric	Enter characters in the text		
buttons	entry box.		

Action
Access the onscreen
keyboard to enter text.
Exit Smart TV portal and
return to home menu.

Use a USB-HID keyboard or mouse

What you need

- A wired or wireless USB hub, keyboard, or mouse that complies with the Human Interface Design (USB-HID) class.
- 1 Connect a USB keyboard or mouse to the (USB) connector on your home theater.
 - To connect a wireless USB device, connect the wireless receiver to the USB connector on your home theater. Refer to the user manual of the wireless USB device for details
- Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Preference] > [Keyboard layout].
- **5** Select a language.
 - → The standard keyboard for that language is enabled.
- **6** Use the keyboard to type the characters, or mouse to navigate the web page.
 - USB-HID mouse cursor does not work on Smart TV and open Internet pages.
 - The multimedia keys on some keyboards are not supported.

Clear browsing history

Clear the browsing history to remove passwords, cookies, and browsing data from your home theater:

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Network] > [Clear Smart TV memory].
- 4 Press **OK** to confirm.

Rent online video

Rent videos from online stores, through your home theater. You can watch them right away or later. Many online video stores offer a huge choice of video, with different rental prices, periods, and conditions. For some stores, you must create an account before you can rent.

What you need

- a USB storage device, with at least 4 GB of memory
- 1 Connect your home theater to a home network with high-speed Internet access (see 'Connect and set up a home network' on page 13).
- 2 Insert a blank USB storage device into the USB FOR VOD/BD-LIVE ONLY slot on your home theater, and follow the onscreen instructions to format the USB device.
 - After formatting, leave the USB storage device in the USB FOR VOD/BD-LIVE ONLY slot.
 - After formatting, the USB storage device will no longer be compatible with computers or cameras, unless formatted again using Linux operating system.
- 3 Press ♠ (Home).
- 4 Select [Smart TV], and then press OK.
 - The online services available in your country are displayed.
- 5 Select a video store, and then press OK.
- **6** Follow the onscreen instructions to rent or watch a video. If prompted, enter the necessary information to register or log in to the store's account.
 - → The video is downloaded to your USB storage device. You can watch it only on your home theater.
- Press the playback buttons to control play (see 'Play buttons' on page 16).
 - If you cannot play a video, check the file format to make sure that it is supported by your home theater (see 'File formats' on page 34).

Internet radio

Access Internet radio through your home theater.

- 1 Connect your home theater to a home network with Internet access (see 'Connect and set up a home network' on page 13).
- 2 Press ♠ (Home).
- Select [Internet Radio], and then press OK.→ The Internet radio page is displayed.
- Follow the onscreen instructions to select a radio station, create presets, or save your favorite radio stations.
- 5 Press ♠ (Home) to exit the internet radio.

Browse PC through DLNA

Access and play the pictures, audio and video files from a computer or media server on the home network through your home theater.

Before you start

- Install a DLNA-compliant media server application on your device. Make sure that you download an application that works best for you. For example,
 - Windows Media Player 11 or higher for PC
 - Twonky Media Server for Mac or PC
- Enable media sharing of files. For ease of use, we have included the steps for the following applications:
 - Windows Media Player 11 (see 'Microsoft Windows Media Player 11' on page 25)
 - Windows Media Player 12 (see 'Microsoft Windows Media Player 12' on page 26)
 - Twonky Media for Mac (see 'Macintosh OS X Twonky Media (v4.4.2)' on page 26)



 For additional help on these applications or other media servers, check the user manual of the media server software software.

Set up media server software

To enable media sharing, set up the media server software.

Before you start

- Connect your home theater to a home network. For better video quality, use wired connection whenever possible.
- Connect the computer and other DLNAcompatible devices to the same home network.
- Make sure that your PC firewall allows you to run Media Player programs (or the firewall's exemption list has the media server software included).
- Switch on your computer and the router.

Microsoft Windows Media Player 11

- 1 Start Windows Media Player on your PC.
- 2 Click the Library tab, and then select Media Sharing.
- The first time you select Media Sharing on your PC,a pop-up screen appears. Check the Share my media box and click OK.
 → The Media Sharing screen is displayed.
- 4 In the Media Sharing screen, make sure that you see a device marked as Unknown Device.
 - → If you don't see an unknown device after a minute or so, check that your PC firewall is not blocking the connection.
- 5 Select the unknown device and click **Allow**.
 - → A green tick appears next to the device.
- 6 By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, select Library > Add to Library.
 - → The Add to Library screen is displayed.
 - If necessary, select Advanced options to display a list of monitored folders.
- 7 Select My folders and those of others I can access, and then click Add.

8 Follow the onscreen instructions to add the other folders that contain your media

Microsoft Windows Media Player 12

- 1 Start Windows Media Player on your PC.
- 2 In Windows Media Player, click the Stream tab, and then select Turn on media streaming.
 - → The **Media streaming options** screen is displayed.
- 3 Click Turn on media streaming.
 - You return to Windows Media Player screen.
- 4 Click the Stream tab and select More streaming options.
 - → The Media streaming options screen is displayed.
- 5 Make sure that you see a media program in the **Local network** screen.
 - → If you don't see a media program, check that your PC firewall is not blocking the connection.
- 6 Select the media program and click Allowed.
 - → A green arrow appears next to the media program.
- By default, Windows Media Player shares from these folders: My Music, My Pictures, and My Videos. If your files are in other folders, click the Organize tab and select Manage libraries > Music.
 - → The Music Library Locations screen is displayed.
- 8 Follow the onscreen instructions to add the other folders that contain your media files.

Macintosh OS X Twonky Media (v4.4.2)

- 1 Visit www.twonkymedia.com to purchase the software, or download a free 30-day trial to your Macintosh.
- Start Twonky Media on the Macintosh.

- In the Twonky Media Server screen, select Basic Setup and First Steps.
 - → The First steps screen is displayed.
- 4 Type a name for your media server, and then click Save changes.
- Back in the Twonky Media screen, select Basic Setup and Sharing.
 - → The **Sharing** screen is displayed.
- **6** Browse and select folders to share, and then select **Save Changes**.
 - → Your Macintosh rescans the folders automatically so that they are ready to share.

Play files from your PC



Note

- Before you play multimedia content from the computer, make sure that the home theater is connected to the home network, and the media server software is properly set up.
- 1 Press ♠ (Home).
- 2 Select [browse PC], and then press OK.

 → A content browser is displayed.
- **3** Select a device on the network.
 - → The folders in the selected device are displayed. Depending on the media server, the folder names may vary.
 - If you cannot see the folders, check that you have enabled media sharing on the selected device so that the content is available for sharing.
- 4 Select a file, and then press **OK**.
 - Some media files may not play due to compatibility issues. Check the file formats supported by your home theater.
- Fress the play buttons to control play (see 'Play buttons' on page 16).

Karaoke

Available only in selected model and region

Play a Karaoke disc on your home theater and sing along with the music.

What you need

- A Karaoke microphone.
- Karaoke discs.

Caution

- To prevent loud feedback or unexpected noise, turn the microphone volume to the minimum before you connect the microphone to your home theater.
- 1 Connect a karaoke microphone to the MIC connector on your home theater.
- 2 Switch your TV to the correct source for your home theater.
- Make sure that audio post processing is enabled on your home theater (see 'Speaker settings' on page 30).
- While playing a karaoke disc, press OPTIONS.
 - → The options menu is displayed.
- Select [Karaoke], and then press OK.→ The karaoke setup menu is displayed.
- 6 Press the Navigation buttons (up/down) and OK to change the following settings:
 - [Microphone]: Turn the microphone on or off.
 - [Microphone volume]: Change the microphone volume.
 - **[Echo]**: Change the echo level.
 - **[Key]**: Change the pitch to match your voice
 - [Vocal support]: Select an audio mode, or turn the vocal on or off.

Choose sound

This section helps you choose the ideal sound for your video or music.

- 1 Press ## SOUND SETTINGS.
- Press the Navigation buttons (left/right) to access the sound options on the display.

Description		
Select a sound mode.		
Select surround sound or		
stereo sound.		
Delay the audio to match the		
video.		
Reduce sudden changes in		
volume, for example, during		
TV commercials.		

- 3 Select an option, and then press OK.
- 4 Press → BACK to exit.
 - If you do not press a button within a minute, the menu exits automatically.

Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press III SOUND SETTINGS.
- 2 Select SURROUND, and then press OK.
- Press the Navigation buttons (up/down) to select the following settings:
 - AUTO: Surround sound based on the audio stream.
 - V SURR: Virtual Surround.
 - STEREO:Two-channel stereo sound. Ideal for listening to music.
- 4 Press OK to confirm.

Sound mode

Select predefined sound modes to suit your video or music.

- 1 Make sure that audio post processing is enabled at the speakers (see 'Speaker settings' on page 30).
- Press ## SOUND SETTINGS.
- 3 Select **SOUND**, and then press **OK**.
- 4 Press the Navigation buttons (up/down) to select a setting on the display:
 - AUTO: Intelligently select the best sound setting based on the audio played.
 - BALANCED: Experience the original sound of your movies and music, without added sound effects.
 - POWERFUL: Enjoy thrilling arcade sounds, ideal for action-packed videos and loud parties.
 - BRIGHT: Spice up your dull movies and music with added sound effects.
 - CLEAR: Hear every detail in your music and clear voices in your movies.
 - WARM: Experience spoken words and music vocals in comfort.
 - PERSONAL: Personalize the sound based on your preferences.
- **5** Press **OK** to confirm.

Equalizer

Change the high frequency (treble), mid frequency (mid), and low frequency (bass) settings of the home theater:

- 1 Press Ht SOUND SETTINGS.
- 2 Select SOUND > PERSONAL, and then press Navigation buttons (right).
- 3 Press the Navigation buttons (up/down) to change bass, mid or treble frequency.
- 4 Press **OK** to confirm.

Auto volume

Turn on auto volume to reduce sudden changes in volume, for example, during TV commercials.

- 1 Press Ht SOUND SETTINGS.
- 2 Select AUTO VOL, and then press OK.
- 3 Press the Navigation buttons (up/down) to select ON or OFF.
- 4 Press OK to confirm.

6 Change settings

The home theater settings are already configured for optimal performance. Unless you have a reason to change a setting, we recommend that you keep the default setting.



Note

- You cannot change a setting that is grayed out.
- To return to the previous menu, press BACK. To exit the menu, press from (Home).

Language settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
 - [Menu language]: Select a display language for menu.
 - [Audio]: Select an audio language for discs.
 - [Keyboard layout]: Select a keyboard in your language.
 - **[Subtitle]**: Select a subtitle language for discs.
 - [Disc menu]: Select a menu language for discs.



Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 43).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Picture and video settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
 - **[TV display]**: Select a picture format to fit the TV screen.
 - [HDMI video]: Select the resolution of video signal that is output from HDMI OUT (ARC) on your home theater.
 To enjoy the selected resolution, make sure that your TV supports the selected resolution.
 - [HDMI Deep Color]: Recreate the natural world on your TV screen by displaying vivid images using billion colors. Your home theater must be connected to a Deep Color enabled TV through an HDMI cable.
 - [Picture settings]: Select pre defined color settings for the video display. Select [User] to create your own setting.
 - [Watch 3D video]: Set HDMI video to support 3D or 2D video.



Note

 If you change a setting, make sure that the TV supports the new setting.

Audio settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio], and then press OK.
- Press the Navigation buttons and OK to select and change:
 - [Night mode]: For quiet listening, decrease the volume of loud sounds on your home theater: Night mode

- is only available in DVDs and Blu-ray discs with Dolby Digital, Dolby Digital Plus, and Dolby True HD soundtracks.
- [HDMI Audio]: Set the HDMI audio output from your TV, or disable HDMI audio output from the TV.
- [Audio sync]: Set audio delay if audio and video cannot be matched.

Parental control settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
 - [Change Password]: Set or change your password for parental control access. If you do not have a password or have forgotten your password, enter 0000.
 - [Parental control]: Restrict access to discs that are recorded with age ratings. To play all discs, irrespective of the ratings, select 8 or [Off].

Display settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
 - [Auto subtitle shift]: Enable or disable automatic repositioning of subtitles on TVs that support this feature.
 - [Display panel]: Set the brightness of the home theater front panel display.
 - [VCD PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

Energy saving settings

- 1 Press **(Home)**.
- 2 Select [Setup], and then press OK.
- 3 Select [Preference], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
 - [Screen saver]: Switch the home theater to screen saver mode after 10 minutes of inactivity.
 - [Auto standby]: Switch the home theater to standby after 30 minutes of inactivity. This timer works only when a disc or USB play is paused or stopped.
 - [Sleep timer]: Set the duration of the sleep timer so that the home theater is switched to standby after the specified period.

Speaker settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced], and then press OK.
- 4 Press the Navigation buttons and OK to select and change:
 - [Enhanced audio]: Select [On] to enable audio post processing at the speaker and enable karaoke settings (if your product supports Karaoke). To play the original audio of the disc, select [Off].



 Enable audio post processing before you select a predefined sound mode (see 'Sound mode' on page 28)

Restore default settings

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Restore default settings], and then press OK.
- 4 Select [OK], and then press OK to confirm.
 - → Your home theater is reset to its default settings except for some settings such as parental control and DivX VOD registration code.

7 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.



Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

Check software version

Check the version of the current software installed on your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Advanced] > [Version information].
 - → The software version is displayed.
 - 'System SW' displayed indicates the overall software version. 'Subsystem SW' indicates the version of different features. For example, if 'Subsystem SW' is '35-00-00-05", the last two digits ('05') indicate the current version of the onscreen help installed on your home theater

Update software through USB

What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 256MB of memory.
 Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

Step 1: Download the latest software

- Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips.com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.
 - → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
 - → The files are extracted under the UPG folder of your USB flash drive.
- **6** Disconnect the USB flash drive from your computer.

Step 2: Update the software



Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
 - Make sure that the disc compartment is closed and no disc inside.
- Press ♠ (Home).

- 3 Select [Setup], and then press OK.
- 4 Select [Advanced] > [Software update] > [USB].
- 5 Follow the onscreen instructions to confirm the update.
 - → Update process takes about 5 minutes to complete.
 - → Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it

Update software through the Internet

- 1 Connect your home theater to a home network with a high-speed Internet access (see 'Connect and set up a home network' on page 13).
- Press ♠ (Home).
- 3 Select [Setup], and then press OK.
- 4 Select [Advanced] > [Software update] > [Network].
 - If an upgrade media is detected, you are prompted to start or cancel the update.
 - → Downloading of the upgrading file may take long, depending on your home network condition.
- 5 Follow the onscreen instructions to confirm the update.
 - → Update process takes about 5 minutes to complete.
 - Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

Update the onscreen help

If the current version of the onscreen help is lower than the latest version available on www.philips.com/support, download and install the latest onscreen help (see 'Check software version' on page 31).

What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 35MB of memory.
 Do not use a USB hard drive.
- A computer with internet access.
- An archive utility that supports the ZIP file format.

Step 1: Download the latest onscreen help

- Connect a USB flash drive to your computer.
- 2 In your web browser, go to www.philips.com/support.
- 3 At the Philips support website, find your product and click on User manuals, and then locate the User Manual Upgrade Software.
 - → The help update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the help update file in the root directory.
 - → A file named 'HTBxxxxeDFU.zip' is extracted under the UPG folder of your USB flash drive, 'xxxx' being the model number of your home theater.
- 6 Disconnect the USB flash drive from your computer.

Step 2: Update onscreen help



Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
 - Make sure that the disc compartment is closed and there is no disc inside.
- 2 Press ♠ (Home).
- 3 Enter 338 on the remote control.
- 4 Follow the onscreen instructions to confirm the update.
- 5 Disconnect the USB flash drive from the home theater:

8 Product specifications



 Specifications and design are subject to change without notice.

Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD	BD
Europe, United Kingdom		
Asia Pacific, Taiwan, Korea		
Latin America		
Australia, New Zealand		
Russia, India		
China		

Media formats

 AVCHD, BD, BD-R/ BD-RE, BD-Video, DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX Plus HD media, USB storage device

File formats

- Audio:
 - .aac, .mka, .mp3, .wma, .wav, .mp4, .m4a, .flac, .ogg
 - .ra (Available only in Asia Pacific and China)
- Video:
 - avi, .divx, .mp4, .m4v, .mkv, .m2ts, .mpg, .mpeg, .flv, .3gp
 - .asf, .wmv, .rmvb, .rm, .rv (Available only in Asia Pacific and China)
- Picture: .jpg, .jpeg, .png

Audio formats

Your home theater supports the following audio files.

Extension	Con-	Audio	Bit rate
	tainer	codec	
.mp3	MP3	MP3	Upto 320 kbps
.wma	ASF	WMA	Upto 192 kbps
		WMA Pro	Upto 768 kbps
.aac	AAC	AAC,	Upto 192 kbps
		HE-AAC	
.wav	WAV	PCM	27.648 Mbps
.m4a	MKV	AAC	192 kbps
.mka	MKA	PCM	27.648 Mbps
		Dolby	640 kbps
		Digital	
		DTS core	1.54 Mbps
		MPEG	912 kbps
		MP3	Upto 320 kbps
		WMA	Upto 192 kbps
		WMA Pro	Upto 768 kbps
		AAC,	Upto 192 kbps
		HE-AAC	
.ra	RM	AAC,	Upto 192 kbps
		HE-AAC	
		Cook	96469 bps
.flac	FLAC	FLAC	Upto 24 bps
.ogg	OGG	Vorbis	Variable bit rate,
			maximum block
			size 4096

Extension	 Audio codec	Bit rate
	FLAC	Upto 24 bps
	OGGPCM	No limit
	MP3	Upto 320 kbps

Video formats

If you have a high definition TV, your home theater allows you to play your:

- video files with a resolution of 1920 x 1080 pixels (except DivX, which has a resolution of 77220 x 576) and frame rate of 6 ~ 30 frames per second.
- photo files with a resolution of 18 M pixels.

.avi files in AVI container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS	DivX 3.11, DivX 4.x,	10 Mbps max
core, MP3, WMA	DivX 5.x, DivX 6.x	
	MPEG 1, MPEG 2	40 Mbps
	MPEG 4 SP / ASP	38.4 Mbps
	H.264/AVC upto HiP@5.1	25 Mbps
	WMV9	45 Mbps

.divx files in AVI container

Audio codec	Video codec	Bit rate
PCM, Dolby	DivX 3.11,	10 Mbps
Digital, MP3,	DivX 4.x,	max
WMA	DivX 5.x,	
	DivX 6.x	

.mp4 or .m4v files in MP4 container

Audio codec	Video codec	Bit rate
Dolby Digital,	MPEG 1,	40 Mbps
MPEG, MP3,	MPEG 2	
AAC, HE-AAC,		
DD+		

Audio codec	Video codec	Bit rate
	MPEG 4 ASP	38.4 Mbps
	H.264/AVC HiP@5.1	25 Mbps

.mkv files in MKV container

Audio codec	Video codec	Bit rate
PCM, Dolby Digital, DTS core, MPEG, MP3, WMA, AAC, HE-AAC, DD+	DivX Plus HD	30 Mbps
	MPEG 1, MPEG 2	40 Mbps
	MPEG 4 ASP	38.4 Mbps
	H.264/AVC HiP@5.1	25 Mbps
	WMV9	45 Mbps

.m2ts files in MKV container

Audio codec

Addio codec	VIGEO COGEC	DitTate
PCM, Dolby Digital, DTS core, MPEG, MP3, WMA, AAC, HE-AAC, DD+	MPEG 1, MPEG 2	40 Mbps
	MPEG 4 ASP	38.4 Mbps
	H.264/AVC HiP@5.1	25 Mbps
	WMV9	45 Mbps

Video codec

Bit rate

.asf and .wmv files in ASF container (Available only in Asia Pacific and China)

Audio codec	Video codec	Bit rate
Dolby Digital, MP3, WMA, DD+	MPEG 4 ASP	38.4 Mbps
	H.264/AVC HiP@5.1	25 Mbps
	WMV9	45 Mbps

.mpg and .mpeg files in PS container

Audio codec	Video codec	Bit rate
PCM, DTS core,	MPEG 1,	40 Mbps
MPEG, MP3	MPEG 2	

.flv files in FLV container

Audio codec	Video codec	Bit rate
MP3, AAC	H.264/AVC upto HiP@5.1	25 Mbps
	H.263	38.4 Mbps
	On2 VP6	40 Mbps

.3gp files in 3GP container

Audio codec	Video codec	Bit rate
AAC, HE-AAC	MPEG 4 ASP	38.4 Mbps
	H,264/AVC	25 Mbps
	upto HiP@5.1	max

.rm, .rv, and .rmvb files in RM container (Available only in Asia Pacific and China)

Audio codec	Video codec	Bit rate
AAC, COOK	RV30, RV40	40 Mbps

Amplifier

- Total output power:
 - 550W RMS (+/- 0.5 dB, 30%THD) / 440W RMS (+/- 0.5 dB, 10%THD)
- Frequency response: 20 Hz-20 kHz / ± 3 dB
- Signal-to-noise ratio:65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX: 2 V
 - Music iLink: 300 mV

Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p24

Audio

- S/PDIF Digital audio input:
 - Optical:TOSLINK
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 32 kbps 320 kbps
 - WMA: 48 kbps 192 kbps

Radio

- Tuning range:
 - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
 - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response:
 FM 180 Hz-12.5 kHz / ±3 dB

USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS

Main unit

- Power supply:
 - Europe/China: 220-240 V~, 50 Hz
 - Latin America/Asia Pacific: 110-127 V/220-240 V~, 50-60 Hz
 - Russia/India: 220-240 V~, 50 Hz
- Satellite speakers: 4 x 2.5" speakers + 2 x 2.5" radiators
- Power consumption: 60 W
- Standby power consumption: 0.5 W
- Dimensions (WxHxD): 1060 x 83.1 x 194.8 mm
- Weight: 4.9 KG
- Operating temperature and humidity: 0°C to 40°C, 5% to 90% Humidity for all climates

 Storage temperature and humidity: -40 °C to 70 °C, 5% to 95%

Subwoofer

- Power supply:
 - Europe/China: 220-240 V~, 50 Hz
 - Latin America/Asia Pacific: 110-127 V/220-240 V~, 50-60 Hz
 - Russia/India: 220-240 V~, 50 Hz
- Impedance: 3 ohm
- Speaker drivers: 1 x 6.5" woofer
- Power consumption: 50 W
- Standby power consumption: 0.5 W
- Dimensions (WxHxD):
 195 x 298 x 410 mm
- Weight: 7.2 KG

Remote control batteries

2 x AAA-R03-1.5 V

Laser

- Laser Type (Diode): InGaN/AlGaN (BD), AlGaInP (DVD/CD)
- Wave length: 405 +7 nm/-7 nm (BD), 655 +10 nm/-10 nm (DVD), 790 +10 nm/-20 nm (CD)
- Output power (Max. ratings):
 20 mW (BD), 6 mW (DVD), 7 mW (CD)

9 Troubleshooting



Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www.philips.com/support.

Main unit

The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

Picture

No picture.

 Make sure that the TV is switched to the correct source for the home theater.

No picture on a TV connected through HDMI.

- Make sure that you use a High Speed HDMI cable to connect the home theater and TV. Some Standard HDMI cables do not display properly for some images, 3D video, or Deep Color.
- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Press A (Home) and then 731 on the remote control to restore the default picture resolution.
- Change the HDMI video setting, or wait for 10 seconds for auto recovery (see 'Picture and video settings' on page 29).

Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV.

Sound

No sound from home theater speakers.

- Connect the audio cable from your home theater to yourTV or other devices.
 However, you do not need a separate audio connection when:
 - the home theater and TV are connected through an HDMI ARC connection, or
 - a device is connected to the HDMI IN connector on your home theater.
- Set up the audio for the connected device (see 'Set up the audio' on page 13).
- Reset your home theater to its factory settings (see 'Restore default settings' on page 31), and then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

No sound from wireless subwoofer.

- 1 Switch off the home theater and then switch it on again.
- 2 Switch the home theater to AUX source.
- Press and hold **CONNECT** on the subwoofer until the indicator on the back of the subwoofer blinks.
- Press and hold Navigation button ► (right) for at least three seconds.
 - When the wireless connection succeeds, the indicator on the subwoofer lights up.
 - → If the wireless pairing fails, repeat steps 1 to 4 to connect your subwoofer to the SoundBar.

Distorted sound or echo.

- If you play audio from the TV through the home theater, make sure that the TV is muted.
- If the sound from the wireless subwoofer is interrupted or distorted, make that the subwoofer is far away from microwave ovens, DECT phones, or other Wi-Fi devices.

Audio and video are not synchronized.

- 1) Press III SOUND SETTINGS.
 - 2) Press the Navigation buttons (left/right) to select AUD SYNC, and then press OK.
 - 3) Press the **Navigation buttons** (up/down) to synchronize the audio with the video

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 34).
- Make sure that the home theater supports the region code of the disc (see 'Region codes' on page 34).
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'HomeTheater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

DivX or RMVB/RM subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 17).
- Select the correct character set:
 - 1) Press OPTIONS.
 - 2) Select [Character set].
 - 3) Select the supported character set.
 - 4) Press OK.

Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater

'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

EasyLink does not work.

- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is turned on (see 'Set up EasyLink (HDMI-CEC control)' on page 12).
- For TVs from different manufacturers, the HDMI CEC could be called differently. Check the TV user manual on how to enable it

When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

Cannot access BD-Live features.

- Make sure that the home theater is connected to the network. Use a wired network connection (see 'Set up the wired network' on page 14), or wireless network connection (see 'Set up the wireless network' on page 14).
- Make sure that the network is set up.
 Use a wired network installation (see 'Set
 up the wired network' on page 14), or
 wireless network installation (see 'Set up
 the wireless network' on page 14).
- Make sure that the Blu-ray disc supports BD-Live features.
- Clear memory storage (see 'BD-Live on Blu-ray' on page 17).

Cannot play video or photos from an iPod or iPhone on the TV.

- Browse and select videos and photos from the iPod or iPhone screen, and play them on your TV.
- Make sure that the iPod or iPhone software has not been tampered with or illegally modified.

Cannot view pictures from an iPod or iPhone on the TV.

- Connect a yellow composite cable to the iPod dock and the TV.
- Switch the TV to the AV/VIDEO source (corresponding to the yellow composite cable).
- Press the play button on the iPod or iPhone to start a slideshow.
- Make sure that the iPod or iPhone software has not been tampered with or illegally modified.

My 3D video played in 2D mode.

- Make sure that your home theater is connected to a 3DTV through an HDMI cable.
- Make sure that the disc is a Blu-ray 3D disc, and the Blu-ray 3D video option is on (see 'BD-Live on Blu-ray' on page 17).

TV screen is black when you play a Blu-ray 3D video or a DivX copy protected video.

- Make sure that the home theater is connected to the TV through an HDMI cable.
- Switch to the correct HDMI source on the TV

Cannot download video from an online video store.

- Make sure that your home theater is connected to the TV through an HDMI cable.
- Make sure that the USB storage device is formatted, has enough memory to download the video.
- Make sure that you have paid for the video, and it is within the rental period.

- Make sure that the network connection is good. Use a wired network connection (see 'Set up the wired network' on page 14), or a wireless network connection (see 'Set up the wireless network' on page 14).
- Visit the video store website for more information

Network

Wireless network distorted or not found.

- Make sure that the wireless network is not disturbed by microwave ovens, DECT phones, or other neighboring Wi-Fi devices.
- Place the wireless router and the home theater within five meters of each other.
- If the wireless network does not work properly, try a wired network installation (see 'Set up the wired network' on page 14).

10 Notice

This section contains the legal and trademark notices.

Copyright



Be responsible Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

This product incorporates proprietary technology under license from Verance Corporation and is protected by U.S. Patent 7,369,677 and other U.S. and worldwide patents issued and pending as well as copyright and trade secret protection for certain aspects of such technology. Cinavia is a trademark of Verance Corporation. Copyright 2004-2010 Verance Corporation. All rights reserved by Verance. Reverse engineering or disassembly is prohibited.

Cinavia notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at http://www.cinavia.com. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

Open source software

Philips Electronics Singapore Pte Ltd hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licenses. This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain source code, please contact open.source@philips.com. If you prefer not to use email or if you do not receive confirmation receipt within a week after mailing to this email address, please write to "Open Source Team, Philips Intellectual Property & Standards, P.O. Box 220, 5600 AE Eindhoven, The Netherlands". If you do not receive timely confirmation of your letter, please email to the email address above. The texts of the licenses and acknowledgements for open source software used in this product are included in the user manual.

RMVB end user agreement (Asia Pacific and China only)

Notes to End User:

By using this product with RealNetworks software and services, the end user agrees to the following terms of REALNETWORKS, INC:

- End User may only use the software for private, non-commercial use in accordance with the terms of RealNetworks EULA.
- End User is not allowed to modify, translate, reverse engineer, decompile, dissemble or use other means to discover the source code or otherwise replicate the functionality of the Real Format Client Code, except to the extent that this restriction is expressly prohibited by applicable law.
- RealNetworks Inc. disclaims all warranties and conditions other than those set forth

in this Agreement which are in lieu of all other warranties, whether express and implied, including but not limited to any implied warranties or conditions of merchantability and fitness for a particular purpose; and effectively exclude all liability for indirect, special, incidental and consequential damages, such as but not limited to lost profits.

Compliance

€0700

This product complies with the radio interference requirements of the European Community.

Hereby, Philips Consumer Lifestyle, declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/FC.

A copy of the EC declaration of Conformity is available in the Portable Document Format (PDF) version of the user manual at www.philips.com/support.

Trademarks



"Blu-ray 3D" and "Blu-ray 3D" logo are trademarks of Blu-ray Disc Association.



BONUSVIEW™

'BD LIVE' and 'BONUSVIEW' are trademarks of Blu-ray Disc Association.



'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation.



Java and all other Java trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries



Manufactured under license under U.S. Patent Nos: 5,956,674; 5,974,380; 6,226,616; 6,487,535; 7,392,195; 7,272,567; 7,333,929; 7,212,872 & other U.S. and worldwide patents issued & pending. DTS-HD, the Symbol, & DTS-HD and the Symbol together are registered trademarks & DTS-HD Master Audio | Essential is a trademark of DTS, Inc. Product includes software. @ DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX °, DivX Certified °, DivX Plus ° HD and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX ° is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX

Certified * device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified * device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



(Available only in Asia Pacific and China) RealNetworks, Real, the Real logo, RealPlayer, and the RealPlayer logo are trademarks or registered trademarks of RealNetworks, Inc.



11 Language code

AbAbrazian						
Afrikaans 6570 Islenska 7383 Quechua 8185 Amharic 6577 Italiano 7384 Raeto-Romance 8277 Arabic 6582 Ivrit 7269 Romanian 8278 Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8371 Avestan 6569 Kalaallisut 7576 Sango 8371 Aymara 6589 Kananda 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 5583 Sardnian 8362 Bashas Melayu 7783 Kazakh 7575 Shona 8378 Bashari 6665 Kernewek 7587 Shona 8378 Balarusian 6673 Kirghiz 7589 Sinhalese 8373 Bishara 6672 Kirghiz 7589 Sinhalese 8373 Bosanski 6681 Kuryamari, Kwanyama	Abkhazian	6566	Inupiaq	7375	Pushto	8083
Arnharic 6572 Italiano 7384 Raeto-Romance 8277 Arabic 6582 Ivrit 7269 Romanian 8278 Armenian 7289 Japanese 7465 Romanian 8278 Assamese 6589 Kalalisut 7576 Sango 8371 Aymara 6589 Kashiri 7583 Sardinian 8365 Azerhajiani 6590 Kashiri 7555 Serbian 8382 Bahasa Melayu 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shqip 8381 Belarusian 6673 Kirghiz 7589 Sindalese 8373 Bishara 6673 Komi 7586 Slovensky 8373 Bishari 6672 Kirghiz 7589 Sindalese 8373 Bishari 6672 Kurghiz 7589 Slovensky 8373 Bokomāl, Norwegian 7666 Korean	Afar	6565	Irish	7165	Russian	8285
Arabic 6582 Ivrit 7269 Romanian 8279 Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8377 Avestan 6589 Kalaallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shoip 8381 Belarusian 6672 Kirghiz 7586 Slovenish 8381 Bishari 6673 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7579 Slovenish 8373 Brezhoneg 6682 Kurdish 8585 Sotho; Southern 8384 Bulgarian 6671 Lao <t< td=""><td>Afrikaans</td><td>6570</td><td>Íslenska</td><td>7383</td><td>Quechua</td><td>8185</td></t<>	Afrikaans	6570	Íslenska	7383	Quechua	8185
Arabic 6582 Ivrit 7269 Romanian 8279 Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7486 Samoan 8377 Avestan 6589 Kalaallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shoip 8381 Belarusian 6672 Kirghiz 7586 Slovenish 8381 Bishari 6673 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7579 Slovenish 8373 Brezhoneg 6682 Kurdish 8585 Sotho; Southern 8384 Bulgarian 6671 Lao <t< td=""><td>Amharic</td><td>6577</td><td>Italiano</td><td>7384</td><td>Raeto-Romance</td><td>8277</td></t<>	Amharic	6577	Italiano	7384	Raeto-Romance	8277
Armenian 7289 Japanese 7465 Rundi 8278 Assamese 6583 Javanese 7466 Samoan 8377 Avestan 6589 Kalaallisut 7576 Sange 8371 Aymara 6589 Kashiri 7578 Sanskrit 8365 Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shop 8381 Belarusian 6672 Kirghiz 7589 Sinhales 8373 Bislama 6672 Kirghiz 7589 Sinhales 8373 Bosanski 6673 Korni 7578 Slovensky 8373 Bosanski 6682 Kurdish 7585 Sotho, Southern 8378 Burmese 7789 Latian 7665 South Ndebele 7882 Castellano, Español 6983 Latvian						
Assamese 6.583 javanese 7.486 Samoan 8377 Avestan 6.589 Kalaallisut 7576 Sango 8371 Aymara 6.589 Kashmiri 7583 Sardinian 8365 Azerhaijani 6.590 Kashmiri 7583 Sardinian 8365 Bashkir 6669 Khren 7587 Shona 8378 Bashkir 6669 Khren 7577 Shojp 8381 Bengali 6678 Kiryahiz 7589 Sindhese 8373 Bihari 6672 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7579 Slovenian 8378 Brezhoneg 6681 Kurdish 7585 Sothos: Southern 8373 Brezhoneg 6682 Kurdish 7585 Sothos: Southern 8384 Bulgarian 6671 Lao 7679 South Mebele 7882 Bulgarian 6671 Lao </td <td></td> <td></td> <td></td> <td></td> <td></td> <td></td>						
Aymara 6569 Kahallisut 7576 Sango 8371 Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaijani 6590 Kasahmiri 7583 Sardinian 8367 Bahasa Melayu 6665 Kernewek 7587 Septian 8382 Belarusian 6665 Kernewek 7587 Shop 8381 Belarusian 6667 Kirghiz 7589 Sindhi 8368 Bislama 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Komi 7586 Slovensky 8373 Bosanski 6665 Korean 7579 Slovensky 8373 Bosanski 6682 Kurdish 7585 Sothor Southern 8384 Bugarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Lativan 7665 Sundanese 8385 Castellano 6765 Letzeburgesch; <td></td> <td></td> <td>* *</td> <td></td> <td></td> <td></td>			* *			
Aymara 6589 Kannada 7578 Sanskrit 8365 Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bashkir 6665 Kernewek 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Bengali 6678 Kinyarwanda 8287 Shona 8378 Belarusian 6667 Kirighiz 7589 Sinhales 8373 Bishari 6672 Kirghiz 7589 Sinhalese 8373 Bokmål, Norwegian 7866 Korcan 7579 Slovensky 8373 Bosanski 6681 Kuanyama; Kwanyama 7574 Somali 8376 Bugarian 6671 Lao 7679 South Nebele 7882 Bugarian 6671 Lao 7665 Suondanese 8385 Castellano, Español 6983 Latvian 7665 Suondanese 8385 Chatellano, Español 6983			J			
Azerhaijani 6590 Kashmiri 7583 Sardinian 8367 Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bahasa Melayu 7783 Kazakh 7577 Serbian 8387 Belarusian 6669 Khmer 7577 Shqip 8381 Bihari 6678 Kinyarwanda 8287 Sindhi 8368 Bihari 6673 Komi 7586 Slovenishy 8373 Bosanski 6673 Komi 7586 Slovenian 8376 Bosanski 6680 Kurdish 7585 Sohov, Southern 8373 Boronge 6682 Kurdish 7585 Sorbo, Southone 1 8373 Burmese 7789 Latina 7665 Soundanese 8385 Castellano, Español 6983 Latvian 7686 Suomi 7073 Castalano 6772 Limburgan; Limburgar 7673 Swati 8383 Chamorro 6772					0	
Bahasa Melayu 7783 Kazakh 7575 Serbian 8382 Bashkir 6665 Kernewek 7587 Shona 8378 Bengali 6678 Kinyarwanda 8287 Shohip 8381 Bengali 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Suomi 7073 Castellano, Español 6983 Latvian 7686 Swatini 8385 Chechen 6769 Ligala 7679 South Ndebele 7882 Chekhen 6769 Ligala 7678 Swati 8383 Checken 6769 Ligala						
Bashkir 6665 Kernewek 7587 Shona 8378 Belarusian 6669 Khmer 7577 Shqip 8381 Bengali 6678 Kinyarwanda 8287 Sindhi 8368 Bihari 6673 Komi 7586 Slovensky 8373 Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sotoho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Castellano, Español 6983 Latvian 7665 Suodinese 8385 Castellano, Español 6983 Latvian 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Chewa; Chichewa; Nyanja 78						
Belarusian 6669 Khmer 7577 Shqip 838 Bengali 6678 Kinyarwanda 8287 Sindhi 8368 Silhari 6672 Kirghiz 7589 Sinhalese 8373 Sishama 6673 Komi 7586 Slovensky 8373 Slovenski 683 Kuanyama; Kwanyama 7579 Slovenian 8376 Slovenski 683 Kuanyama; Kwanyama 7574 Somali 8379 Sosanski 6682 Kurdish 7585 Sotho: Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 South Ndebele 7678 South Ndebele 7679 South Ndebele 7678 South Ndebele 7679 South Ndebele 7678 South Ndebele 7679 Ndebele 7678 South Ndebele 7679 Ndebele 7679 Ndebele 7679 Ndebele 7679 Ndebele 7679 Ndebele 7679 Ndebele 7670 Ndebele 7679 Ndebele 7679 Ndebele 7670 Ndebele 7670 Ndebele 7679 Nd						
Bengali 6678 Kinyarwanda 8287 Sindhi 8368 Bihari 6672 Kirghiz 7589 Sinhalese 8373 8373 8373 8373 8373 8373 8373 8373 8373 8373 8373 8373 8374 8375 8376						
Bihari 6672 Kirghiz 7589 Sinhalese 8373 Bislama 6673 Komi 7586 Slovensky 8373 Bosanski 6683 Kuanyama; Kwanyama 7579 Slovensian 8376 Bosanski 6682 Kurdish 7585 Sotho; Southern 8384 Bugarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Lativan 7665 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chechen 6769 Limburgan; Limburger 7678 Swenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Chewa; Chichewa; Payanja 7889 Lithuanian 7684 Tagalog 8476 Chewa; Chichewa; Slavonic 6785 Malecedonian 7775 Tajik 8471 <						
Bislama 6673 Komi 7596 Slovensky 8373 Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kurayama; Kwanyama 7574 Somali 8376 Brezhoneg 6682 Kurdish 7585 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7665 Sundanese 8385 Castellano, Español 6765 Letzeburgesch; 7666 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 中文 9072 Luxembourgish; 7666 Tahittian 8489 Churang; Zhuang 9065 Macedonian 7775 Tajiik 8471 Church Slavic; Slavonic 6785 Malgasy 7771 Tamil 8465 Churash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Cesky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tsonga 8483 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Tiwken 8475 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7871 Volapuk 8679 Gaelic; Scottish Gaelic 7168 Norwegian Nynorsk; 7686 Wolsh 6789 Hurdin 7273 Norwegian Nynorsk; 7677 Ndolon 8775 Hurdin 7273 Norwegian Nynorsk; 7677 Ndolon 8779 Hindi 7273 Oromo 7977 Zulu 9085 Interlingua (International)/7365 Persian 7065 Norsk 8076 Tripingua (International)/7365 Persian 7065 Norsk 8076 Tripingua (International)/7365 Persian 7065 Norsk 8076 Tripingua (International)/7365 Persian 7065 Norsk 7065 Norsk 7065 Norsk 70	•					
Bokmål, Norwegian 7866 Korean 7579 Slovenian 8376 Bosanski 6683 Kuanyama; Kwanyama 7574 Somali 8376 Bosanski 6682 Kurdish 75785 Sotho; Southern 8384 Bulgarian 6671 Lao 7679 South Ndebele 7882 Surmese 7789 Latina 7665 Sundanese 8385 Surmese 7789 Latina 7665 Sundanese 8385 Surmese 7672 Limburgan; Limburger 7673 Swati 8387 Chechen 6769 Lingala Lithuanian 7684 Swahili 8387 Chechen 6769 Lingala Lithuanian 7684 Tagalog 8476 Tagalog 8476 Tagalog 8476 Tajik 8471 Tamil 8465 Tajik 8472 Tajik 8472 Tajik 8472 Tajik 8472 Tajik 8473 Tajik 8474 Tajik 8474 Tajik 8474 Tajik 8474 Tajik 8474 Tajik 8474 Tajik 8475 Tajik	Bihari		0			
Bosanski 6682 Kuanyama; Kwanyama 7574 Somali 8379 Brezhoneg 6682 Kurdish 7585 Sorbo; Southern 8384 Burmese 7789 Latina 7665 South Ndebele 7882 Burmese 7789 Latina 7665 Suomi 7073 Castellano, Español 6785 Letzeburgesch; 7666 Swahili 3387 Chamorro 6772 Limburgan; Limburger 7673 Swati 3383 Checker, Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chvussh 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Cesky 6783 Maltese 7784 Thai 8472 Dansk 6865	Bislama	6673	Komi	7586	Slovensky	8373
Brezhoneg 6682	Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bulgarian 6671	Bosanski	6683	Kuanyama; Kwanyama	7574	Somali	8379
Bulgarian 6671 Lao 7679 South Ndebele 7882 Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7686 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburgar 7673 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Chuang; Zhuang 905 Macedonian 7775 Tajijk 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chovash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Cesky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maordi 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Türkçe 8482 Euskara 6986 Naoni 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Türkçe 8482 Euskara 6985 Nauru 7865 Türkçe 8482 Euskara 6986 Naoni 7778 Türkçe 8482 Euskara 6987 Nauru 7865 Türkçe 8482 Euskara 6986 Naoni 7778 Türkçe 8482 Euskara 6986 Naoni 7788 Türkçe 8482 Euskara 6986 Naoni Navajo 7886 Twi 8487 Français 7082 Ndebele, North 7868 Uighur 8571 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Socttish Gaelic 7168 Norsk 7879 North Nedele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7879 Gujarati 7185 Occitan; Provencal 7967 Palia 8073 Hirri Motu 7279 Ossetian; Ossetic 7983 Hirri Motu 7279 Ossetian; Ossetic 7983 Hirri Motu 7279 Pali 8073 Hirri Motu 7279 Pali 8065 Interlingue (International)7365 Persian 7065 Interlingue (International)7365 Polski 8076	Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Burmese 7789 Latina 7665 Sundanese 8385 Castellano, Español 6983 Latvian 7686 Suomi 7073 7073 7073		6671	Lao	7679	South Ndebele	7882
Castellano, Español 6983 Latvian 7686 Suomi 7073 Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7678 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Churash 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 9484 Corsican 6779 Malayalam 7776 Telugu 8469 Cesky 6783 Maltese 7784 Thai 8472 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathil 7782 Tonga (Tonga Islands) 8479 Esperanto 6979 Moldav	•	7789	Latina	7665	Sundanese	8385
Catalán 6765 Letzeburgesch; 7666 Swahili 8387 Chamorro 6772 Limburgan; Limburger 7673 Swati 8383 Chechen 6769 Lingala 7678 Svenska 8386 Chechen 6769 Lingala 7684 Tagalog 8476 Cheva; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 Chuzhor, Slavonic 6785 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Chuvash 6786 Magyar 7285 Tatar 8484 Chussh 6788 Magyar 7285 Tatar 8484 Chussh 6869 Marta 7186 Tibetan 6679 Deutsch 6869 Marx 7186 Tiprinya 8473 Dzongkha 6889 Marathi <	Castellano, Español	6983	Latvian	7686	Suomi	7073
Chamorro 6772		6765			Swahili	
Chechen 6769 Lingala 7678 Svenska 8386 Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 r ½ 9072 Luxembourgish; 7666 Tahitian 8489 Churang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Churash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malagasy 7776 Telugu 8465 Casky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Estonian 6984 Mongolian			•			
Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog 8476 ψ ★ 9072 Luxembourgish; 7666 Tahitian 8489 ψ ★ 9072 Luxembourgish; 7666 Tahitian 8489 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Chursh Slavic; Slavonic 6786 Magyar 7285 Tatar 8484 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8465 Casky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Esperanto 6979 Moldavian 777						
中文 9072 Luxembourgish; 7666 Tahitian 8489 Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru						
Chuang; Zhuang 9065 Macedonian 7775 Tajik 8471 Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 EAληνικά 6976 Navaho; Navajo						
Church Slavic; Slavonic 6785 Malagasy 7771 Tamil 8465 Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Falonian 6976 Navaho; Navajo 7886 Twi 18487 Faroese 7079 Ndebele, North						
Chuvash 6786 Magyar 7285 Tatar 8484 Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8473 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7888 Uighur 8571 Frysk 7089 Ndonga 7871						
Corsican 6779 Malayalam 7776 Telugu 8469 Česky 6783 Maltese 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 EAhyuká 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 78			0 ,			
Česky 6783 Maltése 7784 Thai 8472 Dansk 6865 Manx 7186 Tibetan 6679 Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7882 Ulghur 8571 Français 7082 Ndebele, South 7882 Ulkrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 787						
Dansk						
Deutsch 6869 Maori 7773 Tigrinya 8473 Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tsomaa 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7886 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 No						
Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands) 8479 English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 EAhyuká 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Nor						
English 6978 Marshallese 7772 Tsonga 8483 Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7886 Uighur 8571 Français 7082 Ndebele, South 7882 Ulkrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 Nor						
Esperanto 6979 Moldavian 7779 Tswana 8478 Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Frysk 7089 Ndonga 7871 Urdu 8582 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Interlingue (International) 7365 Persian 7065 Interlingue 7365 Polski 8076						
Estonian 6984 Mongolian 7778 Türkçe 8482 Euskara 6985 Nauru 7865 Turkmen 8475 Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7888 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelle; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185						
Euskara 6985 Nauru 7865 Turkmen 8475 Eλληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ulcrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 Northern Sami 8369 Welsh 6789 Guarani 71178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265	Esperanto	6979	Moldavian	7779	Tswana	8478
Ελληνικά 6976 Navaho; Navajo 7886 Twi 8487 Faroese 7079 Ndebele, North 7882 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Gallegan 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Hiri Motu	Estonian	6984	Mongolian	7778	Türkçe	8482
Faroese 7079 Ndebele, North 7868 Uighur 8571 Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Orya 7982 Yoruba 8979 Hiri Motu <td< td=""><td>Euskara</td><td>6985</td><td>Nauru</td><td>7865</td><td>Turkmen</td><td>8475</td></td<>	Euskara	6985	Nauru	7865	Turkmen	8475
Français 7082 Ndebele, South 7882 Ukrainian 8575 Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaellic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Guarani 7178 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Forestan 7065 Interlingua (International) 7365	Ελληνικά	6976	Navaho; Navajo	7886	Twi	8487
Frysk 7089 Ndonga 7871 Urdu 8582 Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hiri Motu 7279 Ossetian; Ossetic 7983 Value 9085 Hrwatski 6779 Pali 8073 Persian 7065 Interlingue (International)7365 Per	Faroese	7079	Ndebele, North	7868	Uighur	8571
Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International) 7365 Persi	Français	7082	Ndebele, South	7882	Ukrainian	8575
Fijian 7074 Nederlands 7876 Uzbek 8590 Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Pali 8073 Ido 7379 Pali 8065 Persian 7065 Persian 7065	Frysk	7089	Ndonga	7871	Urdu	8582
Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese 8673 Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 North Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hinidi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Parlai 8073 Ido 7379 Pali 8065 1 Persian 7065 Interlingue 7365 Polski 8076 8076 8076	,	7074	•	7876	Uzbek	8590
Gallegan 7176 Norsk 7879 Volapuk 8679 Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hinid 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Parlai 8073 Ido 7379 Pali 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076	* "	7168		7869	Vietnamese	8673
Georgian 7565 Northern Sami 8369 Walloon 8765 Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International) 7365 Persian 7065 Interlingue 7365 Polski 8076						
Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh 6789 Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 7983 7983 Ho 7379 Pali 8073 8065 8065 8065 Interlingua (International) 7365 Persian 7065 7065 7065 7065 Interlingue 7365 Polski 8076 8076 8076 8076						
Guarani 7178 Norwegian Nynorsk; 7878 Wolof 8779 Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Arrivatski 6779 Pali 8073 Ido 7379 Panjabi 8065 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076 8076 8076						
Gujarati 7185 Occitan; Provencal 7967 Xhosa 8872 Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Voruba 7085 Hrwatski 6779 Pali 8073 8065 Nordian Nordian Interlingua (International)7365 Persian 7065 7065 Nordian Nordian Interlingue 7365 Polski 8076 Nordian Nordian						
Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish 8973 Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 Pali 8073 Ido 100 7379 Paliabi 8065 8065 Interlingua (International)7365 Persian 7065						
Herero 7290 Oriya 7982 Yoruba 8979 Hindi 7273 Oromo 7977 Zulu 9085 Hiri Motu 7279 Ossetian; Ossetic 7983 1983 1983 Hrwatski 6779 Pali 8073 1983 1983 1983 Ido 7379 Panjabi 8065 1983 19						
Hindi 7273			9			
Hiri Motu 7279 Ossetian; Ossetic 7983 Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Hrwatski 6779 Pali 8073 Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076					Zulu	9085
Ido 7379 Panjabi 8065 Interlingua (International)7365 Persian 7065 Interlingue 7365 Polski 8076						
Interlingua (International)7365						
Interlingue 7365 Polski 8076						
Inuktitut 7385 Português 8084	0					
	Inuktitut	7385	Português	8084		

12 Index

		С
2		_
2nd audio language	17	
2nd subtitle language	17	
		0
3		d
_	17	c
3D disc in 2D mode	16	c
3D safety	4	c
3D video	16	C
A		[
	20	
advanced settings amplifier	30 36	_
	36 10	E
audio connection (HDMI ARC)	34	Е
audio formats	3 1 11	e
audio from other devices	29	e
audio language		e
audio options	19 30	
audio post processing		-
audio settings	29	F
auto standby	30	f
auto subtitle shift	30	F
auto volume	28	f
В		-
batteries	37	ŀ
BD-Live	17	- 1
Blu-ray	16	H
Bonus View	17	ŀ
brightness	30	ŀ
S		h
C		ī
change password	30	
character set	17	i
clear BD-Live memory	17	il
connect a digital device (HDMI)	11	i
connect to TV	10	
connectors	7	
control buttons (disc)	16	

control buttons (radio) control buttons (USB) copyright protection customer support	20 16 40 2
D data files deep color default settings device name disc language disc menu display panel disposal DivX	17 29 31 15 29 29 30 4
Easylink (HDMI-CEC) eject disc enhanced audio environment	12 7 30 4
FAQs file formats	31 2 34
H HDMI ARC HDMI audio HDMI-CEC home menu home network	10 29 12 15
I internet iPod music iPod or iPhone	13 21 21

K		R	
karaoke	27	radio	20
keyboard	24	recycling	4
•		region codes	34
		remote control	5
L		repeat	19
language code	43		
		S	
M		shuffle	19
main unit	7	sleep timer	30
media formats	34	slide animation	19
media sharing	25	Smart TV	23
menu language	29	software update	31
musical slideshows	20	software version	31
		sound	27
		speaker specifications	34
N		subtitle language	29
network	13	subtitle position	30
night mode	29	surround sound	27
		synchronize picture and sound	16
0		_	
one-touch play	13	T	
one-touch standby	13	troubleshooting (network)	40
options	19	troubleshooting (picture)	37
		troubleshooting (play)	38
		troubleshooting (sound)	38
P		tune radio stations	20
parental control	30	tuning grid	21
PBC (play back control)	30		
picture options	19	U	
picture resolution	29		
picture settings	29	update onscreen help (user manual)	33
picture-in-picture	17	update software (through Internet)	32
play disc	16	USB mouse	24
play from iPod	21	USB storage device	18
play from PC	26	user manual	2
play radio	20		
play USB storage device	18	V	
play video and slideshow from iPod	22	•	2.0
power settings	30	VCD	30
predefined sound mode	28	video connection (composite video)	11
preference	29	video connection (HDMI ARC)	10
program radio stations	20	video connection (standard HDMI)	10 3 <i>6</i>

video options	19
video settings	29
VOD code (DivX)	18
W	
watch 3D	16
wired network	14
wireless network	14



Specifications are subject to change without notice © 2014 Koninklijke Philips N.V. All rights reserved.

Trademarks are the property of Koninklijke Philips N.V. or their respective owners.

