# Register your product and get support at www.philips.com/welcome

AZ1834



## EN User manual



### 1 Important

## Safety

- (1)Read these instructions.
- 2 Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- 3 4 5 6 Clean only with dry cloth.
- (7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- (8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- (9) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- (10) Only use attachments/accessories specified by the manufacturer.
- (11) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- (12) Unplug this apparatus during lightning storms or when unused for long periods of time.
- (13) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- (14) Battery usage CAUTION - To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
- (15) Apparatus shall not be exposed to dripping or splashing.
- (16) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

- This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- (18) Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

## A Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this
  apparatus from the power.

## Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



### This apparatus includes this label:



# 2 Your CD Soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

## Introduction

With this unit, you can enjoy audio from discs, USB devices, external devices, or radio stations.

The unit supports the following media formats:




## What's in the box

Check and identify the contents of your package:

- Main unit
- 1 x AC power cord
- 1 x MP3 link cable
- Quick start guide
- User manual

## Overview of the main unit

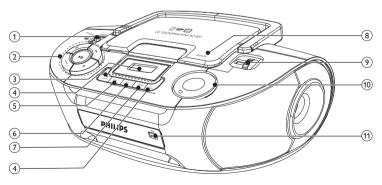


#### Source selector

(1

Turn on or off the unit, or select a source.

- 2 ▶Ⅱ
  - Start or pause play.
    - /Skip to the previous/next track.
    - Search within a track/ disc/USB.
      - Stop play or erase a program. **PROG**
  - Program tracks.
- ③ Display panel
  - Show current status.
- 4 ALBUM +/-
  - Skip to the previous/next album.
- 5 USB
  - Select the USB source.
- 6 CD
  - Select the disc source.
- ⑦ MODE
  - Select repeat play or random play.
- (8) OPEN/CLOSE
  - Open or close the disc compartment.
- 9 TUNING
  - Turn to select radio frequency.
- 10 VOLUME
  - Adjust volume.
- (1) 🤝
  - Jack for a USB mass storage device.

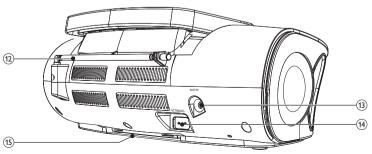

### 12 FM antenna

- Improve FM reception.
- 3 AUX IN
  - Audio input jack (3.5mm ) for an external audio device.
- (14) AC MAINS
  - Jack for the supplied AC power cord.
- (15) Battery compartment door

# 3 Get started



 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No.

## Select power supply

The unit can be operated by AC power or batteries.

## AC power


## Caution

 Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the bottom of the unit.



The type plate is located on the bottom of the main unit.


- 1 Connect the AC power cable to:
  - the main unit.
  - the wall socket.

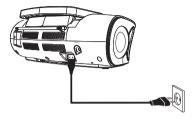

### Battery power

## Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- 1 Open the battery compartment on the bottom of the unit.
- 2 Insert 6 R14/UM2/C Cell batteries (not supplied) with correct polarity (+/-) as indicated, then close the battery compartment.

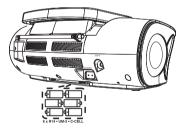

**3** The unit is ready to operate.

## - Note

• Batteries contain chemical substances, so they should be disposed of properly.

## Turn on

Push the source selector to CD/USB/AUX, or FM or MW.

## Turn off

1 Push the source selector to OFF.

# Play

## Play disc

- 1 Push the source selector to CD/USB/AUX.
- 2 Press **CD** to select the disc source
- 3 Press OPEN/CLOSE to open the disc compartment.
- 4 5 Insert a disc with the printed side facing up, then close the disc compartment.
- Press ▶ II to start play.
  - To pause/resume play, press ► II.
  - To stop play, press ■.
  - To select another track, press
  - To select an album, press ALBUM +/-.
  - To search within a track, press and hold I normal play.

## Play from USB





Ensure that the USB device contains playable audio contents for supported formats. (See "USB playability information")

- 1 2 3 4 5 6 Plug the USB device into the 🗠 socket of the unit.
- Push the source selector to CD/USB/AUX
- Press **USB** to select the USB source
- Press ALBUM +/- to select a folder.
- Press Pre
- Press ▶ II to start play.
  - To pause/resume play, press ► II.
  - To stop play, press •
  - To search within an audio file, press and hold I • resume normal play.

### 5 Play options

## Repeat and random play

- 1 Press MODE repeatedly to select:
  - [REP] (repeat): the current track is played repeatedly.
  - [REP ALL] (repeat all): all tracks are played repeatedly.
  - [SHUF] (shuffle): all tracks are played randomly.
- 2 To return to normal play, press MODE repeatedly until play mode is no longer displayed.



Shuffle play cannot be selected when you play programmed tracks.

## Program tracks

You can program a maximum of 20 tracks.

- 1 At CD/USB mode, in the stop position, press PROG to activate the program mode
  - → [PROG] (program) is displayed.
- 2 3 For MP3/WMA tracks, press ALBUM +/- to select an album.
- Press I
- 4 5 Repeat steps 2 to 3 to select and store all tracks to program.
  - Press ▶II to play the programmed tracks.
    - → During play, [PROG] (program) is displayed.
    - To erase the program, in the stop position, press  $\blacksquare$ .

# 6 Adjust sound

## Adjust volume

1 During play, turn **VOLUME** to increase/decrease the volume level.

# 7 Listen to radio

## Tune to a radio station

- 1 Push the source selector to FM or MW.
- 2 Turn TUNING to tune to a station.



- Position the antenna as far as possible from TV, VCR or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

## 8 Listen to an external device

You can also listen to an external audio device through this unit.

- 1 Push the source selector to CD/USB/AUX.
- 2 Connect the supplied MP3 link cable to:
  - the AUX IN jack (3.5mm) on the back of the unit.
  - the headphone jack on an external device.
- **3** Start to play the device (refer to the device's user manual).

# 9 Product information

Note

Product information is subject to change without prior notice.

## Specifications

Disc	
Laser type	Semiconductor
Disc diameter	12cm/8cm
Support disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Tuner	
Tuning range	FM: 87.5 - 108MHz; MW: 531 - 1602kHz
General information	
Output power	2 × 2W RMS
AC power	220-240V~, 50Hz
Operation power consumption	15W
USB direct	Version 2.0/1.1
Dimensions Main Unit (W x H x D)	350 × 127 × 217 mm
Weight	1.97kg

## USB playability information

### Compatible USB devices:

- USB flash memory (USB 2.0 or USB 1.1)
- USB flash players (USB 2.0 or USB 1.1)
- memory cards (requires an additional card reader to work with this unit)

### Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 or later
- File name in Unicode UTF8 (maximum length: 128 bytes)

### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/WMA files, and is not be shown in the display.
- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

## Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 999 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32-320 (kbps), variable bit rates
- ID3 tag v2.0 or later
- Directory nesting up to a maximum of 8 levels

## Maintenance

### Clean the cabinet

• Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.



### Clean the disc lens

 After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Philips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

# 10 Troubleshooting



### Warning

Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site www. philips.com/welcome. When you contact Philips, ensure that the apparatus is nearby and the model number and serial number are available.

### No power/No sound

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- Ensure that the batteries are installed correctly.
- Adjust the volume.
- The file is a non-audio one. Select an audio file.

### No response from the unit

• Disconnect and reconnect the AC power plug, then turn on the unit again.

### No disc detected

- Insert a disc.
- Check if the disc is inserted with the print side facing inward.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

### Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend and adjust the FM antenna.

### Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

### USB device not supported

• The USB device is incompatible with the unit. Try another one.

These warranty conditions are valid for the following consumer electronics products: Colour Televisions, Projection TV, Plasma & LCD TV, Video Cassette Recorders, CD Recorders & Players, DVD Players, DVD Recorders, DVD Recorders with HDD, Audio Systems, Home Theatre systems, Digital Set Top Box & Portable Audio products.

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies which the purchaser has in respect of the product under the Trade Practices Act or other Commonwealth or State Law.

Philips Consumer Electronics warrants its products to the purchaser as follows and subject to the stated conditions.

#### 1 Year Free Repair Service - at Philips ASC

Colour Television, Plasma Television, LCD Television, Projection Television, DVDR/VCR Combo, DVD Recorders with Hard Drive, LCD Projectors, Wireless Audio Systems, Audio Systems, Home Theatre Systems & Digital Set-Top-Box.

#### 1 Year free Replacement - at your Retailer

Portable Audio, MP3 Infotainment products, Video Cassette recorders, DVD Player, DVD/VCR Combo Player, DVD Recorder without HDD & Portable DVD/LCD players.

#### Conditions of Repair Warranty

- All claims for warranty service should be made to your nearest Philips Authorised Service Centre or the Philips Technology Care Centre. Reasonable evidence of date of purchase must be provided.
- This warranty extends only to defects in material or workmanship occurring under normal use of the product when operated in accordance with the instructions.
- If a replacement product is supplied under the repair policy it is warranted, under this warranty, for the remainder of the warranty of the original purchased product only.
- 4. Home service is provided only within the normal service area of one of our recommended Authorised Service Centres (ASC). It will be provided for television receivers only with a screen side of 67cms or above (product includes CRT, LCD TV, PTV, and Plasma TV). Televisions with screen side less than 67cms and all other products types are to be taken or sent by the consumer to the workshop of your nearest Authorised Service Centre, at the Consumer's expense.
- This Manufacturers Warranty is limited to 3 months for the above listed Consumer Electronics products if used in commercial applications.
- Philips may, at its discretion choose to replace rather than repair any product covered by this warranty.
- Product accessories are covered by the same warranty period. Please contact the Philips Technology

Care Centre for free replacement of faulty accessories.

**8.** This Manufacturers Warranty is neither transferable nor valid in countries other than Australia.

#### This warranty does not cover:

a) Mileage or travel outside the normal service area covered by selected Authorised Service Centre.

b) Service costs arising from failure to correctly adjust the controls of the product or to observe the instructions, or inspections that reveal that the product is in normal working order.

c) Product failures caused by misuse, neglect, accidental breakage, transit damage, inexpert repairs or modification by un-authorised persons, external fires, lightning strikes, floods, vermin infestation or liquid spillage.

- d) Cleaning of video or audio heads.
- e) Inadequate receiving antennae.

**f)** Replacement of worn or used batteries or other consumables.

g) Consumer products used in commercial applications (This warranty is limited to 3 months only).

h) Second hand products.

#### The conditions contained in this warranty card replace and override the provision of the Philips World-Wide Guarantee for products purchased in Australia and used in Australia.

Service is provided through more than 100 accredited Authorised Service Centres throughout Australia. For direct contact with the nearest recommended Authorised Service Centre in capital & regional cities/towns

#### Authorised Service Centre Network 1300 361 392

Customer support is provided in Australia by our trained call centre staff. For assistance with product features and specifications, please call

#### Technology Care Centre 1300 363 391

Please record the following information for your records and keep in a safe place. We recommend retaining your purchase receipt to assist with any warranty claim.

Model number:.....

Serial number:.....

Date of purchase:.....

Retailer:....

Philips Consumer Electronics a division of Philips Electronics Australia Limited ABN 24 008 445 743, Level 1, 65 Epping Road NORTH RYDE NSW 2113.

Warranty valid for all new products purchased after 1<sup>st</sup> January 2007

### NEW ZEALAND - Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

### Conditions

- The product must have been purchased in New Zealand.As proof of purchase, retain the original sales docket indicating the date of purchase.
- The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
- 3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
- 4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
- In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

### How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller Philips New Zealand Ltd. ⊠ P.O. Box 41.021 Auckland ☎ (09) 84 94 160 fax ☎ (09) 84 97 858





© 2009 Koninklijke Philips Electronics N.V. All rights reserved.