 


3 Enjoy

About the Time Shift Buffer

Once you turn on the recorder, the selected TV programme will be stored in a temporary hard disk storage called Time Shift Buffer 'TSB'. The 'TSB' can store up to 10 hours of programmes temporarily in Standard Play (SP) mode.

Press 显示 to display the Time Shift video bar.

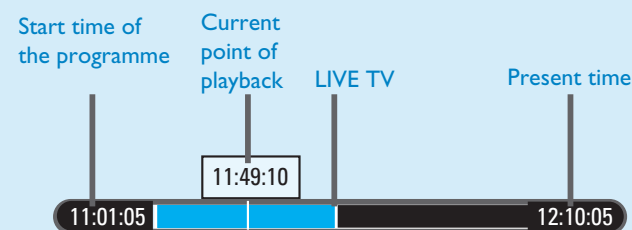

During play of :

- To watch live TV, press 电视实况.
- To go to current play position of connected device, press ■.

Note:

- The contents in the time shift video bar will be cleared when you press 电源, USB, 定时 or 信号源.

Start recording

A Record from TV or an external device

- To record a TV programme, Press 0 - 9 to select the preset channel to record.

Note If you have used Option B in 'Basic Connection', press 信号源 repeatedly to select 'CVBS'. Use the remote control of your cable box to select the TV programme to record.

- To record from a connected device, press 信号源 repeatedly to select the video source to record (CVBS or YPbPr).
- Press ● to start recording. Press ● again to extend the recording time.
- To end recording, press ■.
- To playback the recording, press 录像清单, use ▲▼ keys to select the title and press ►||.

Start playback

A Play a recording

- Press 录像清单.
- Use ▲▼ keys to select a title and press ►||. To stop play, press ■.


B Play a media file

- To play from a USB device Insert the USB device to the USB socket, then press **USB**. OR, if a confirmation screen is displayed, select [Confirm] to view the USB contents menu.

Note:

- This recorder supports USB devices which conform to the USB Mass Storage Device class standard.

- To play from media files Press 主选单, then select [Media Files], then press **OK**.

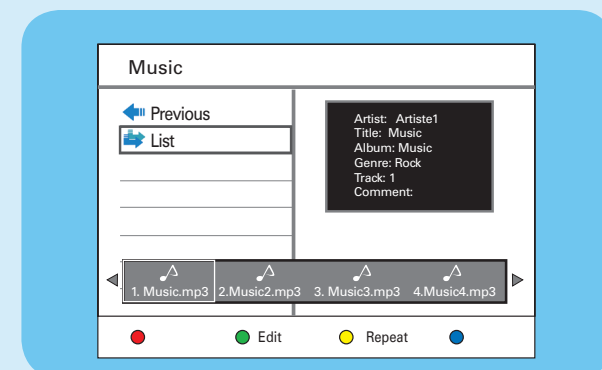

- Press ► to select the media type [Music], [Photos] or [Movies].
- Select the title and press ►||. To stop play, press ■.

Register your product and get support at:

www.philips.com/welcome

DVR2008

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy


What's in the box?




HDD Recorder

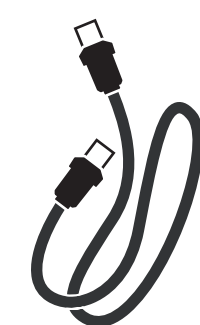


RF antenna cable

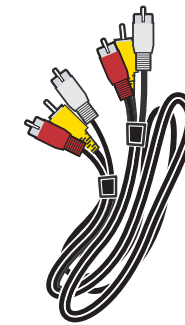

Audio/video cable

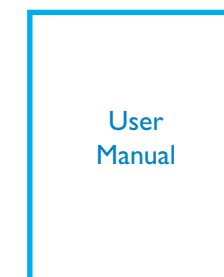

User Manual

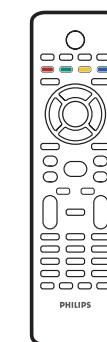

Remote Control and 2 batteries

Need help?

User Manual

See the user manual that came with your Philips recorder.



2008 © Koninklijke Philips N.V.
All rights reserved.
sgpl_822/93EN02
www.philips.com

 
PHILIPS

1 Connect

Basic Connection

Before Connecting

Select one of the following basic connections (**A** or **B**) according to the type of connecting devices you have.

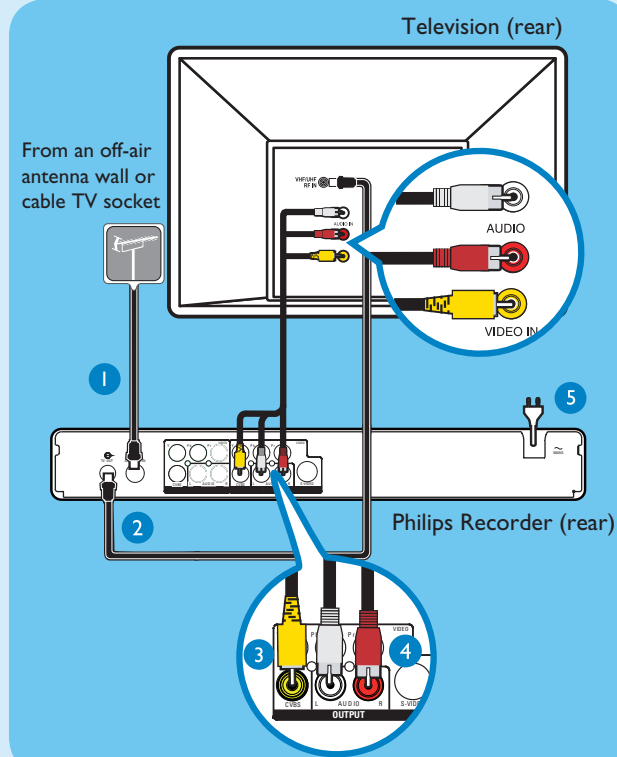


Option A

Use this connection if you are connecting the antenna cable directly from the antenna wall socket or from a cable TV socket.

- 1 Unplug the antenna cable that is connected to your TV and plug it into the **ANTENNA-IN** socket on this recorder.
- 2 Connect the supplied RF antenna cable from the **TV-OUT** socket on the recorder to the Antenna In socket on the TV.
- 3 Connect a composite video cable (yellow end) from the **CVBS OUTPUT** socket on the recorder to the video input socket on your TV.
- 4 Connect an audio cable (red/white ends) from the **AUDIO OUTPUT** sockets on the recorder to the audio input sockets on your TV.
- 5 Plug in the power cord from the recorder to an AC power outlet.

Note See the accompanying user manual for other possible connections (e.g. Component Video or S-VIDEO).

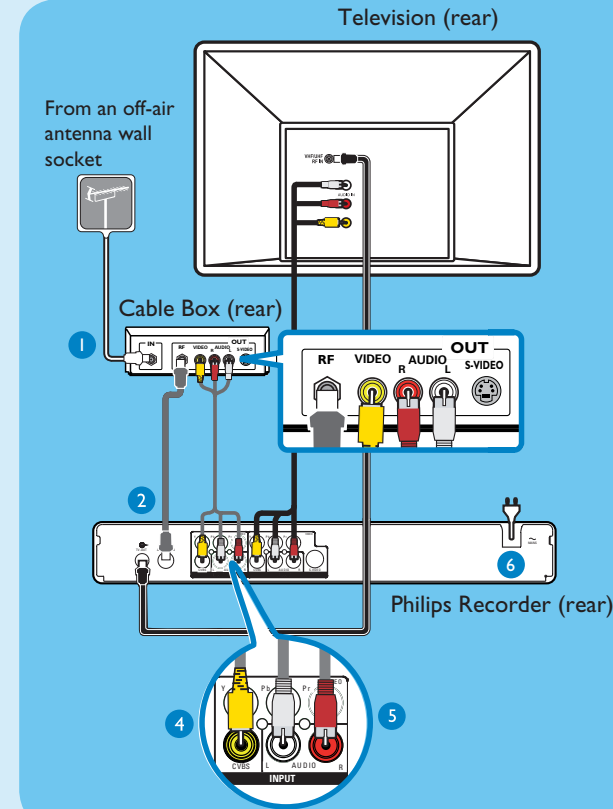

Option B

Use this connection if your current antenna cable is connected to a cable box.

- 1 Keep the existing antenna connection from the cable box to your TV.
- 2 Connect the supplied RF antenna cable from the **ANTENNA-IN** socket on the recorder to the RF Out socket on the cable box/ satellite receiver.
- 3 Follow steps 3 to 4 under 'Option A' before you proceed to step 4 below.
- 4 Connect a composite video cable (yellow end) from the **VIDEO INPUT** socket on the recorder to the video output socket on your cable box/satellite receiver.
- 5 Connect an audio cable (red/white ends) from the **AUDIO INPUT** sockets on the recorder to the audio output sockets on your cable box/satellite receiver.
- 6 Plug in the power cord from the recorder to an AC power outlet.

2 Set up

A Finding the viewing channel

- 1 Press **Power** on the recorder.
- 2 Switch on the TV and other connected devices (e.g. Cable box, Satellite receiver). The installation menu is displayed.

First Installation	
Menu Language	✓ English
TV Region	简体中文
TV Shape	繁體中文
Auto Scan	
Clock	

- 3 In case you don't see the recorder's installation menu, press the channel down button on the TV's remote control repeatedly (or AV, SELECT, **Enter** button) until you see the menu. This is the correct viewing channel for the recorder.

B Start basic setup

Use the recorder's remote control and follow the on-screen instructions to complete the installation.

Note Press **Up/Down** keys to toggle between options. To confirm your selection, press **OK**.

- 1 Select the menu display language.

First Installation	
Menu Language	✓ English
TV Region	简体中文
TV Shape	繁體中文
Auto Scan	
Clock	

- 2 Select the country of your residence.
Use **Up/Down** keys to select the option. Press **OK** to confirm.
- 3 Select the TV aspect ratio.
Use **Up/Down** keys to select the option. Press **OK** to confirm.

- 4 Automatic channel search begins.

First Installation	
Menu Language	Cancel
TV Region	OK
TV Shape	
Auto Scan	
Clock	

Note If you have used Option **B** in 'Basic Connection' select **[Cancel]**, then press **OK** to skip channel search. No preset channels will be stored. Otherwise, wait for auto scanning to complete.

- 5 Set the date and time.

Use the **numeric keypad 0-9** to enter the correct date and time. Use **Left/Right** keys to toggle between the fields. Press **OK** to confirm. Select **[Confirm]**, then press **OK**.

First Installation	
Menu Language	Year Month Day
TV Region	2008 1 1
TV Shape	Hour Min. Sec.
Auto Scan	00 00 00
Clock	

- 6 Installation is complete.

First Installation	
Menu Language	Setup Completed
TV Region	
TV Shape	
Auto Scan	
Clock	

The recorder is now ready for use.