

# Quick Start Guide



**Step A** Connect

 
**Step B** Setup

**Step C** Enjoy


## What's in the Box?

You should find these items upon opening the box.

FM antenna

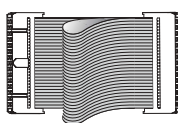


Control cable

 

Remote Control

 Pull out the plastic protective sheet before use.



Quick Start Guide




User Manual



Power cord

**PHILIPS**
 
## Step A **Connect**

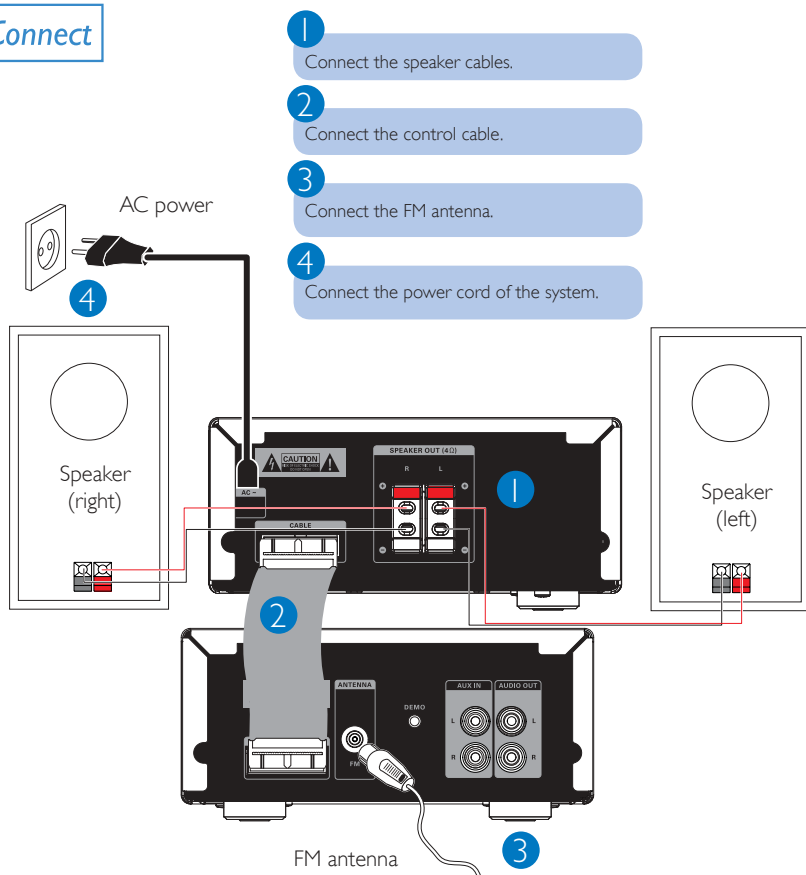

1 Connect the speaker cables.

2 Connect the control cable.

3 Connect the FM antenna.

4 Connect the power cord of the system.

## Step B **Setup**

### Tip

See the User Manual for how to connect other equipment to this system.

### Setting the clock

#### IMPORTANT!

 
– To set clock in the Eco Power mode, press and hold **STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1 In standby mode, press and hold **CLOCK** on the remote control.

2 When the hour digits flash, turn **VOLUME** on the system or press **VOL+/-** on the remote control to set the hours.

3 Press **CLOCK** again and the minute digits flash. Then turn **VOLUME** on the system or press **VOL+/-** on the remote control to set the minutes.


4 Press **CLOCK** again to confirm the time setting.

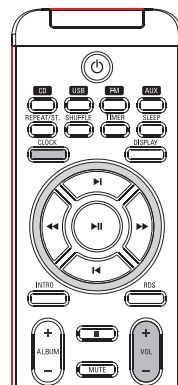

## Step C *Enjoy*


### *Playing a disc*

 - 1 Press **SOURCE** on the front panel to select DISC or press **CD** on the remote control.
- 2 Press **▲** to open the CD compartment.
- 3 Insert a disc with the printed side facing up. Press **▲** again to close the compartment.
- 4 Playback will start automatically. If not, press **▶||**.
- 5 To stop playback, press **■**.

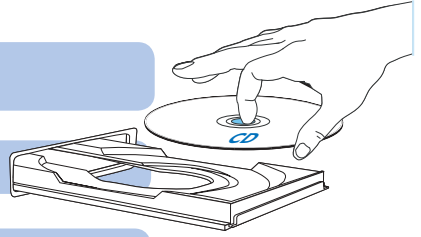

### *Playing a USB mass storage device*

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the  socket on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

# Step C *Enjoy*

## Programming and tuning to radio stations

- 1 Press **SOURCE** (FM) on the remote control) to select tuner source.
- 2 Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press ◀ / ▶ until the desired preset station is displayed.

### *Tip*

*Detailed playback features and additional functions are described in the accompany owner's manual.*



© Royal Philips Electronics N.V. 2008  
All rights reserved.

<http://www.philips.com>

