
Quick Start Guide



What's in the Box?


You should find these items upon opening the box.

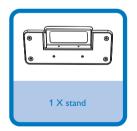







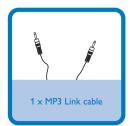







0

Before you place the micro hi-fi on a flat surface, attach the supplied stand.

- 1. Place the micro hi-fi face down on a flat surface.
- Hold the stand above the micro hi-fi and pull the FM antenna gently through the stand.
- 3. Insert the stand into the two slots on the back of the micro hi-fi.

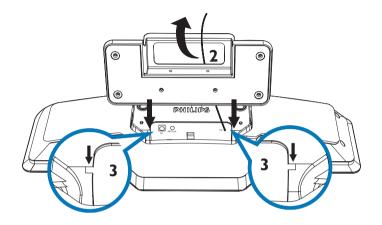

Connect the AC power adaptor to the micro hi-fi and the wall socket.

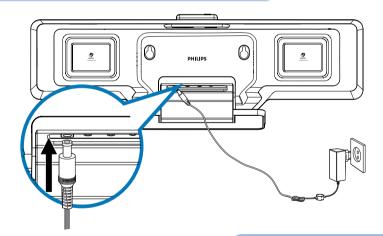

Tip

- Use the supplied AC power adaptor only! Using any other power connection device may damage your main set!
- To wall mount the micro hi-fi, see the included separate sheet of wall mounting instructions.



Set clock

In standby mode, press and hold **SLEEP/PROG** for 2 seconds to enter the clock setting mode.

Press **VOLUME** +/- repeatedly to select 12 hour or 24 hour format.

Press **SLEEP/PROG** to confirm.

→ The hour digits are displayed and begin to blink.

Press **VOLUME** +/- to set the hours.

Press SLEEP/PROG to confirm.

The minute digits are displayed and begin to blink.

Press **VOLUME** +/- to set the minutes.

Press **SLEEP/PROG** to confirm the clock setting.

Step C Enjoy


Program and tune to radio stations

Press SOURCE repeatedly to select FM.

Press and hold SLEEP/PROG for 4 seconds to activate automatic program mode.

ignorphise [AUTO] (auto) is displayed.

Press PRESET +/- to select a preset number.

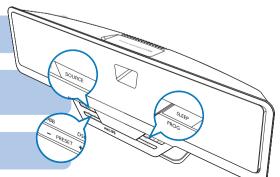



Play from Philips GoGear player

Identify the correct dock for the GoGear player.

There are 5 GoGear docks supplied. Each of the docks fit the GoGear models that begin with the model indicated on the dock.

Align the USB and headphone jacks on the GoGear player with the plugs on the dock, then push firmly in.

Load the dock into the cradle.

→ The GoGear player begins to charge.

Press SOURCE repeatedly to select GoGear source if GoGear source is not selected.

Turn on the GoGear player.

6

Control play with the GoGear player controls.

To adjust volume and sound effect, you can press VOLUME +/-, DBB and DSC.

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.



