



AZ1856



PHILIPS

Register your product and get support at www.philips.com/welcome

1 Playing a disc

- a Adjust the **source selector** to **DISC/USB**.
- b Press **USB/CD** to enter CD mode if "USB" is displayed.
- c Open the disc door.
- d Insert a disc with the printed side facing up and close the door.
- e Press **▶||** to start playback.
- f To stop disc playback, press **■**.

2 Playing a USB device


- a Push the **source selector** to **DISC/USB**.
- b Press **USB/CD** to enter USB mode if "USB" is NOT displayed.
- c Plug a compatible USB mass storage device to AZ1856's USB DIRECT marked \rightarrow .
- d Press **▶||** on your AZ1856 to start play.

3 CD ripping

- a Follow **steps a-d** from "Playing a disc".
- b Plug a USB mass storage device.
- c1 Press **USB REC** once to record one file.
- c2 Press **USB REC** twice to record all files. \rightarrow Disc playback starts automatically from the beginning of the selected track(s).
- d Disc ripping starts.
- e To stop ripping, press **■**.

4 Tape/tuner ripping

- a Adjust the source selector to **TAPE** or **FM**.
- b Plug a USB mass storage device.
- c Select the file(s) or a desired station you want to record.
- d Press **USB REC** (or **REC** on the remote) and **REC** appears, flashing.
- e Tape/tuner ripping starts.
- f To stop ripping, press **■**.

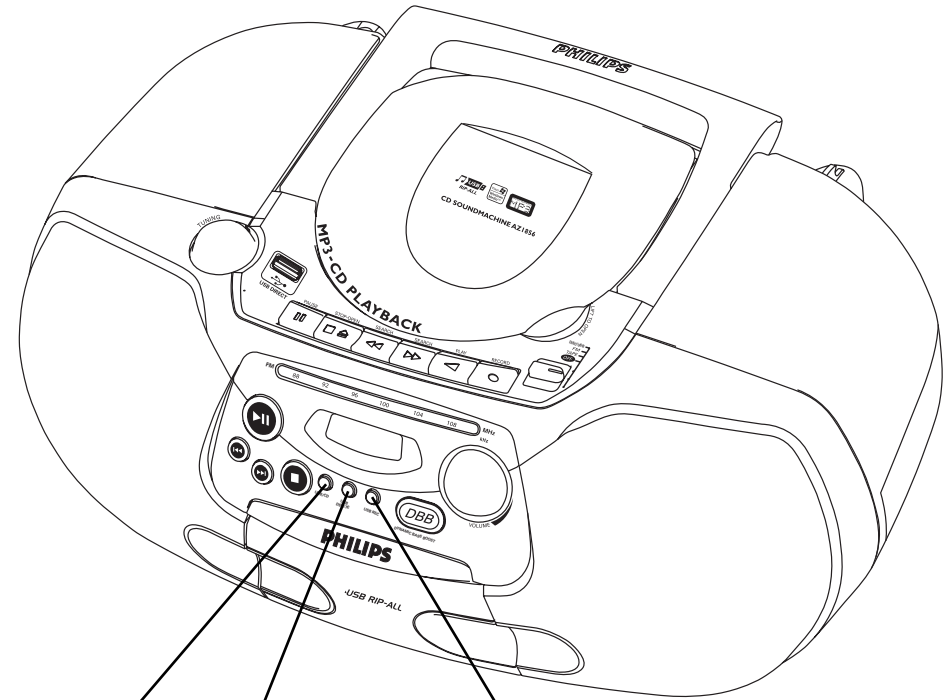

USB/CD

 
Press to enter disc or USB mode.

USB REC

Press once to copy one file and press twice to copy all files of a disc to an external portable USB storage device/MP3 player.

USB DELETE

Delete one file of an external portable USB storage device/MP3 player.



Removing the insulation plastic tab

