

Portable Radio


AE 2160



Let's make things better.



PHILIPS

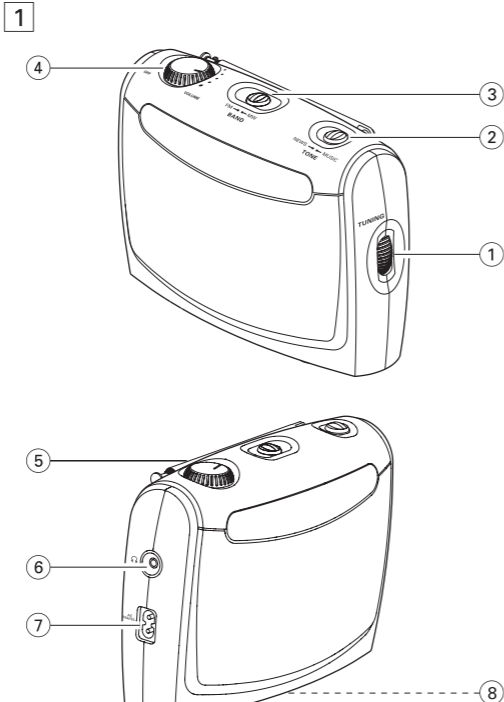

Important notes for users in the U.K.

Mains plug

This apparatus is fitted with an approved 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5 Amp, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5 Amp. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5 Amp.

Note: The severed plug must be disposed of to avoid a possible shock hazard should it be inserted into a 13 Amp socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured with the following code: blue = neutral (N), brown = live (L). As these colours may not correspond with the colour markings identifying the terminals in your plug, proceed as follows:

- Connect the blue wire to the terminal marked N or coloured black.
- Connect the brown wire to the terminal marked L or coloured red.
- Do not connect either wire to the earth terminal in the plug, marked E (or $\frac{1}{2}$) or coloured green (or green and yellow).

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Copyright in the U.K.

Recording and playback of material may require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

Important

Safety

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10 Only use attachments/accessories specified by the manufacturer.
- 11 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tipover.
- 12 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 13 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 14 Battery usage CAUTION – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, + and - as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.



- 15 Apparatus shall not be exposed to dripping or splashing.
- 16 Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 17 This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org.
- 18 Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Notice

This product complies with the radio interference requirements of the European Community. This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC. Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



Recycling

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When you see the crossed-out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

When you see the crossed-out wheel bin symbol with the chemical symbol 'Pb', it means that the batteries comply with the requirement set by the directive for lead:



Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Note:

The type plate is located on the bottom of the set.

The mains plug of the product should not be obstructed or should be easily accessed during intended use.

The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

CONTROLS (see figure 1)

- ① **TUNING** - tune to a radio station
- ② **tone - NEWS/MUSIC** - adjusts sound
- ③ **BAND** - selects FM/MW (or LW) waveband
- ④ **VOLUME / OFF** - switches radio on/off and adjusts volume level
- ⑤ **Telescopic Aerial** - improves FM reception
- ⑥ - 3.5mm earphone socket
- ⑦ **AC MAINS ~** - socket for mains lead
- ⑧ **Battery Door** - open and insert 2x R20/UM1/D-cell batteries

POWER SUPPLY

Batteries (Not included)

- 1 Open the battery compartment and insert two batteries, type **UM1,R20 or D-cells**, with the correct polarity as indicated by the "+" and "-" symbols.
- 2 Replace the compartment door. The set is now ready to operate.
 - The battery supply is switched off when the set is connected to the AC Mains.
 - Remove the batteries if the set is not to be used for a long time

Batteries contain chemical substances, so they should be disposed of properly.

AC Mains

- 1 Check if the mains voltage as shown on **the type plate on the bottom of set**, corresponds to your local mains voltage. If it does not, consult your dealer or service centre.

- 2 Connect the mains lead to the AC MAINS ~ socket and the wall socket. The mains supply is now connected and ready for use.
- 3 To switch off completely, withdraw the mains lead from the wall socket.
 - Disconnect the mains lead from the wall socket to protect your set during heavy thunderstorms.

RADIO

Radio reception

- 1 Turn the **VOLUME/OFF** knob clockwise to switch on the radio and adjust the volume.
 - You may connect headphones with a 3.5 mm plug to the socket - The built-in speaker will be muted.
- 2 Select the wave band using the **BAND** switch.
- 3 Tune to a radio station using **TUNING**.
 - For FM, pull out the telescopic aerial. Incline and rotate the aerial. Reduce its length if the signal is too strong (very close to a transmitter).
 - For MW (AM or LW) the set is provided with a built-in aerial so the telescopic aerial is not needed. Direct the aerial by turning the whole set.
- 4 Adjust the **tone** switch by selecting **NEWS** or **MUSIC**.
- 5 To switch off the set, turn the **VOLUME/OFF** knob anti-clockwise to the OFF position and you will hear a small click.

MAINTENANCE

- Do not expose the set to humidity, rain, sand or excessive heat caused by heating equipment or direct sunlight.
- To clean the set, use a soft dry cloth. Do not use any cleaning agents containing alcohol, ammonia, benzene or abrasives as these may harm the housing.

TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair. If you are unable to remedy a problem by following these hints, consult your dealer or service centre.

WARNING: Do not open the set as there is a risk of electric shock! Under no circumstances should you try to repair the set yourself, as this will invalidate the guarantee.

No power

- Wrong battery polarity
- Insert batteries correctly
- Batteries exhausted
- Replace batteries

No sound (see also No power)

- Volume is turned down
- Turn up volume
- Headphones plug is inserted
- Disconnect headphones if you are not using them

Poor headphones sound/ sound from one channel only

- Headphones plug not fully inserted
- Insert plug fully

Severe radio hum/distortion

- FM aerial not fully extended
- Extend FM aerial fully

Continuous crackling/hiss disturbance during MW (AM/LW) broadcast

- Electrical interference from TV, computer, fluorescent lamp, etc.
- Move set away from other electrical equipment