

Register your product and get support at

www.philips.com/welcome


SPA8210




EN User manual


PHILIPS

1

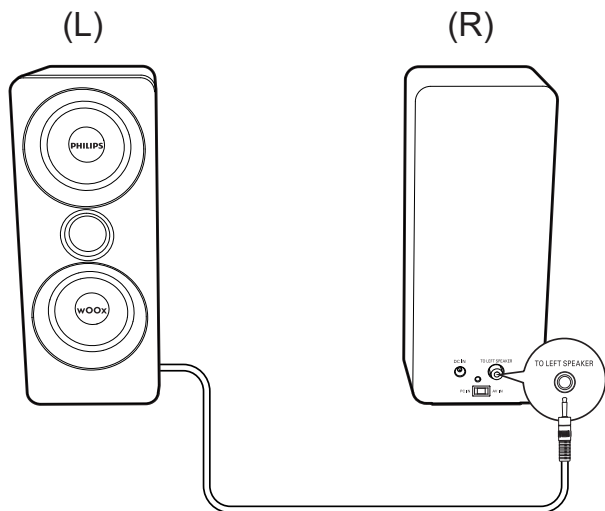


2


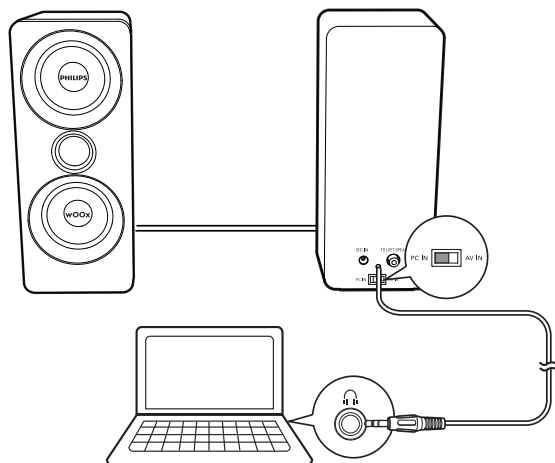


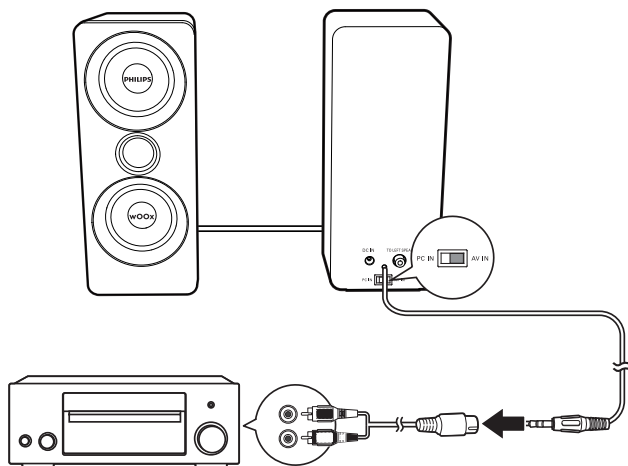


3

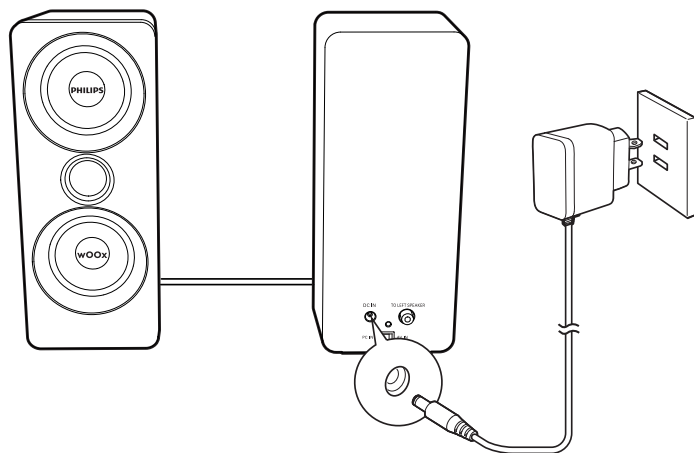


4






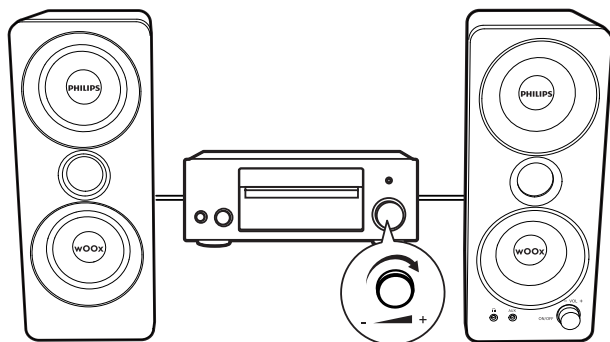
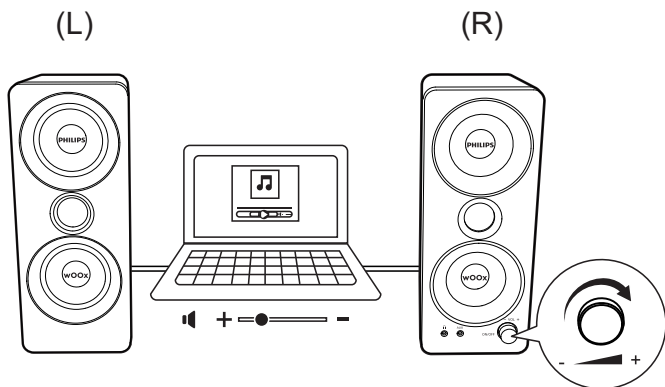


5

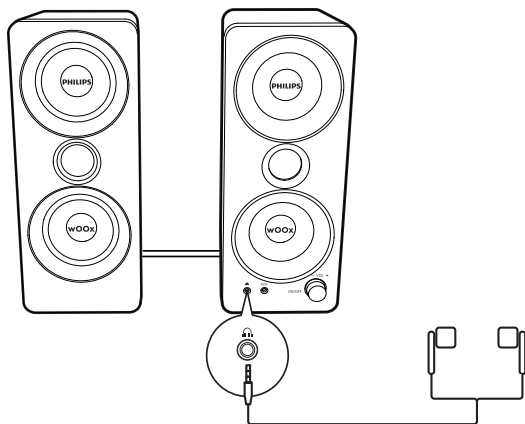

6

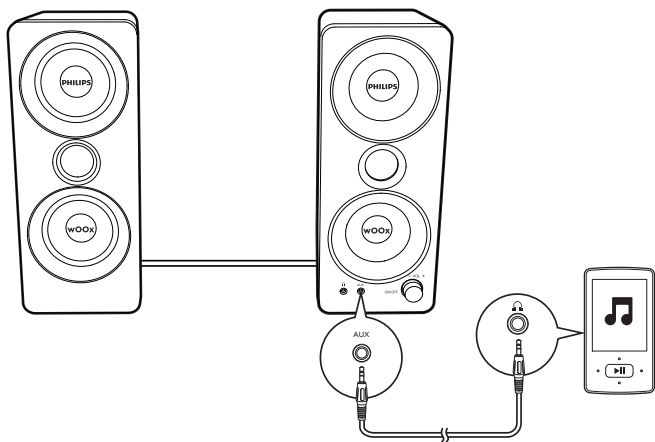

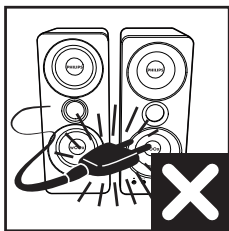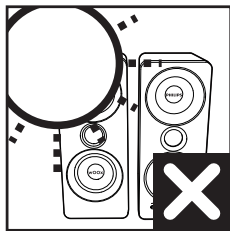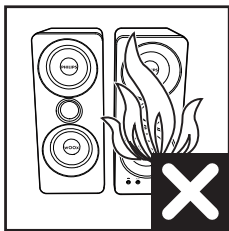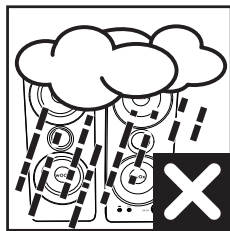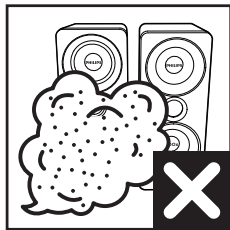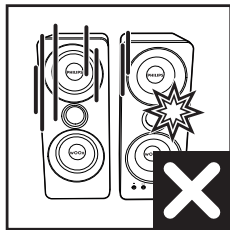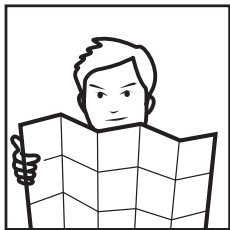

1 Multimedia Speaker System

Warning:

- The product shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product.
- To completely disconnect the power input, the mains plug of the product shall be disconnected from the mains.
- The mains plug of the product should not be obstructed OR should be easily accessed during intended use.
- No naked flame sources, such as lighted candles, shall be placed on the products.

Note:

- Make sure that the Multimedia Speakers are installed properly before using.
- If you place the Multimedia Speakers close to CRT display, you will see obvious color distortion.

System Requirements:

PC	Mac
Windows® 98SE, Windows® ME, Windows® 2000, Windows® XP, or Windows® Vista™, Windows 7	Mac OS9/OS® X, or later

Installation:

- 1 Insert the left speaker plug into **TO LEFT SPEAKER** socket on the right speaker (①).
- 2 Connect the audio input plug to the audio output of your computer or DVD player (②).

- 3 Switch the **PC IN/AV IN** slider to left or right (②).
 - **PC IN:** apply to your computer.
 - **AV IN:** apply to your DVD player.
- 4 Connect the AC power adaptor to (③):
 - the power socket at the back of the right speaker.
 - the wall outlet.
- 5 Turn the volume knob clockwise to switch on the Multimedia Speakers (④).
- 6 Adjust volume by the volume knob on the right speaker, or by the volume control of your computer or DVD player. (④).
- 7 After use, switch off the speakers and unplug.

Optional function

To listen through a headphone:

Connect it to the  socket on the right speaker(⑤).

To play music from an external audio device such as an MP3 player (⑥):

- 1 Connect an MP3 link cable (not supplied) to the **AUX** socket on the right speaker and the headphone socket on the external device.
- 2 Play music on the device.

Specifications

Amplifier

Rated Output Power	2 X 20 W RMS
Frequency Response	60Hz - 16 KHz, -3 dB
Signal to Noise Ratio	>50 dB
Total Harmonic Distortion	<2%
MP3 link	600 mV
PC Input	600 mV
AV Input	2000 mV

Speakers

Speaker Impedance	8 ohm
Speaker Driver	L/R 3"x2, Tweeter 1"x2 WOOX 3"x2

General information

AC power	Model: AS360-180-AB200 (Philips); Input: 100-240V ~, 50/60 Hz, 1.2 A; Output: 18 V --- 2 A
Operation Power Consumption	20 W
Standby Power Consumption	<0.5 W
Dimensions	
- Main Unit (W x H x D)	100 x 250 x 116.5 mm
Weight	
- With Packing	2.4 kg
- Main Unit	2.0 kg

Hearing safety



Caution

- To avoid hearing damage, limit the time you use the headphones at high volume and set the volume to a safe level. The louder the volume, the shorter is the safe listening time.

Be sure to observe the following guidelines when using your headphones.

- Listen at reasonable volumes for reasonable periods of time.
- Be careful not to adjust the volume continuously upwards as your hearing adapts.
- Do not turn up the volume so high that you can't hear what's around you.

- You should use caution or temporarily discontinue use in potentially hazardous situations.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Please inform yourself about the local separate collection system for electrical and electronic products, including those marked by the crossed-out wheel bin symbol. Please act according to your local rules and do not dispose of your old products with your normal household waste.



Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



All registered and unregistered trademarks are property of their respective owners.

© 2012 Koninklijke Philips Electronics N.V.

All rights reserved.

SPA8210_93_UM_V1.0

