

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

MCM207/12



---

EN User manual

---

DA Brugervejledning

---

DE Benutzerhandbuch

---

ES Manual del usuario

---

FR Mode d'emploi

---

IT Manuale utente

---

NL Gebruiksaanwijzing

---

SV Användarhandbok

---

KO 사용 설명서

**PHILIPS**

# Contents

<b>1 Important</b>	4	<b>7 Adjust sound</b>	16
Safety	4	Adjust volume level	16
Notice	5	Select a preset sound effect	16
		Enhance bass	16
		Mute sound	16
<b>2 Your Micro System</b>	7	<b>8 Record</b>	17
Introduction	7	Record from CD to tape	17
What's in the box	7	Record a section of a disc to tape	17
Overview of the main unit	7	Record from radio to tape	17
Overview of the remote control	9	Record from USB	17
		Record from external audio devices	17
<b>3 Get started</b>	11	<b>9 Use more of your Micro System</b>	18
Connect speakers	11	Set the sleep timer	18
Connect power	11	Set the alarm timer	18
Install remote control batteries	11	Listen through headphone	18
Set clock	12		
Turn on	12	<b>10 Product information</b>	19
<b>4 Play</b>	13	Specifications	19
Play disc	13	Supported MP3 disc formats	20
Play from USB	13	USB playability information	20
Play tape	13	Maintenance	20
Listen to an external device	13	<b>11 Troubleshooting</b>	22
<b>5 Play options</b>	14		
Repeat and random play	14		
Program tracks	14		
Display play information	14		
<b>6 Listen to the radio</b>	15		
Tune to a radio station	15		
Program radio stations automatically	15		
Program radio stations manually	15		
Select a preset radio station	15		

# 1 Important

## Safety

### Important Safety Instructions

- ① Read these instructions.
- ② Keep these instructions.
- ③ Heed all warnings.
- ④ Follow all instructions.
- ⑤ Do not use this apparatus near water.
- ⑥ Clean only with dry cloth.
- ⑦ Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- ⑧ Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- ⑨ Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- ⑩ Only use attachments/accessories specified by the manufacturer.
- ⑪ Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- ⑫ Unplug this apparatus during lightning storms or when unused for long periods of time.
- ⑬ Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug

is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- ⑭ **Battery usage CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:
  - Install all batteries correctly, + and - as marked on the unit.
  - Do not mix batteries (old and new or carbon and alkaline, etc.).
  - Remove batteries when the unit is not used for a long time.
  - Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- ⑮ **Apparatus shall not be exposed to dripping or splashing.**
- ⑯ **Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).**
- ⑰ **Where the plug of the Direct Plug-in Adapter is used as the disconnect device, the disconnect device shall remain readily operable.**



### Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this apparatus.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect this apparatus from the power.

## Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.



**Be responsible  
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Recording and playback of material might require consent. See Copyright Act 1956 and The Performer's Protection Acts 1958 to 1972.

**This apparatus includes this label:**



This product complies with the radio interference requirements of the European Community.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), paper pulp (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

### Norge

Typeskilt finnes på apparatens underside.

Observer: Nettbryteren er sekundært innkoplet. Den innebygde nettdelen er derfor ikke frakoplet nettet så lenge apparatet er tilsluttet nettkontakten.

For å redusere faren for brann eller elektrisk støt, skal apparatet ikke utsettes for regn eller fuktighet.

## 2 Your Micro System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.Philips.com/welcome](http://www.Philips.com/welcome).



### Note

- The type plate is located on the back of the apparatus.

## Introduction

With this apparatus, you can enjoy music from audio discs, tapes, external devices, and listen to radio stations.

The apparatus offers you multiple sound effect settings that enrich sound with Digital Sound Control (DSC) and Dynamic Bass Boost (DBB).

When you activate record from disc to tape, this apparatus starts disc play automatically.

The apparatus supports the following media formats:

 


 
## What's in the box

Check and identify the contents of your package:

- Main unit
- Power adapter
- Loudspeaker boxes x 2
- Remote control

## Overview of the main unit

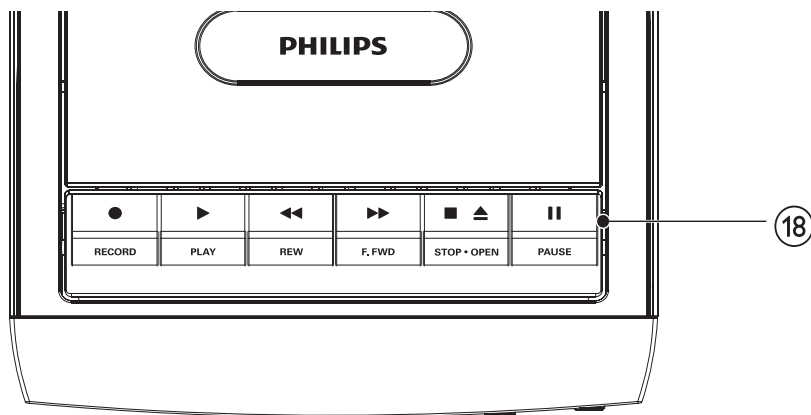

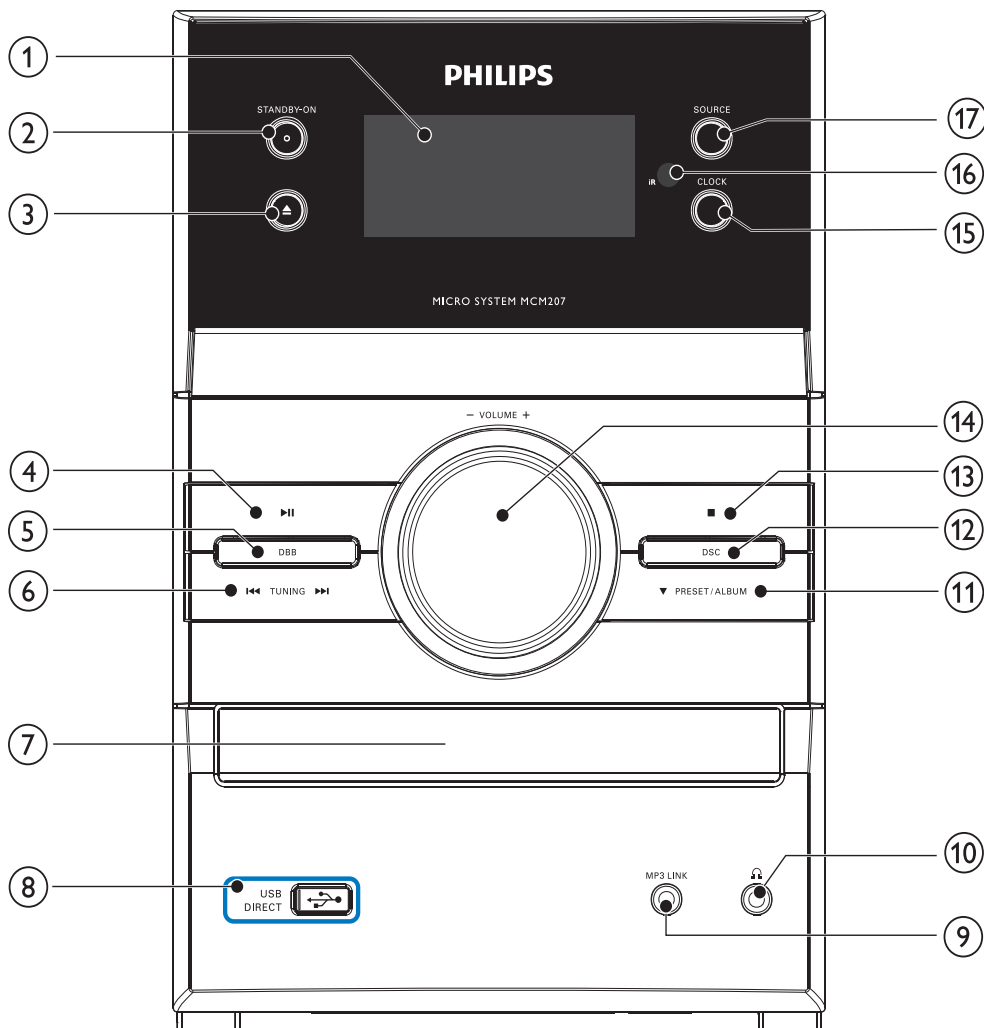

### ① Display panel

- Display current status.

### ② STANDBY-ON

- Turn on the apparatus; switch to standby mode.

### ③ ▲

- Open or close the disc compartment.

### ④ ►►









- Start or pause play.

### ⑤ DBB

- Turn on or off dynamic bass enhancement.

 
### ⑥ TUNING ◀◀▶▶



- Skip to the previous/next track.
- Tune to a radio station.
- Search within a track.

- ⑦ **Disc compartment**
- ⑧ 
  - USB socket.
- ⑨ **MP3 LINK**
  - Jack for an external audio device.
- ⑩ 
  - Headphone socket.
- ⑪ **PRESET/ALBUM▲▼**
  - Select a preset radio station.
  - Skip to the previous/next album.
- ⑫ **DSC**
  - Select a preset sound setting.
- ⑬ 
  - Stop play.
  - Erase a program.
- ⑭ **VOLUME+/-**
  - Adjust volume.
  - Adjust time.
- ⑮ **CLOCK**
  - Set the clock.
  - View the clock.
- ⑯ **Remote control sensor**
- ⑰ **SOURCE**
  - Select a source.
- ⑱ **Tape controls**
  -  Start to record.
  -  Start tape play.
  -  Fast rewind/wind the tape.
  -  Stop the tape play or open the tape door.
  -  Pause tape play or pause recording.

Pause tape play or pause recording.
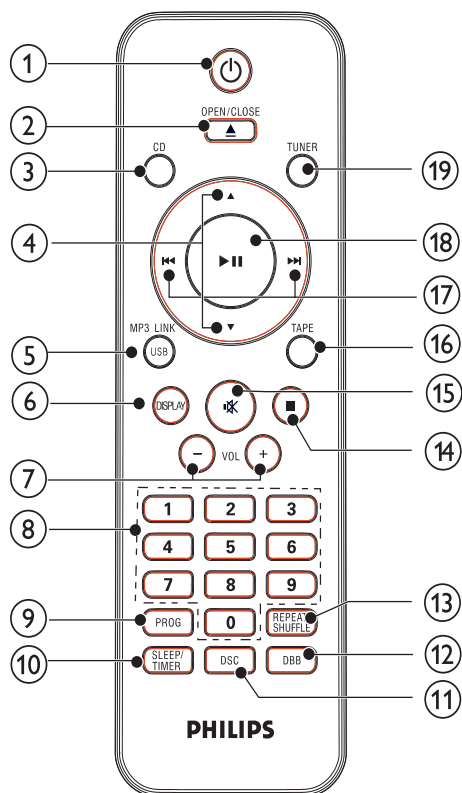
## Overview of the remote control



- ① 
  - Switch to standby mode, or Eco Power standby mode.
- ② **OPEN/CLOSE**
  - Open or close the disc compartment.
- ③ **CD**
  - Select disc source.
- ④ 
  - Skip to the previous/next album.
  - Select a preset radio station.



**⑤ USB/MP3 LINK**

- Select USB device source.
- Select external audio device source.

**⑥ DISPLAY**

- Select display information during play.

**⑦ VOL +/-**

- Adjust volume.
- Adjust time.

**⑧ Numeric keypad 0-9**

- Select a track from a disc directly.
- Select a preset radio station.

**⑨ PROG**

- Program radio stations.
- Program tracks.

**⑩ SLEEP/TIMER**

- Set the sleep timer.
- Set the alarm timer.
- Activate or deactivate timer.

**⑪ DSC**

- Select a preset sound setting.

**⑫ DBB**

- Turn on or off dynamic bass enhancement.

**⑬ REPEAT/SHUFFLE**

- Select repeat play modes.
- Select shuffle play modes.

**⑭ ■**

- Stop play.
- Erase a program.

**⑮ 咪**

- Mute or restore volume.

**⑯ TAPE**

- Select tape source.

**⑰ ⏮⏭⏮⏭**

- Tune to a radio station.
- Skip to the previous/next track.
- Search within a track.

**⑱ ▶||**

- Start or pause play.

**⑲ TUNER**

- Select tuner source.

# 3 Get started

## ! Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

 
Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the back of the apparatus. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Connect speakers

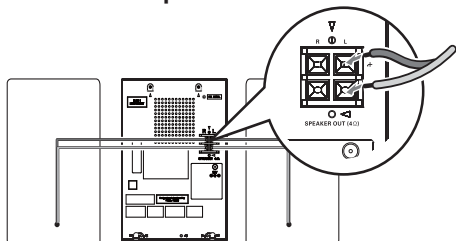


## ≡ Note

- Ensure that the colors of the speaker wires and terminals are matched.

- 1 Hold down the socket flap.
- 2 Insert the stripped part of the wire completely.
  - Insert the right speaker wires to "R", left speaker wires to "L".
  - Insert the red/blue wires to "+", black wires to "-".
- 3 Release the socket flap.
 
## Connect power

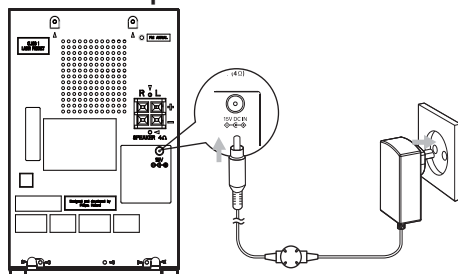

## ! Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the apparatus.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC power cord, ensure you have completed all other connections.

- 1 Connect the power adapter to
  - the **DC IN** jack on the rear of the main unit
  - the power socket.

 
## Install remote control batteries

## ! Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.

- 1 Open the battery compartment.
- 2 Insert 2 UM-4 AAA batteries with correct polarity (+/-) as indicated.

- 3 Close the battery compartment.

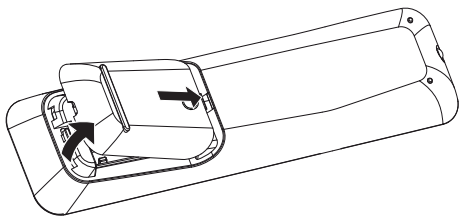

---

## Set clock

- 1 In standby mode, press and hold **CLOCK** on the main unit to activate the clock setting mode.
- ↳ [SET CLOCK] (set clock) is displayed briefly. Then the hour digits are displayed and begin to blink.

### Note

- In Eco Power Standby mode, press **CLOCK** to show clock first, then press and hold **CLOCK** to proceed clock setting.

- 2 Press **■** on the main unit repeatedly to select 12 hour or 24 hour format.
- 3 Turn **VOLUME+/-** to set the hour.
- 4 Press **CLOCK** to confirm.
- ↳ The minute digits are displayed and begin to blink.
- 5 Turn **VOLUME+/-** to set the minute.
- 6 Press **CLOCK** to confirm.

---

## Turn on

- 1 Press **STANDBY-ON** on the main unit.
- ↳ The apparatus switches to the last selected source.

---

## Switch to standby

- 1 Press **⏻** to switch the apparatus to standby mode.
- ↳ The backlight on the display panel is reduced.
  - ↳ The clock (if set) appears on the display panel.

### To switch the apparatus to Eco Power Standby mode:

- 1 In standby mode, press and hold **⏻** for more than 2 seconds.
- ↳ The backlight on the display panel turns off.

### Note

- If no button is pressed over 15 minutes in Standby mode, the unit goes to Eco Power Standby mode automatically and the backlight on the display turns off.

## 4 Play

### Play disc

 
- 1 Press **CD** to select the disc source.
- 2 Press **▲** to open the disc tray.
- 3 Insert a disc with the printed side facing up, then close the disc tray.
  - ↳ Play starts automatically.
  - To pause/resume play, press **▶||**.
  - To stop play, press **■**.
  - For MP3/WMA files: to select an album, press **▲▼**.
  - To skip to a track, press **◀◀▶▶**.
  - To search within a track, press and hold **◀◀▶▶**. Release to resume normal play.

### Play from USB

#### Note

- Ensure that the USB device contains playable audio content.

- 1 Flip open the USB socket cover on the front panel.
- 2 Insert the USB plug of a USB device into the socket.

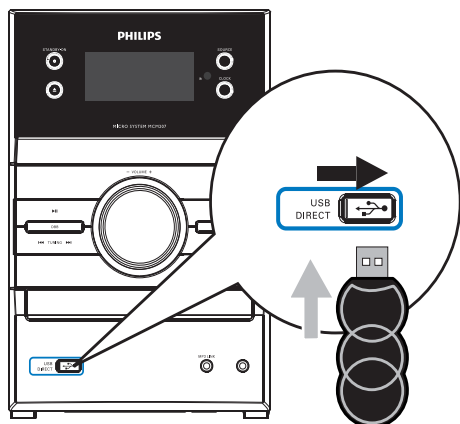

- 3 Press **USB/MP3 LINK** to select the USB source.
  - ↳ Play starts automatically.
  - To pause/resume play, press **▶||**.
  - To stop play, press **■**.
  - For MP3/WMA files: to select an album, press **▲▼**.
  - To skip to a track, press **◀◀▶▶**.
  - To search within a track, press and hold **◀◀▶▶**. Release to resume normal play.

### Play tape

#### Note

- When you play or record a tape, the sound source cannot be changed.

- 1 Press **TAPE** to select the tape source.
- 2 Open the tape button cover.
- 3 Press **■▲** to open the tape door.
- 4 Load the tape with the open side downward and the full spool to the left.
- 5 Press **▶** to start play.
  - To pause/resume play, press **▶||**.
  - To rewind or fast-forwarded, press **◀◀▶▶**.
  - To stop play, press **■▲**.

### Listen to an external device

You can also listen to an external audio device through this unit with an MP3 link cable (not supplied).

- 1 Press **USB/MP3 LINK** to select the MP3 link source.
- 2 Connect the MP3 link cable to
  - the **MP3 LINK** socket on this unit.
  - the headphone socket on the external audio device, for example, an MP3 player. 3 Start to play the MP3 player. (See the user manual of the MP3 player)
- 3 Start to play the MP3 player. (See the user manual of the MP3 player)

# 5 Play options

---

## Repeat and random play

- 1 Press **REPEAT/SHUFFLE** repeatedly to select:
  - **[REP]** (repeat): the current track is played repeatedly.
  - **[REP ALL]** (repeat all): all tracks are played repeatedly.
  - **[SHUF]** (shuffle): all tracks are played randomly.
  - **[SHUF REP ALL]** (repeat all randomly): all tracks are played repeatedly in random order.
- 2 To return to normal play, press **REPEAT/SHUFFLE** repeatedly until play mode is no longer displayed.

---

## Program tracks

You can program a maximum of 20 tracks.

- 1 In CD/USB mode, at the stop position, press **PROG** to activate the program mode.
  - ↳ **[PROG]** (program) blinks on the display.
- 2 For MP3/WMA tracks, press **▲▼** to select an album.
- 3 Press **◀▶** to select a track number, then press **PROG** to confirm.
- 4 Repeat steps 2 to 3 to program more tracks.
- 5 Press **▶||** to play the programmed tracks.
  - ↳ During play, **[PROG]** (program) is displayed.
  - To erase the program, in the stop position, press **■**.
  - To review the program, in the stop position, press and hold **PROG** for more than 2 seconds.

---

## Display play information

- 1 During play, press **DISPLAY** repeatedly to select different play information.

## 6 Listen to the radio

### Tune to a radio station

#### Note

- For optimal reception, fully extend and adjust the position of the FM antenna.

- 1 Press **TUNER** to select the tuner source.
- 2 Press and hold **◀▶** for more than 2 seconds.
  - ↳ [SEARCH] (search) is displayed.
  - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat step 2 to tune to more stations.
  - To tune to a weak station, press **◀▶** repeatedly until you find optimal reception.

### Program radio stations automatically

#### Note

- You can program a maximum of 20 FM radio stations and 10 MW radio stations.

- 1 In tuner mode, press and hold **PROG** for 2 seconds to activate automatic program mode.
  - ↳ [AUTO] (auto) is displayed.
  - ↳ All available stations are programmed in the order of waveband reception strength.
  - ↳ The first programmed radio station is broadcast automatically.

### Program radio stations manually

#### Note

- You can program a maximum of 20 FM radio stations and 10 MW radio stations.

- 1 Tune to a radio station.
- 2 Press **PROG** to activate program mode.
  - ↳ [PROG] (program) blinks on the display.
- 3 Press **▲▼** to allocate a number (1 to 20) to this radio station, then press **PROG** to confirm.
  - ↳ The preset number and the frequency of the preset station are displayed.
- 4 Repeat the above steps to program other stations.

#### Note

- To overwrite a programmed station, store another station in its place.

### Select a preset radio station

- 1 In tuner mode, press **▲▼** to select a preset number.

# 7 Adjust sound

---

## Adjust volume level

- 1 During play, press **VOL +/-** to increase/decrease the volume level.

---

## Select a preset sound effect

- 1 During play, press **DSC** repeatedly to select:
  - [POP] (pop)
  - [JAZZ] (jazz)
  - [CLASSIC] (classic)
  - [ROCK] (rock)

---

## Enhance bass

- 1 During play, press **DBB** to turn on or off dynamic bass enhancement.  
↳ If DBB is activated, DBB is displayed.

---

## Mute sound

- 1 During play, press **M** to mute/unmute sound.

## 8 Record



### Note

- To record, use only "Normal" (IEC type I) tapes on which the write-protect notches (tabs) are not broken.



### Tip

- When you play or record a tape, the sound source cannot be changed.
- The best recording level is set automatically. Change of volume and sound effect does not affect recording.



### Note

- The quality of recorded sound can differ depending on the source and the tape used.

### Record from CD to tape

- 1 Press **CD** to select disc source.
- 2 Load a disc.
- 3 Open the tape button cover.
- 4 Press **■▲** to open the tape door.
- 5 Load a tape.
- 6 Press **●** to start recording.
  - ↳ Disc play starts automatically from the beginning of the disc.
  - To pause/resume recording, press **||**.
  - To stop recording, press **■▲**.

### Record a section of a disc to tape

- 1 During disc play, press and hold **⏮⏭** to search, then release the button.
  - To select a track, press **⏮⏭**.
- 2 Press **▶||** to pause disc play.
- 3 Press **●** to start recording.
  - ↳ Disc play resumes automatically.

- To pause recording, press **||**. To resume, press this button again.
- To stop recording, press **■▲**.

### Record from radio to tape

- 1 Tune to the desired radio station.
- 2 Open the tape button cover.
- 3 Press **■▲** to open the tape door.
- 4 Load a tape.
- 5 Press **●** to start recording.
  - To pause recording, press **||**. To resume, press this button again.
  - To stop recording, press **■▲**.

### Record from USB

- 1 Press **USB/MP3 LINK** repeatedly to select USB source.
- 2 Connect a USB device.
- 3 Open the tape button cover.
- 4 Press **■▲** to open the tape door.
- 5 Load a tape.
- 6 Start play the USB device and then press **●** to start recording.
  - To pause/resume recording, press **||**.
  - To stop recording, press **■▲**.

### Record from external audio devices

- 1 Press **USB/MP3 LINK** repeatedly to select external audio source.
- 2 Connect an external audio device.
- 3 Open the tape button cover.
- 4 Press **■▲** to open the tape door.
- 5 Load a tape.
- 6 Start play the device and then press **●** to start recording.
  - To pause/resume recording, press **||**.
  - To stop recording, press **■▲**.



## 9 Use more of your Micro System

---

### Set the sleep timer

This unit can switch to standby automatically after a preset period of time.

- 1 When the unit is turned on, press **SLEEP/TIMER** repeatedly to select a set period of time (in minutes).
  - ↳ When sleep timer is activated, the display shows **zZ**.

#### To deactivate sleep timer

- 1 Press **SLEEP/TIMER** repeatedly until "SLP OFF" is displayed.
  - ↳ When sleep timer is deactivated, **zZ** disappears on the display.

### Set the alarm timer

This unit can be used as an alarm clock. The DISC, TUNER or USB is activated to play at a preset time.

- 1 Ensure that you have set the clock correctly.
- 2 In standby mode, press and hold **SLEEP/TIMER** for more than 2 seconds.
- 3 Press **CD**, **TUNER** or **USB/MP3 LINK** to select a source.
- 4 Press **SLEEP/TIMER** to confirm.
  - ↳ The hour digits are displayed and begin to blink.
- 5 Press **VOL +/-** to set the hour.
- 6 Press **SLEEP/TIMER** to confirm.
  - ↳ The minute digits are displayed and begin to blink.

- 7 Press **VOL +/-** to set the minute.
- 8 Press **SLEEP/TIMER** to confirm.
  - ↳ The timer is set and activated.

---

### Activate and deactivate the alarm timer

- 1 In standby mode, press **SLEEP/TIMER** repeatedly to activate or deactivate the timer.
  - ↳ If the timer is activated, the display shows **⌚**.
  - ↳ If the timer is deactivated, **⌚** disappears on the display.




#### Note

- If disc/USB device source is selected and the track cannot be played, tuner is activated automatically.

---

### Listen through headphone

- 1 Plug a headphone into the  socket on the unit.

# 10 Product information



## Note

- Product information is subject to change without prior notice.

## Specifications

### Amplifier

Rated Output Power	2X5W RMS
Frequency Response	60 - 16kHz, $\pm 3$ dB
Signal to Noise Ratio	>62dB

### Disc

Laser Type	Semiconductor
Disc Diameter	12cm/8cm
Support Disc	CD-DA, CD-R, CD-RW, MP3-CD, WMA-CD
Audio DAC	24Bits / 44.1kHz
Total Harmonic Distortion	<1%
Frequency Response	60Hz -16kHz
S/N Ratio	>62dBA

### Tuner

Tuning Range	FM: 87.5 - 108MHz; MW: 531 - 1602kHz
Tuning grid	50 kHz (FM); 9 kHz (MW)
Total Harmonic Distortion	<3%
Signal to Noise Ratio	>50 dB

### Tape deck

Frequency response	125 - 8000
• Normal tape (type I)	Hz (8 dB)
Signal-to-noise ratio	40 dBA
• Normal tape (type I)	
Wow and flutter	<0.4% JIS

### Speakers

Speaker Impedance	4ohm
-------------------	------

### General information-Specs

Power supply	Model: GFP181T-1512-1 or GFP181DA-1512-1, Input: AC100-240V~, 50/60Hz, 0.35A Output: DC15V, 1.2A
Operation Power Consumption	26 W
Standby Power Consumption	<4 W
Dimensions	
• Main Unit (W x H x D)	152 x 228 x 222mm
• Speaker Box (W x H x D)	146 x 232 x 140mm
Weight	
• With Packing	6.6 kg
• Main Unit	1.95 kg
• Speaker Box	2 x 1.2 kg

---

## Supported MP3 disc formats

- ISO9660, Joliet
- Maximum title number: 512 (depending on file name length)
- Maximum album number: 255
- Supported sampling frequencies: 32 kHz, 44.1kHz, 48 kHz
- Supported Bit-rates: 32~256 (kbps), variable bit rates

---

## USB playability information

### Compatible USB devices:

- USB flash memory (USB 2.0 or USB1.1)
- USB flash players (USB 2.0 or USB1.1)
- memory cards (requires an additional card reader to work with this apparatus)

### Supported formats:

- USB or memory file format FAT12, FAT16, FAT32 (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 Kbps and variable bit rate
- WMA v9 or earlier
- Directory nesting up to a maximum of 8 levels
- Number of albums/ folders: maximum 99
- Number of tracks/titles: maximum 999
- ID3 tag v2.0 - v2.4
- File name in Unicode UTF8 (maximum length: 128 bytes)

### Unsupported formats:

- Empty albums: an empty album is an album that does not contain MP3/ WMA files, and is not be shown in the display.

- Unsupported file formats are skipped. For example, Word documents (.doc) or MP3 files with extension .dlf are ignored and not played.
- AAC, WAV, PCM audio files
- DRM protected WMA files (.wav, .m4a, .m4p, .mp4, .aac)
- WMA files in Lossless format

---

## Maintenance

### Clean the cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### Clean discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the centre out.



- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analogue records.

 
### Clean the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good play quality, clean the disc lens with Phillips CD lens cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

### Clean the heads and the tape paths

- To ensure good recording and play quality, clean the heads **A**, the capstan(s) **B**, and pressure roller(s) **C** after every 50 hours of tape operation.

- Use a cotton swab slightly moistened with cleaning fluid or alcohol.

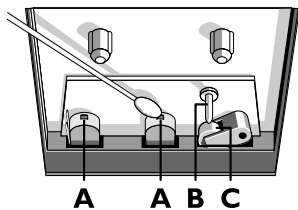

- You can also clean the heads by playing a cleaning tape once.

#### **Demagnetise the heads**

- Use a demagnetising tape available at your dealer.

# 11 Troubleshooting



## Caution

- Never remove the casing of this apparatus.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the Philips web site ([www.Philips.com/support](http://www.Philips.com/support)). When you contact Philips, ensure that your apparatus is nearby and the model number and serial number are available.

### No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet.
- To save power, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

### No sound or poor sound

- Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

### Left and right sound outputs reversed

Check the speaker connections and location.

### No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the system again.
- As a power-saving feature, the unit switches off automatically 15 minutes after track play reaches the end and no control is operated.

### Cannot record/play tape

- Clean deck parts.
- Use only NORMAL tape.
- Apply a piece of adhesive tape over the missing tab space.

### Remote control does not work

- Before you press any function button, first select the correct source with the remote control instead of the main unit.
- Reduce the distance between the remote control and the unit.
- Insert the battery with its polarities (+/- signs) aligned as indicated.
- Replace the battery.
- Aim the remote control directly at the sensor on the front of the unit.

### USB device not supported

- The USB device is incompatible with the apparatus. Try another one.

### No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

### Poor radio reception

- Increase the distance between the unit and your TV or VCR.
- Fully extend the FM antenna.
- Connect an outdoor FM antenna instead.

### Timer does not work

- Set the clock correctly.
- Switch on the timer.

### Clock/timer setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/timer.

