## www.philips.com/welcome



# **PHILIPS**

## **Contents**

_		
1	Notice	4
	Copyright	4
	About Progressive Scan	4
	Trademarks	4
2	Important	5 5 5
	Safety	5
	Product care	5
	Disposal of your old product	
	and batteries	6
3	Your home theater	6
	Main unit	6
	Remote control	7
4	Connect your home theater	8
	Connectors	8
	Connect to the TV	8
	Connect audio from TV or other devices	9
	Connect a microphone	9
5	Use your home theater	10
	Before you start	10
	Choose your sound	10
	Play a disc	10
	Play from a USB storage device	12
	More play features for disc or USB	12
	Play from radio	13
	Play audio from TV or other devices	13
	Create MP3 audio files	13
6	Change settings	14
	Access the setup menu	14
	Change general settings	14
	Change audio settings	14
	Change video settings	15
	Change preference settings	15
7	Update software	16
	Check software version	16
	Update software from a CD-R or USB	16

8	Product specifications	16
9	Troubleshooting	18
10	) Index	19

## 1 Notice

## Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

## **About Progressive Scan**

Consumers should note that not all high definition television sets are fully compatible with this product and may cause artifacts to be displayed in the picture. In case of 525 or 625 progressive scan picture problems, it is recommended that the user switch the connection to the 'standard definition' output. If there are questions regarding our TV set compatibility with this model 525p and 625p DVD player, please contact our customer service center.

## **Trademarks**



Manufactured under license from Dolby Laboratories. Dolby, Pro Logic, and the double-D symbol are trademarks of Dolby Laboratories.



DivX \*, DivX Certified \* and associated logos are registered trademarks of DivX, Inc. and are used under license.

ABOUT DIVX VIDEO: DivX \* is a digital video format created by DivX, Inc. This is an official DivX Certified device that plays DivX video. Visit www.divx.com for more information and software tools to convert your files into DivX video.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified \* device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com with this code to complete the registration process and learn more about DivX VOD.



Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.



HDMI, and HDMI logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI licensing LLC in the United States and other countries.



The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, inc.



## 2 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

## Safety

### Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

### Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

#### Risk of injury or damage to the home theater!

- For wall-mountable products, use only the supplied wall mount bracket. Secure the wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.

- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.

### Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

#### Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

## Product care

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

# Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/ EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

 


Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health

## 3 Your home theater


Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

## Main unit



- 1 Disc compartment
- ② ≜ (Open/Close) Opens or closes the disc compartment.
- ③ ►II (Play/Pause)
  Starts, pauses or resumes play.
- (4) (Stop)
  - Stops play.
  - In radio mode, erases the current preset radio station.
- (5) O (Standby-On)
  Switches the home theater on or to standby.
- (6) SOURCE
  Selects an audio/video source for the home theater.
- (7) **|4**/**▶**|
  - Skips to the previous or next track, chapter or file.
  - In radio mode, selects a preset radio station.
- 8 Display panel
- (9) Volume control wheel

## Remote control

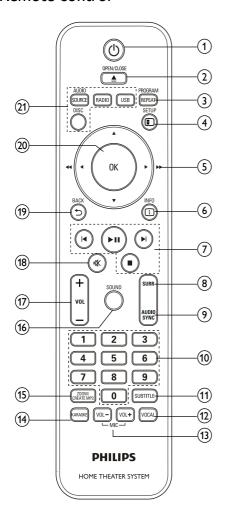

## 1 (Standby-On)

Switches the home theater on or to standby.

## (2) ▲ OPEN/CLOSE

Opens or closes the disc compartment.

## (3) REPEAT / PROGRAM

- Selects or turns off repeat mode.
- In radio mode, program radio stations.

## (4) SETUP

Accesses or exits the setup menu.

## (5) ▲ ▼ ◀► (Navigation buttons)

- Navigate menus.
- In video mode, press left or right to fast backward or fast forward.
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

## (6) (1) INFO

Displays information about what is playing.

## 7 Playback buttons

Control playback.

## (8) SURR (Surround Sound)

Switches to surround sound or stereo sound.

#### (9) AUDIO SYNC

- Selects an audio language or channel.
- Press and hold to synchronize audio with video. Use with +/-.

## (10) Numeric buttons

Selects an item to play.

### (11) SUBTITLE

Selects subtitle language for video.

## (12) VOCAL

Turns off or on the vocal by changing the audio channel.

## (13) MIC VOL +/-

Increases or decreases microphone volume.

#### (14) KARAOKE

Toggles through various karaoke options.

#### (15) CREATE MP3 / ZOOM

- Accesses the menu to create MP3.
- Zooms into a video scene or picture.

## (16) SOUND

Selects a sound mode.

### (17) VOL +/-

Increases or decreases volume.

#### (18) **№** (Mute)

Mutes or restores volume.

## (19) **→** BACK

Returns to a previous menu screen.

### (20) OK

Confirms an entry or selection.

### (21) Source buttons

- AUDIO SOURCE: Selects an audio input source.
- RADIO: Switches to FM radio.
- USB: Switches to USB storage device.
- DISC: Switches to disc source.

# 4 Connect your home theater

This section helps you connect your home theater to a TV and other devices. The basic connections of the home theater with its accessories are provided in the Quick Start. For a comprehensive interactive guide, see www.connectivityguide.philips.com.



 
## Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.

## Connectors

Connect other devices to your home theater.

### Side connectors



① •**←** (USB)

Audio, video or picture input from a USB storage device.

2 MIC

Audio input from a microphone.

#### **Back connectors**



1 AC MAINS~

Connects to the power supply.

(2) SPEAKERS

Connects to the supplied speakers and subwoofer.

(3) HDMI OUT

Connects to the HDMI input on the TV.

(4) VIDEO OUT-VIDEO

Connects to the composite video input on the TV

(5) AUDIO IN-AUX

Connects to the analog audio output on the TV or an analog device.

(6) FM ANTENNA

Connects the FM antenna for radio reception.

7 COMPONENT VIDEO OUT-Y Pb Pr Connects to the component video input on the TV.

## Connect to the TV

Connect your home theater directly to a TV through one of the following connectors (from highest to basic quality video):

- 1 HDMI
- Component video
- 3 Composite video


## Option 1: Connect to the TV through HDMI



#### lote

 If the HDTV has a DVI connector, connect using an HDMI/DVI adapter.

(Cable not supplied)

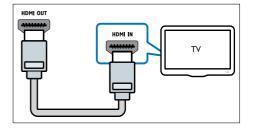


# Option 2: Connect to the TV through YPbPr (component video)



Note

 The component video cable or connector might be labeled Y Cb Cr or YUV.

(Cable not supplied)

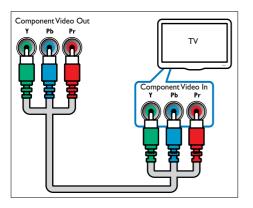


# Option 3: Connect to the TV through composite video (CVBS)



Note

  The composite video cable or connector might be labeled AV IN, VIDEO IN, COMPOSITE or BASEBAND.




# Connect audio from TV or other devices

Use your home theater to play audio from the TV or other device such as a cable box.




• Press AUDIO SOURCE to select the audio output of your connection.

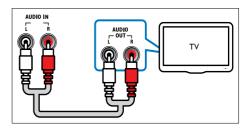

## Connect a microphone

 (Microphone not supplied)



## 5 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

## Before you start

Check that you:

 
- Make the necessary connections and complete the setup as described in the Ouick Start.
- Switch the TV to the correct source for the home theater.

## Choose your sound

This section helps you choose the ideal sound for your video or music.

## Change sound mode

Select predefined sound modes to suit your video or music.




Press **SOUND** repeatedly to cycle through the available sound modes.

<u> </u>	Б
Sound mode	Description
ACTION / ROCK	Enhanced low and high-range. Ideal for action movies and rock or pop music.
DRAMA / JAZZ	Clear mid and high-range. Ideal for drama movies and jazz music.
CONCERT/ CLASSIC	Neutral sound. Ideal for live concerts and classical music.
SPORTS	Moderate mid-range and surround effects for clear vocals and the atmosphere of a live sport venue.
NIGHT	Dynamically controlled sound mode suitable for watching movies at night or for non-intrusive background music.

## Change surround sound mode

 Experience an immersive audio experience with surround sound modes.



Press **SURR** repeatedly to cycle through the available surround modes.

Option	Description
MULTI- CHANNEL	Immersive multi-channel sound for an enhanced movie experience.
STEREO	Two-channel stereo sound. Ideal for listening to music.

## Play a disc

The home theater can play a wide variety of discs, including video, audio and mixed media (for example, a CD-R that contains JPEG pictures and MP3 music).

- 1 Insert a disc into the home theater.
- 2 Press DISC.
  - → The disc plays or the disc main menu appears.
- **3** Press the following buttons to control play:

Button	Action
Navigation buttons	Navigate menus.
ОК	Confirms an entry or selection.
►II	Starts, pauses or resumes play.
	Stops play.
<b>I</b> ◀ / ▶ <b>I</b>	Skips to the previous or next track, chapter or file.
<b>44/</b>	Fast backwards or fast forwards. Press repeatedly to change the search speed.
ZOOM	Zooms into a video scene or picture.

## Use video options

Access several useful features while viewing video.



### Note

 Available video options depend on the video source.

Button	Action
<b>A</b> / <b>V</b>	Searches slow-backward or slow-forward. Press repeatedly to change the search speed. For VCD/SVCD, slow-backward search is not available.
AUDIO SYNC	Selects an audio language or channel.
SUBTITLE	Selects subtitle language for video.
① INFO	Displays information about what is playing.
REPEAT	Repeats a chapter or title.

## Use picture options

Access several useful features while viewing pictures.

Button	Action
▲/▼	Flips the photo vertically or horizontally.
<b>◀/▶</b>	Rotates the picture counter- clockwise or clockwise.
	Skips to the previous or next picture.
REPEAT	Repeats a single file in the folder or repeats the entire folder.
① INFO	Displays photo albums in a thumbnail overview.

## Use audio options

Access several useful features while audio is played.

Button	Action
REPEAT	Repeats a track or the entire disc.

## Use karaoke options

Access several useful features while playing karaoke disc.



#### Vote

- Ensure that a microphone (not supplied) is connected to the MIC connector on this home theater before play.
- Set the microphone volume to the minimum level before connecting the microphone to prevent howling.

Button	Action
KARAOKE	Toggles through various karaoke options.  [Mic Off]/[Mic On] – Press ◀▶ to turn on or off the microphone output.  [Vol] – Press ◀▶ to set the default microphone volume level.  [Echo] – Press ◀▶ to set the echo level.  [Key] – Press ◀▶ to set the pitch level that match your voice.  [Karaoke Scoring] – Press ◀▶ to set karaoke scoring when playback a DVD or VCD.
MIC VOL	Increases or decreases
+/-	microphone volume.
VOCAL	Turns off or on the vocal by changing the audio channel.

## Play from a USB storage device

The home theater is fitted with a USB connector that allows you to view pictures, listen to music or watch movies stored on a USB storage device.

- 1 Connect the USB storage device to the home theater.
- 2 Press USB.
  - → A content browser appears.
- 3 Select a file, then press OK.
- 4 Press the playback buttons to control play (see 'Play a disc' on page 10).



#### Note

- If the USB storage device does not fit into the connector, use a USB extension cable.
- The home theater does not support digital cameras that need a computer program to display photos.
- The USB storage device must be FAT or DOSformatted, and Mass Storage Class compliant.

# More play features for disc or USB

Several advanced features are available for video or picture playback from a disc or USB storage device.

## Play a musical slideshow

Play music and pictures simultaneously to create a musical slideshow. The files must be stored on the same disc or USB storage device.

- 1 Select a music track, then press **OK**.
- Press SACK and go to the picture folder.
- 3 Select a picture, then press **OK** to start slideshow.
- Press to stop slideshow.
- Press again to stop music.

## Synchronize audio with video

If the audio and video are not synchronized, you can delay the audio to match the video.

- Press and hold AUDIO SYNC until the audio sync message appears on the display panel.
- 2 Press +/- within five seconds to sync the audio with your video.

## Quick skip play to a specific time

Quick skip to a specific part of a video by entering the time of a scene.

- 1 During video play, press I INFO.
- Press the Navigation buttons and OK to select:
  - **[TT Time]** : Title time.
  - [Ch Time]: Chapter time.
  - [Disc Time] : Disc time.
  - [Track Time] : Track time.
- 3 Enter the time of the scene, then press **OK**.

## Repeat play a specific section

Select sections of audio or video for repeat playback.

- 1 During playback, press INFO.
- 2 Select [Repeat AB] in the menu.
- 3 Press **OK** to mark the start point.
- 4 Press **OK** again to mark the end point.
  - → Repeat play starts.
- To cancel repeat A-B, press ① INFO, select [Repeat AB] > [Off], then press OK.



Note

 Repeat play is only possible within a track/ chapter.

## Play from radio

The home theater can store up to 40 radio stations.

- 1 Check that the FM antenna is connected.
- 2 Press RADIO.
  - "AUTO INSTALL...PRESS PLAY" appears on the display panel if you have not installed any radio stations. Press ►II.
- **3** Press the following buttons to control play:

Button	Action	
I <b>⊲</b> / ▶I	Selects a preset radio station.	
<b>44/</b>	Searches for a radio station.	
$\blacksquare lacktriangle$	Fine tunes a radio frequency.	
	Press and hold to erase the preset radio station. Press to stop the installation of radio stations.	
PROGRAM	Manual: Press once to access program mode, and press again to store the radio station. Automatic: Press and hold for five seconds to reinstall radio stations.	



#### Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- For the best reception, place the antenna away from the TV or other sources of radiation.

## Change tuning grid

In some countries, you can switch the FM tuning grid between 50 kHz and 100 kHz. Changing tuning grid erases all preset radio stations.

- 1 Press RADIO.
- 2 Press ■.
- Press and hold ►II until 'GRID 9' (50 kHz) or 'GRID 10' (100 kHz) is displayed.

# Play audio from TV or other devices

Press AUDIO SOURCE repeatedly to select the audio output of the connected device (see 'Connect audio from TV or other devices' on page 9).

## Create MP3 audio files

Use the home theater to convert audio CDs into MP3 audio files.

- 1 Insert an audio CD (CDDA/HDCD) into the home theater.
- 2 Connect a USB storage device to the home theater.
  - When audio is played, press CREATE MP3.
- 4 Select [Yes] and press OK to confirm.

CREATE MP3				
OPTIONS		TRA	.CK	
Speed	Normal	O Track01	04:14	
Bitrate	128kbps	O Track02	04:17	
CRT ID3	Yes	O Track03	03:58	
Device	USB1	O Track04	04:51	
Device	OODT	O Track05	03:53	
SUMMARY		O Track06	04:09	
Select Track 0		O Track07	04:38	
Time	00:00		•	
Start	Exit	Select All	Deselect All	

- 5 Select the settings in the [OPTIONS] panel, then press OK.
  - [Speed]: Selects the write-to-file speed.
    - [Bitrate]: Selects the conversion quality.
  - [CRT ID3]: Copies information on the tracks in the MP3 files.
  - **[Device]**: Selects the USB device which you use to store the MP3 files.
- 6 Press ▶ to access the [TRACK] panel.
- / Select an audio track, then press **OK**.
  - [Select All] : Selects all tracks.
  - [Deselect all] : De-selects all tracks.
- 8 Select [Start] in the menu to convert, then press OK.
  - → A new folder is created in the USB storage device to store all the new MP3 audio files.
  - To exit the menu, select [Exit] and press OK.



#### Note

- During the conversion process, do not press any buttons.
- DTS CDs and copy-protected CDs cannot be converted.
- Write-protected or password-protected USB storage device cannot be used to store MP3 files.

## 6 Change settings

This section helps you to change the settings of your home theater.



### Caution

 Most of the settings are already configured with the best value for the home theater.
 Unless you have a specific reason to change a setting, it is best to leave it at the default value.

## Access the setup menu

1 Press SETUP.

→ The following menu appears.

Symbol	Description
*	[General Setup]
•()	[Audio Setup]
0	[Video Setup]
	[Preference Setup]

- 2 Select a setup menu, then press OK. See the following sections for information about how to change the settings of your home theater.
- Press → BACK to return to the previous menu, or press SETUP to exit.



#### Note

· You cannot change a setting that is grayed out.

## Change general settings

1 Press 🗈 SETUP.

Select [General Setup], then press OK.
Select and adjust the following settings:

 [Disc Lock]: Restricts play to disc. Password (PIN code) is required to unlock the disc before play.

- [Display Dim]: Changes the brightness of the display panel.
- **[OSD Language]**: Selects the onscreen display menu language.
- [Screen Saver]: Enables or disables screen saver mode. If enabled, the screen enters idle mode after 10 minutes of inactivity (for example, in pause or stop mode).
- [Sleep Timer]: Sets a sleep timer to switch the home theater to standby after a specific time.
- [Auto Standby]: Enables or disables auto standby. If enabled, the home theater switches to standby after 30 minutes of inactivity (for example, in pause or stop mode).
- [DivX(R) VOD Code]: Displays the DivX VOD registration code for the home theater.
- **4** Press **OK** to confirm your choice.



Note

 Before you purchase DivX videos and play them on the home theater, register the home theater on www.divx.com using the DivX VOD code.

## Change audio settings

1 Press ■ SETUP.

Select [Audio Setup], then press OK.

Select and adjust the following settings:

- [Speakers Volume]: Sets the volume of each speaker to obtain the ideal audio balance.
- [Speakers Delay]: Sets the delay time for center and rear speakers to obtain an equal audio transmission from all the speakers.
- **[HDMI Audio]**: Enables or disables HDMI audio output for the TV.
- [Audio Sync]: Sets a delay for audio output when you play a video disc.
- [Prologic II Mode]: Selects a 5.1 surround sound mode to suit your video or music.
- 4 Press **OK** to confirm your choice.



#### Note

 For settings related to HDMI, the TV must be connected through HDMI.

## Change video settings

1 Press SETUP.

Select [Video Setup], then press OK.

Select and adjust the following settings:

- [TV System] : Selects a TV system that is compatible with the TV.
- **[TV Display]**: Selects a picture display format to fit the TV screen.
- [Picture Settings] : Selects a predefined color setting.
- [HDMI Setup]: Selects HDMI video resolution and the wide screen display format for the TV. The Wide Screen Display option is only available for 16:9 wide screen TV display setting.
- [Progressive] : Enables or disables progressive scan mode.
- [HD JPEG] : Enables or disables display of high definition JPEG images.
- Press OK to confirm your choice.



#### Note

- The best setting is automatically selected for the TV. If you need to change the setting, ensure that the TV supports the new setting.
- Some video settings depend on the video source, ensure that the disc and the TV support the setting or feature.
- For settings related to HDMI, the TV must be connected through HDMI.
- For settings related to progressive or component video, the TV must be connected through Component Video.

## Change preference settings

1 Press © SETUP.

Select [Preference Setup], then press OK.

Select and adjust the following settings:

- [Audio] : Selects audio language for video.
- [Subtitle] : Selects subtitle language for video
- [Disc Menu] : Selects menu language for video disc.
- [Parental]: Restricts access to discs that are recorded with ratings. To play all discs irrespective of the rating, select level '8'.
- **[PBC]**: Displays or skips the content menu for VCD and SVCD discs.
- **[MP3/JPEG Display]**: Displays the MP3/JPEG folders or all the files.
- [Password]: Sets or changes a PIN code to play a restricted disc. Enter '0000' if you do not have a PIN or if you have forgotten your PIN.
- [DivX Subtitle]: Selects a character set that supports the DivX subtitle.
- **[Version Info.]**: Displays the software version for the home theater.
- [Default]: Resets the home theater to the default settings programmed at the factory.
- 4 Press **OK** to confirm your choice.



#### Note

- If your preferred disc language is not available, you can select [Others] from the list and enter the 4-digit language code which can be found at the back of this manual.
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.
- You cannot reset disc lock, password (PIN code) and parental control settings to their default values.

## Update software

To check for new updates, compare the current software version of your home theater with the latest software version (if available) on the Philips web site.

## Check software version

- Press SETUP.
- Select [Preference Setup] > [Version Info.], then press OK.
  - → The software version is displayed.

## Update software from a CD-R or USB

- Check for the latest software version on www.philips.com/support.
  - Search for your model and click on 'software&drivers'
- Download the software onto a CD-R or USB storage device.
- Insert the CD-R or connect the USB storage device to the home theater.
- Follow the instructions on the TV to confirm the update.
  - → When complete, the home theater automatically switches off and on again.
- If not, disconnect the power cord for a few seconds and then reconnect it.

## Caution

• Do not turn off the power or remove the CD-R or USB storage device when the software update is in progress because you might damage the home theater.

## 8 **Product specifications**



#### Note

· Specification and design are subject to change without notice.

#### Region code

The type plate on the back or bottom of the home theater shows which regions it supports

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

### Playback media

DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R DL. CD-R/CD-RW. Audio CD. Video CD/SVCD. Picture CD, MP3-CD, WMA-CD, DivX-CD, USB storage device

#### File Format

- Audio: .mp3, .wma
- Video: .divx, .divx ultra, .mpeg, .mpg
- Picture: .jpeg, .jpg

#### **Amplifier**

- Total output power: 600 W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
  - AUX: 2 V

#### Video

- Signal system: PAL / NTSC
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

#### Audio

- Sampling frequency:
  - MP3: 32 kHz, 44.1 kHz, 48 kHz
  - WMA: 44.1 kHz. 48 kHz
- Constant bit rate:
  - MP3: 112 kbps 320 kbps
  - WMA: 64 kbps 192 kbps

#### Radio

- Tuning range: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 180 Hz-10 kHz

#### USB

- Compatibility: Hi-Speed USB (2.0)
- Class support: UMS (USB Mass Storage Class)
- File system: FAT12, FAT16, FAT32
- Maximum memory support: < 160GB</li>

#### Main Unit

- Power supply:
  - Latin America/Asia Pacific: 110-240V, ~50-60Hz
- Power consumption: 100 W
- Standby power consumption: ≤ 0.9 W
- Dimensions (WxHxD): 360 x 58 x 320 (mm)
- Weight: 2.84 kg

#### Subwoofer

- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD): 122.6 x 307 x 369 (mm)
- Weight: 3.84 kg
- Cable length: 3 m

#### Speakers

- System: full range satellite
- Speaker impedance: 8 ohm (center), 4 ohm (Front/Rear)
- Speaker drivers: 3" full range
- Dimensions (WxHxD):
  - Center: 160.9 x 95 x 92 (mm)
  - Front:  $95 \times 160.9 \times 87$  (mm)
  - Rear: 254mm x 1001,5mm x 254 (mm)

- Weight:
  - Center: 0.77 kg
  - Front: 0.56 kg/each
  - Rear: 3.25 kg/each
- Cable length:
  - Center: 2m
  - Front: 3 m
  - Rear: 10 m

## Laser specification

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 645 665 nm (DVD), 770 -800 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

## 9 Troubleshooting



## Warning

 Risk of electric shock, Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at www.philips.com/welcome.

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back or bottom of your product. Write the numbers here:

Model No.			
Serial No.			

### Main unit

### The buttons on this home theater do not work.

 Disconnect the home theater from the power outlet for a few minutes, then reconnect.

### **Picture**

## No picture.

- Ensure that the TV is switched to the correct source for this home theater.
- If this happens when you switch on the progressive scan mode, switch to its default mode: 1) Press ≜ to open the disc compartment. 2) Press the Numeric buttons'1'.

#### No picture on HDMI connection.

- Check if the HDMI cable is faulty. Replace with a new HDMI cable.
- If this happens when you change the HDMI video resolution, switch to its default mode:
  - 1) Press ≜ to open the disc compartment.
  - 2) Press the Numeric buttons '1'.

### Sound

#### No sound.

 Ensure that the audio cables are connected and select the correct input source (for example, AUDIO SOURCE) for the device you want to play.

#### No sound on HDMI connection.

- You might not hear any sound if the connected device is not HDCP (Highbandwidth Digital Content Protection) compliant or only DVI compatible. Use an analog or digital audio connection.
- Ensure that the [HDMI Audio] is enabled.

## No sound from TV program.

 Connect an audio cable from the audio input on the home theater to the audio output on the TV, then press AUDIO SOURCE repeatedly to select the correct audio source.

#### Distorted sound or echo.

• Ensure that the TV volume is muted or set to minimum if you are playing audio through the home theater.

### Audio and video are not synchronized.

 1) Press and hold AUDIO SYNC. 2) Press +/- within five seconds.

## Play

## Disc cannot be played.

- Clean the disc.
- Ensure that the home theater supports the disc (see 'Product specifications' on page 16).
- Ensure that the home theater supports the region code of the DVD.
- For DVD±RW or DVD±R, ensure that the disc is finalized.

## DivX video files cannot be played.

- Ensure that the DivX file is encoded according to the 'Home Theater Profile' with the DivX encoder.
- Ensure that the DivX video file is complete.

## DivX subtitles do not display correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set: 1) Press
   SETUP. 2) Select [Preference Setup].
   3) Select [DivX Subtitle]. 4) Select a supported character set. 5) Press OK.

## The contents of a USB storage device cannot be read.

- Ensure that the format of the USB storage device is compatible with the home theater (see 'Product specifications' on page 16).
- Ensure that the USB storage device is formatted with a file system that is supported by the home theater (note that NTFS is not supported).

## 'No entry' or 'x' sign appears on the TV.

• The operation is not possible.

## 10 Index

A	
amplifier	16
audio	
connection	9
language	11, 15
synchronize with video	12
,	
C	_
care	5
change settings	14
connect	0 12
audio from TV	9, 13 8
guide microphone	9
other devices	9
TV	8
connectors	8
contact us	18
D	
disc	
play	10
supported discs	16
disposal of your product	6
DivX subtitle	15
subtitle	13
F	
file formats	16
K	
karaoke	
microphone	9
L	
language	
audio	15
disc menu	15
on-screen display	14
subtitle	15
M	
MP3	
create MP3 files	13

0	
overview	
connectors	8
main unit	6
remote control	7
P	
password	15
picture	
slide show	12
troubleshooting	18
play	
disc	10
options	10
radio	13 18
troubleshooting	12
USB storage device product care	5
product care product specifications	16
progressive scan	4
L0.	
R	
radio	
play	13
program	13
tune	13
tuning grid	13
recycle	6
region code	16
remote control	7 10, 12
repeat	10, 12
S	
safety	5
settings	
general	14
parental control	15
preferences	15
restore factory settings video	15 15
slideshow	
play musical slideshow	12
software	
update	16
version	16
sound	40
mode	10
surround	10 18
troubleshooting subtitle	18
language	11

time search video troubleshooting	12 18
audio from TV connect	9, 13 8
U USB play software update	12 16
V	
video options settings synchronize with audio	11 15 12

## Language Code

Abkhazian	6566	Inupiaq	7375	Pushto	8083
Afar	6565	Irish	7165	Russian	8285
Afrikaans	6570	Íslenska	7383	Quechua	8185
Amharic	6577	Italiano	7384	Raeto-Romance	8277
Arabic	6582	lvrit	7269	Romanian	8279
Armenian	7289	Japanese	7465	Rundi	8278
Assamese	6583	Javanese	7486	Samoan	8377
Avestan	6569	Kalaallisut	7576	Sango	8371
Aymara	6589	Kannada	7578	Sanskrit	8365
Azerhaijani	6590	Kashmiri	7583	Sardinian	8367
Bahasa Melayu	7783	Kazakh	7575	Serbian	8382
Bashkir	6665	Kernewek	7587	Shona	8378
Belarusian	6669	Khmer	7577	Shqip	8381
Bengali	6678	Kinyarwanda	8287	Sindhi	8368
Bihari	6672	Kirghiz	7589	Sinhalese	8373
Bislama	6673	Komi	7586	Slovensky	8373
Bokmål, Norwegian	7866	Korean	7579	Slovenian	8376
Bosanski	6683	Kuanyama; Kwanyama	7574	Somali Santa a Sanata and	8379
Brezhoneg	6682	Kurdish	7585	Sotho; Southern	8384
Bulgarian	667 I 7789	Lao	7679 7665	South Ndebele Sundanese	7882 8385
Burmese Castellano, Español	6983	Latina Latvian	7686	Suomi	7073
Catalán	6765	Letzeburgesch;	7666	Swahili	8387
Chamorro	6772	Limburgan; Limburger	7673	Swati	8383
Chechen	6769	Lingala	7678	Svenska	8386
Chewa; Chichewa; Nyanja		Lithuanian	7684	Tagalog	8476
中文	9072	Luxembourgish;	7666	Tahitian	8489
エス Chuang; Zhuang	9065	Macedonian	7775	Tajik	8471
Church Slavic; Slavonic	6785	Malagasy	7771	Tamil	8465
Chuvash	6786	Magyar	7285	Tatar	8484
Corsican	6779	Malayalam	7776	Telugu	8469
âeskv	6783	Maltese	7784	Thai	8472
Dansk	6865	Manx	7186	Tibetan	6679
Deutsch	6869	Maori	7773	Tigrinya	8473
Dzongkha	6890	Marathi	7782	Tonga (Tonga Islands)	8479
English	6978	Marshallese	7772	Tsonga	8483
Esperanto	6979	Moldavian	7779	Tswana	8478
Estonian	6984	Mongolian	7778	Türkçe	8482
Euskara	6985	Nauru	7865	Turkmen	8475
aïëóèî;	6976	Navaho; Navajo	7886	Twi	8487
Faroese	7079	Ndebele, North	7868	Uighur	8571
Français	7082	Ndebele, South	7882	Ukrainian	8575
Frysk	7089	Ndonga	787	Urdu	8582
Fijian	7074	Nederlands	7876	Uzbek	8590
Gaelic; Scottish Gaelic	7168	Nepali	7869	Vietnamese	8673
Gallegan	7176	Norsk	7879	Volapuk	8679
Georgian	7565	Northern Sami	8369	Walloon	8765
Gikuyu; Kikuyu	7573	North Ndebele	7868	Welsh	6789
Guarani	7178	Norwegian Nynorsk;	7878	Wolof	8779
Gujarati	7185	Occitan; Provencal	7967	Xhosa	8872
Hausa	7265 7290	Old Bulgarian; Old Slavonic	6785 7982	Yiddish Yoruba	8973 8979
Herero	7290 7273	Oriya	7982 7977	Toruba Zulu	9085
Hindi Hiri Motu	7273 7279	Oromo Ossetian; Ossetic	7977	∠ulu	7003
Hrwatski	6779	Pali	8073		
Ido	7379	Panjabi	8065		
Interlingua (Internationa		Persian	7065		
Interlingua (Internationa Interlingue	7365	Polski	8076		
Inuktitut	7385	Português	8084		
makutut	, 303	. o. tugues	5001		

