

3 Setup

Set up Bluetooth connection

With your PhotoFrame, you can set up a Bluetooth connection with a device like a mobile phone. Once a device is recognized, it's automatically accepted when it tries to connect with the PhotoFrame.

- In the home screen, select [Settings] and then tap OK to confirm.
- To use of Bluetooth connection is enabled, the PhotoFrame icon is displayed on the top right corner of the screen.
- Photos and/or video files in the selected album are displayed in slide show mode.

* Tip

If you want to play a music file, tap ▲ to access the folder, select a music file, and then tap OK to confirm.

To play a single music file, tap ▲ to access the folder, select a music file, and then tap OK to confirm.

With your PhotoFrame, you can set up a Bluetooth connection with a device like a mobile phone. Once a device is recognized, it's automatically accepted when it tries to connect with the PhotoFrame.

- In the home screen, select [Settings] and then tap OK to confirm.
- To use of Bluetooth connection is enabled, the PhotoFrame icon is displayed on the top right corner of the screen.
- Photos and/or video files in the selected album are displayed in slide show mode.

3 Setup

Play background music

If you have set music before:

- In [Play Background Music] menu, select [Turn On] and then tap OK to confirm.
- Only MP3 (MPEG Audio Layer 1) music files can be played on the PhotoFrame.

* Note

If you select an album and then tap OK to confirm, the PhotoFrame will play the music files in the selected album.

To play the previous music file, tap ▼.

With the PhotoFrame, you can play JPEG progressive JPEG photo and most video clips of a digital still camera in MPEG-4 (avi*, mov), MPEG-1 (*mpg, mpg, mp3*) and video (mp4, M4V, 3GP, 3GP2, 3GPP, 3GPP2) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing ensure that these video clips are compatible with your PhotoFrame.

- Some video clips in a format which is not compatible with your PhotoFrame, like a *.mpg file, will not be played. When a video clip is not played with no audio output, the icon is displayed on the screen.
- In a thumbnail/Multimode, a video file is displayed with the icon on the left top corner.

2 Play

Browse photos/video files in album mode

In the home screen, select [Browsed] and then tap OK to confirm.

- Connect the PhotoFrame from the PC, when files are transferred between the PhotoFrame and the PC.
- Open the supplied USB cable to the PhotoFrame and to the PC.

* Note

Ensure that you have installed Philips PhotoFrame Manager on your PC. For details, refer to Philips PhotoFrame Manager in the supplied CD-ROM.

After all transfer actions are complete, disconnect the USB cable from the PC and the PhotoFrame.

The PhotoFrame reboots.

2 Play

Play photos/video files

With the PhotoFrame, you can play JPEG progressive JPEG photo and most video clips of a digital still camera in MPEG-4 (avi*, mov), MPEG-1 (*mpg, mpg, mp3*) and video (mp4, M4V, 3GP, 3GP2, 3GPP, 3GPP2) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing ensure that these video clips are compatible with your PhotoFrame.

- During photo display, tap ■.
- An option menu is displayed.

* Tip

With the PhotoFrame, you can play JPEG progressive JPEG photo and most video clips of a digital still camera in MPEG-4 (avi*, mov), MPEG-1 (*mpg, mpg, mp3*) and video (mp4, M4V, 3GP, 3GP2, 3GPP, 3GPP2) format. Some video clips might have compatibility issues when played on your PhotoFrame. Before playing ensure that these video clips are compatible with your PhotoFrame.

Do not play a video clip in a format which is not compatible with your PhotoFrame, like a *.mpg file, will not be played. When a video clip is not played with no audio output, the icon is displayed on the screen.

In a thumbnail/Multimode, a video file is displayed with the icon on the left top corner.

2 Play

Transfer by Philips PhotoFrame Manager (recommended way)

Connect the PhotoFrame to the PC via the supplied USB cable.

- Open the supplied USB cable to the PhotoFrame and to the PC.
- An option menu is displayed.

* Note

For details on other applicable storage devices, refer to the User Manual of your PhotoFrame in the supplied CDROM.

Open the cover on the right rear of the PhotoFrame.

Philips PhotoFrame Manager starts automatically.

2 Play

Transfer photos/video files from an SD card

Do not remove a storage device from the PhotoFrame when files are transferring from or to the storage device.

- Open the cover on the right rear of the PhotoFrame.
- Press and hold the photo frame icon for more than 1 second.
- The language selection menu is displayed.

* Caution

For details on other applicable storage devices, refer to the User Manual of your PhotoFrame in the supplied CDROM.

Select a destination album on the PhotoFrame, and then tap OK to confirm.

Photos/video files are transferred to the PhotoFrame.

2 Turn on/off the PhotoFrame

Turn on/off the PhotoFrame

Press and hold the photo frame icon for more than 1 second.

- Press and hold the photo frame icon for more than 1 second.
- The language selection menu is displayed.

* Note

For other times when the on screen language is set before:

Press and hold the photo frame icon for more than 1 second.

The home screen is displayed.

2 Turn on/off the PhotoFrame

Turn on/off the PhotoFrame

Press and hold the photo frame icon for more than 1 second.

- Press and hold the photo frame icon for more than 1 second.
- The language selection menu is displayed.

* Note

For other times when the on screen language is set before:

Press and hold the photo frame icon for more than 1 second.

The home screen is displayed.

2 Turn on/off the PhotoFrame

Turn on/off the PhotoFrame

Press and hold the photo frame icon for more than 1 second.

- Press and hold the photo frame icon for more than 1 second.
- The language selection menu is displayed.

* Note

For other times when the on screen language is set before:

Press and hold the photo frame icon for more than 1 second.

The home screen is displayed.

2 Turn on/off the PhotoFrame

Turn on/off the PhotoFrame

Press and hold the photo frame icon for more than 1 second.

- Press and hold the photo frame icon for more than 1 second.
- The language selection menu is displayed.

* Note

For other times when the on screen language is set before:

Press and hold the photo frame icon for more than 1 second.

The home screen is displayed.