

General information

Warnings

- · Only use attachments or accessories specified by manufacturer.
- . The battery shall not be exposed to excessive heat such as sunshine, fire etc.
- Only for indoor use.

Care and safety information

Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- . Do not place any source of danger on the speaker (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.


- Do not block any ventilation opening
- · Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.

- Care of the cabinet
- Use a soft cloth slightly moistened to clean the cabinet. . Do not use a solution containing alcohol, spirits, ammonia or abrasives to clean the cabinets.

Accessories

Item	3.5mm to stereo cable	User manual	USB cable	Strap
Quantity	1	1	1	1

Top & Back panel

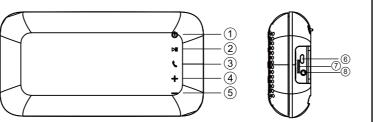

Top panel operation

A. Switch operation

		1.0	2. ▶II	3. 📞	4.+	5. —
BT	short press	function	play or pause	accept or end the current call	Next Song/Track*	Prev Song/Track*
mode.	long press	Power on/off	Disconnect BT connection	reject an incoming call	Volume increases, when it reaches highest volume it will make sound	Volume decreases
	short press	function				
Audio mode.	long press	Power on/off			Volume increases, when it reaches highest volume it will make sound	Volume decreases
	short press	function	FM channels and save		Next Stored radio/Track*	Back Stored radio/Trac
FM mode.	long press	Power on/off			Volume increases, when it reaches highest volume it will make sound	Volume decreases
	short press	function	play or pause		Next Song/Track*	Prev Song/Track*
TF mode.	long press	Power on/off			Volume increases, when it reaches highest volume it will make sound	Volume decreases

B. LED

- a. Red LED: charging
- b. blue LED: bluetooth mode c. green LED: Audio mode.
- d. blue and green LED alternate: FM mode.
- e. light blue LED: mircro SD/ TF card mode.

C. Back panel

- 6. [MICRO USB] socket for charging the unit. 7. [MICRO SD Card / TF Card]
- 8. [Audio]: 3.5mm Audio socket.

Over view of the speaker

- 1. 0 Power on/off and Source selection.
- Turn the speaker on or off with long press. *Select source by short pressing Bluetooth/ micro SD card (TF card)/ FM/ Line in (FM/ line in is available only when stereo cable is connected.

Play/ Pause -short press

- Disconnect Bluetooth connection -long press
- Search FM channel and save -long press
- Answer or end the current call-short press
- Reject an incoming call-long press

- Volume increase -long press Next song/channel-short press

- Volume decrease -long press
- Previous song/channel-short press
- 6. DC in- Recharging the built in battery.
- 7. Micro SD card (TF card).

8. Line in- Connect an external audio device and for use in FM as antenna.

** In case of laptop BT connection, this will work with windows media player



Register you product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



Over view of the speaker

Get started

- Place the speaker on a flat surface.
- Charge the built in battery
- Notes for charging
- a) Before use, fully charge the built in battery.
- b) The micro USB socket is for charging only.
- c) Rechargeable battery has a limited number of charge cycles.
- Battery life and number of charge cycle vary by use & settings.
- . Connect the USB cable between DC in socket on the speaker and USB Socket of a computer.

Bluetooth pairing

- To turn on the speaker long press "O" -speaker enters in Bluetooth mode blue LED will quickly flash.
- Turn on Bluetooth device like mobile, computer and search the Bluetooth name "PHILIPS BT3901".
- Press pair in the device to connect with the speaker, when enter pairing mode it will give out double "Beep" sound while it will give out
- "Beep" sound after pairing successfully.
- Blue light will stop flashing. (Normally no need to provide password, if need just put " 0000" as the password.)
- After pairing successfully, the device will connect with speaker automatically next time.
- Long press ">II" for 3 seconds to disconnect current device, speaker enters in pairing mode.

Audio in

- Short press "O" to choose FM mode/Audio in mode. Without Audio cable, speaker cannot go into line in mode.

Connect a stereo cable (audio input cable) on both ends to Audio in socket of speaker

The headphone socket on the external device

Over view of the speaker

Connect and audio stereo cable (Audio cable) and press" of speaker will go in FM mode and LED will flash blue & green alternatively. Long press "▶II", speaker will go in search mode & save all FM channels from 87.5 to 108Hz, "-" or "+" with short press will select desired channel. Without Audio cable, speaker cannot go into FM mode.

Micro SD card (TF card)

When inserting micro SD card (TF card), short press "(b" to choose micro SD/TF card mode with LED color changing to light blue. Without micro SD/TF card, speaker cannot go into micro SD/TF card mode.

Handfree phone call function

Blue light will flash when there is an incoming call, the speaker will also come out with 'Beep' sound, long press button " 📞" to reject the phone call, short press to anwer the call, short press again to end disconnect, by pressing "-"/"+"to decrease or increase volume.

Low power

When it comes to low power, the speaker will come out with "Been" sound, at the same time volume will be decreased to keep perfect playback pls charge in time, the speaker will shutdown for no power. If you are not using the speaker for long time, ensure that it is being fully charged once every month in order to protect the battery.

Warranty This Philips Bluetooth speaker system is warranted against any defect due to defective materials or

workmanship for 12 months from the date of purchase, should a defect develop during the period of warranty,

TPV Technology India Pvt. Ltd., affiliate of MMD Hong Kong Holding Limited undertake to repair the apparatus FREE OF CHARGE at any of its Authorized Service Center in India.

The warranty is not valid in case:

(10 a.m. to 9 p.m. Mondays to Saturdays & 10

a.m. to 6 p.m. on Sundays)

- Proof of purchase is not accompanied with this warranty card
- The warranty card is not completed immediately after purchase.
- 3. The apparatus is not used according to this user manual.
- Defects are caused due to improper or reckless use.
- 5. Any repairs are done by unauthorized personnel.
- The serial number is tampered with.
- 7. Defects due to causes beyond control like lightning, abnormal voltage, acts of God or while in transit to the purchaser's residence.

All Consumables and parts susceptible to normal wear and tear are not covered under this warranty.

Model No Product SL No

Invoice Number __ Date of Purchase: ___/___/___ Customer's Name and address:

Dealer Name & Stamp Always there to help you! Visit us at www.support.philips.com Helpline: 1800 425 6396 Email: india.callcentre@tpv-tech.com

12W RMS

Product specifications*

Rated output power Signal to Noise Ratio Audio input Frequency Response 70Hz~20KHz

Amplifier

Speurei		
Speaker Impedance	3 ohm	
Speaker Driver	3 inches	
Sensitivity	80 dBm	

Bluetooth

Bluetooth version	V 4.2	
Bluetooth freg	2.4GHz~248GHz	
Bluetooth range	Up to 10M (freespace)	

Power supply

General Introduction

r ower supply	34
Built in Battery	Li-polymer battery
Dimension main unit (LxWxH)mm	195x100x40mm
Weight	352g

10

Cornectivity	FM,mirco SD (TF-Card), Audio in, Bluetooth
Micro SD(TF card)	up to 32GB

*Specification subject to change without prior notice. Measured under specific conditions.