

# Quick Start Guide









Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

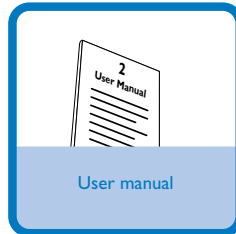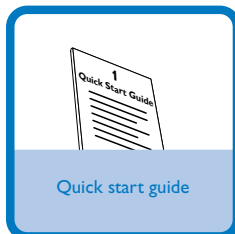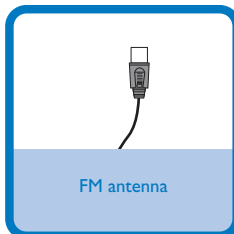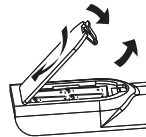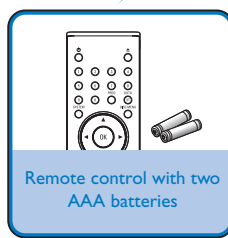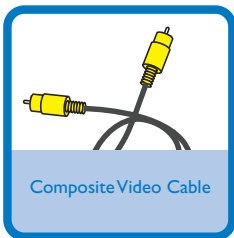


## Step A Connect

### Tips

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.


- 1 Connect the speaker cables.
- 2 Connect the FM antenna.
- 3 Connect the composite video audio cable to a TV.
- 4 Connect the power cords of the main set and TV.

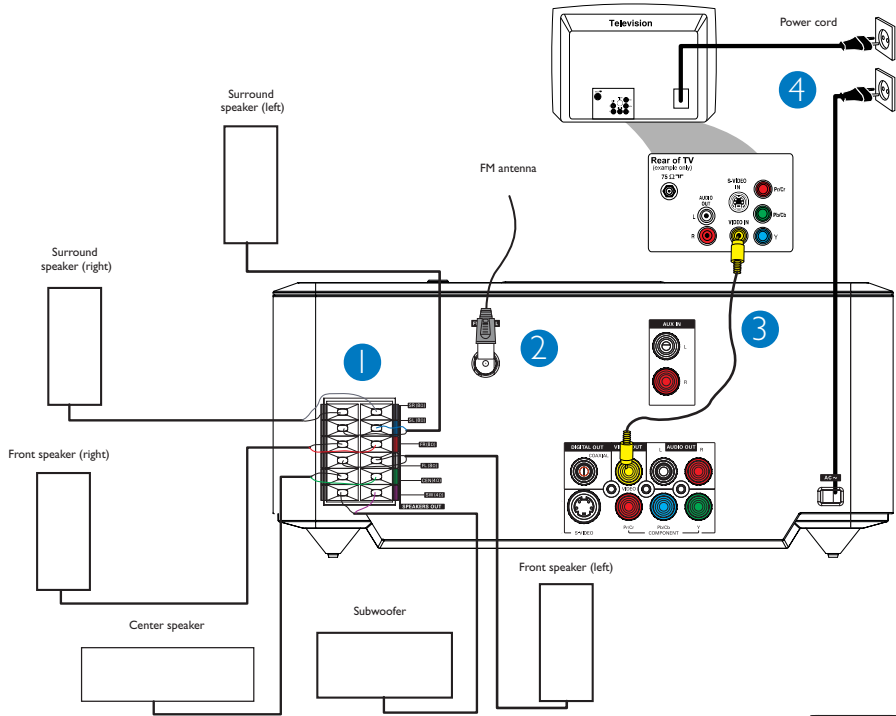

## Step B Setup

### Setting up the TV


- 1 Press **SOURCE** (DISC on the remote control) to select disc source.
- 2 Turn on the TV and set it to the correct Video In channel.

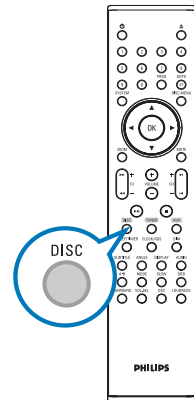

## Step B Setup

### Setting the clock

- 1 In standby mode, press and hold **CLOCK/RDS** on the remote control.
- 2 When the hour digits flash, turn **VOLUME-/+** on the system or press **VOL+/-** on the remote control to set the hours.
- 3 Press **CLOCK/RDS** again and the minute digits flash. Then turn **VOLUME-/+** on the system or press **VOL+/-** on the remote control to set the minutes.
- 4 Press **CLOCK/RDS** again to confirm the time setting.

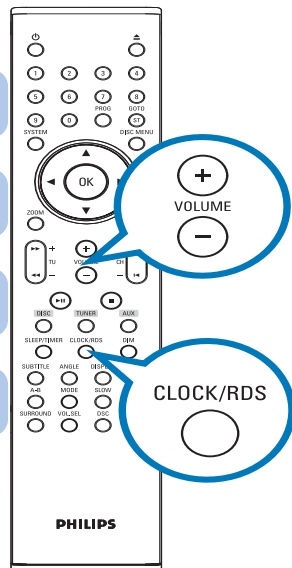


### Setting DVD menu options

#### IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press **SYSTEM MENU** on the remote control to exit the system menu and then **DISC** and "1" to exit progressive scan.

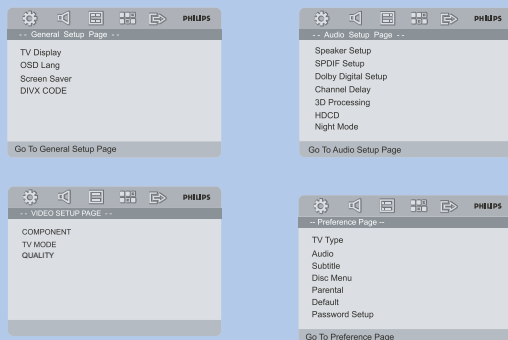

#### Tip

See chapters "Getting Started" and "System Menu Options" in the User Manual for detailed descriptions.

