

Quick start guide






 



Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

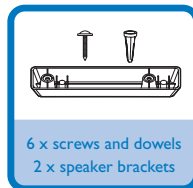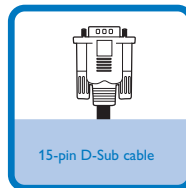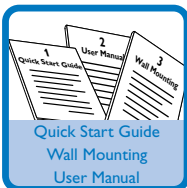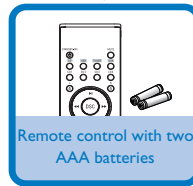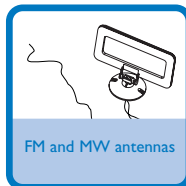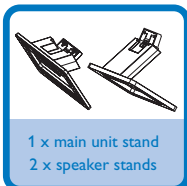


Step A **Connect**

- 1 Attach the supplied stands to the main unit and speakers respectively so that they can stand firmly on a desktop.
- 2 Connect the speaker and subwoofer cables.
- 3 Connect the MW and FM antennas.
- 4 Connect the power cable of the system.

Tip

- See the User Manual for how to connect other equipment to this system.
- See Wall Mounting for detailed instructions if you want to mount the system on the wall.


WARNING: When you are holding the speakers for mounting them on the stands, please **DO NOT** press on the speaker cloth directly to avoid any speaker damage!

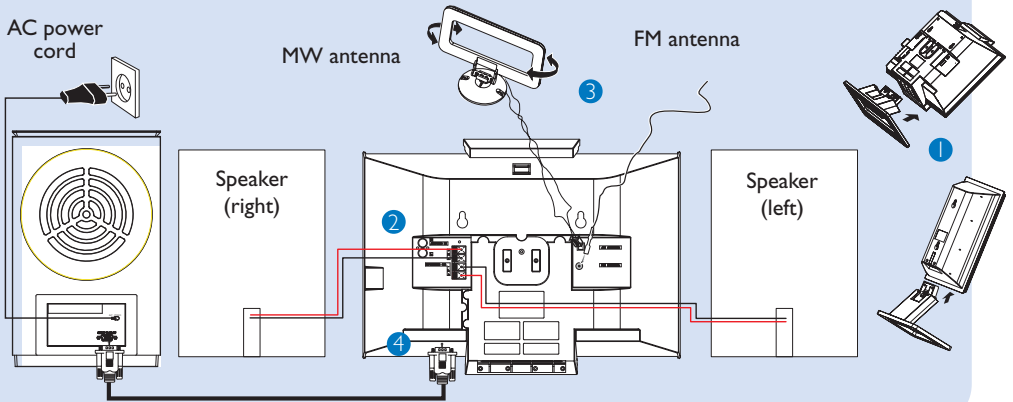

Step B **Setup**

Setting the clock

- 1 In active mode, press **CLOCK-TIMER** (**CLOCK** on the remote) repeatedly until the time digits flash.
- 2 Press **ALBUM-/+** **◀▶** (**◀▶▶** on the remote) repeatedly to set the hour.
- 3 Press **TITLE-/+** **◀|/▶|** (**ALBUM/PRESET +/-** on the remote) repeatedly to set the minute.
- 4 Press **CLOCK-TIMER** (**CLOCK** on the remote) again to store the setting.

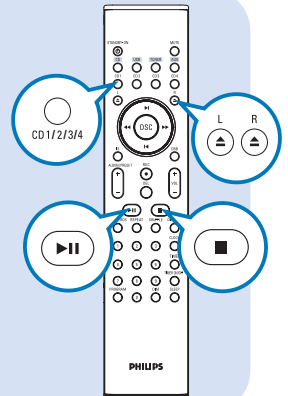

Playing a disc

1

Press **LEFT OPEN • CLOSE** or **RIGHT OPEN • CLOSE** on the front panel (**L ▲** or **R ▲** on the remote) to open the left or right CD door respectively.

2

Insert one or more discs with the printed side facing you. Press **LEFT OPEN • CLOSE** or **RIGHT OPEN • CLOSE** on the front panel (**L ▲** or **R ▲** on the remote) again to close the CD door.


3

Use **DISC 1/2/3/4** (or **CD 1/2/3/4** on the remote control) to select a disc for playback.

→ Playback will start automatically. If not press **▶▶**.

4

To stop playback, press **■**.

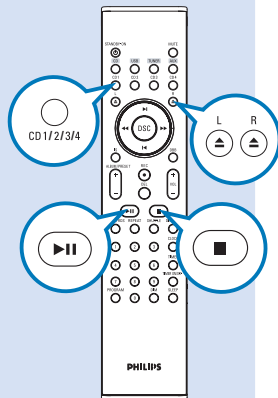

Programming and tuning to radio stations

1


Press **SOURCE** on the front panel of the system repeatedly or **TUNER** on the remote to select the tuner source.

2

Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.

3

Press **TITLE +/-** **◀ / ▶** (**ALBUM/PRESET +/-** on the remote) until the desired preset station is displayed.

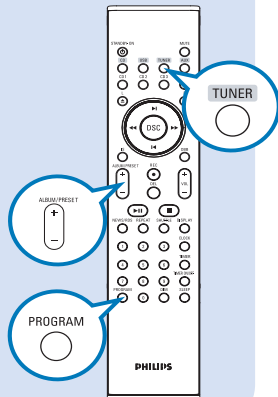

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

