

BT110 User manual



Register your product and get support at

www.philips.com/support

Contents

1	Important	2
2	Your portable speaker Introduction What's in the box Overview of the speaker	3 3 3 4
3	Get started Attach the string Charge the built-in battery Turn on/off	5 5 5 5
4	Play from Bluetooth devices Connect a device Disconnect a device Reconnect a device Connect another device	6 6 7 7
5	Play from external devices	8
6	Product information Audio Speaker Bluetooth General information	9 9 9 9
7	Troubleshooting General About Bluetooth device	10 10 10
8	Notice Compliance Care of the environment Trademark notice	11 11 11 12

1 Important

A

Warning

- · Never remove the casing of this product.
- Never place this product on other electrical equipment.
- Keep this product away from direct sunlight, naked flames or heat.
- Read these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachments/accessories specified by the manufacturer.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not place any sources of danger on the product (e.g. lighted candles).
- The operation temperature of the product is from -10 °C to 40 °C.
- The product supports USB V2.0 or V1.1 only.



Note

 The type plate is located on the bottom of the product.

2 Your portable speaker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

Introduction

This speaker has passed splash-proof test (IPX4) and can be used near water.

With this speaker, you can enjoy audio from Bluetooth-enabled devices or other external devices

What's in the box

Check and identify the contents of your package:


- Speaker
- USB cable for charging
- · String for carrying
- Printed materials







Overview of the speaker

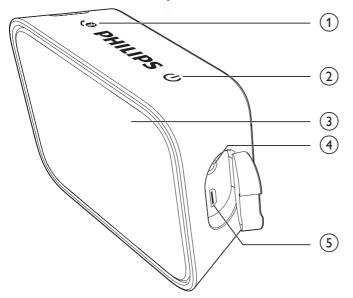

- (1) @
 - Enter Bluetooth pairing mode.
 - After Bluetooth connection, respond to a call.
 - Clear Bluetooth pairing information.
- (2) (b)
 - Turn the speaker on or off.
- **3 LED** indicator
 - Indicate battery or Bluetooth connection status.
- (4) AUDIO IN
 - Connect an external audio device.
- 5 DC IN
 - Recharge the built-in battery.

3 Get started

Always follow the instructions in this chapter in sequence.

Attach the string

For easy carrying, attach the supplied string to this speaker as illustrated.



Charge the built-in battery

The speaker is powered by a built-in rechargeable battery.



Note

- Before use, fully charge the built-in battery.
- The micro USB socket is for charging only.
- It takes you approximately four hours to fully charge the battery.
- Rechargeable battery has a limited number of charge cycles. Battery life and number of charge cycles vary by use and settings.

Connect the USB cable between

- the **DC IN** socket on the speaker, and
- a USB socket on a computer.



The LED indicator indicates the battery status.

Battery Status	LED Indicator
Under	Red
charging	
Fully charged/	Off (in power-off
Not charging	mode);
	Blue (in Bluetooth
	mode)
Low battery	Flashing red

Turn on/off

Press and hold of for three seconds to turn the speaker on or off.

- → When the speaker is turned on, the LED indicator begins to flash.
- → When the speaker is turned off, the LED indicator lights off.



Note

 The speaker switches to standby mode automatically when being idle for 15 minutes.

4 Play from Bluetooth devices


With this speaker, you can listen to audio from Bluetooth-enabled devices.

Connect a device




Note

- The speaker can memorize a maximum of four paired devices. The fifth paired device will replace the first one.
- Any obstacle between this speaker and a Bluetooth device can reduce the operational range.
- Keep away from any other electronic device that may cause interference.
- The operational range between this speaker and a Bluetooth device is approximately 20 meters.
- Make sure that the speaker is in Bluetooth pairing mode
 - For first-time use, the speaker enters pairing mode automatically.
 - If the speaker has been paired with other device before, press and hold on the speaker for two seconds to enter pairing mode.
 - → The LED indicator flashes blue quickly.

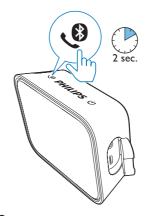

- 2 On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device).
- 3 Select [Philips BT110] displayed on your device for pairing and connection. If necessary, input "0000" as the pairing password.

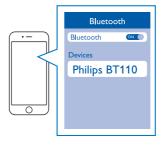

→ After successful pairing and connection, the speaker beeps twice, and the LED indicator turns solid blue.

LED Indicator (blue)	Bluetooth Connection Status
Quick flashing (2Hz)	Pairing
Slow flashing (1Hz)	Connecting
Solid blue	Connected

Play from a Bluetooth-enabled device



Note

 Music play pauses when there is an incoming call, and resumes when your phone call ends.

After successful Bluetooth connection, play music on the connected Bluetooth device

→ Music streams from your Bluetooth device to the speaker.



Tin

• You can use your Bluetooth device to control play.

Control your phone call

After Bluetooth connection, you can control an incoming call with this speaker.

Button	Function
.0	Press to answer an incoming call.
	Press and hold for two
	seconds to reject an incoming call.
	During a call, press to end the current call.
	During a call, press and hold for two seconds to transfer
	the call between your mobile
	device and the speaker.

Disconnect a device

- Press and hold of for two seconds;
- Turn off the speaker;
- Disable Bluetooth on your device; or
- Move the device beyond the communication range.

Reconnect a device

- When you turn on the speaker, it will reconnect the last connected device automatically;
- If not, select [Philips BT110] on your Bluetooth menu to start reconnection.

Connect another device

- 1 Press and hold for two seconds to disconnect the currently connected device:
 - → The speaker enters Bluetooth pairing mode.
- 2 Connect another Bluetooth device.


5 Play from external devices

With this speaker, you can also listen to an external audio device such as an MP3 player.



Note

 Make sure that music playback through Bluetooth is stopped.

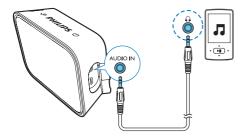

- 1 Connect an audio input cable (not supplied) with a 3.5 mm connector on both ends to
 - the AUDIO IN socket on this speaker, and
 - the headphone socket on the external device.
- Play audio on the external device (refer to its user manual).
 - → The speaker switches to the AUDIO IN mode.



Гiр

 When you start music streaming from a connected Bluetooth device, the speaker switches to the Bluetooth source automatically.

6 Product information

=

Note

• Product information is subject to change without prior notice.

General information

DC Power (Supply	5 V, 1 A
Input)	
Built-in Battery	3.7 V, 800 mAh
Dimensions - Main	98 x 77 x 35
Unit $(W \times H \times D)$	mm
Weight - Main Unit	0.15 kg

Audio

Rated Output Power	4W RMS at 1% THD
Frequency Response	80 -16000 Hz
Signal to Noise Ratio	>72 dBA
Audio-in Input	600mV RMS 20kohm

Speaker

4 ohm
40mm full range
drivers
80±3dB/m/W

Bluetooth

Bluetooth Version	V4.0
Bluetooth Profile	A2DP:1.2; HFP: 1.5; AVRCP:1.4
	AVRCP.1.4
Frequency band/	2.400GHz -
Output power	2.483GHz ISM
	Band / ≤ 4dBm
	(Class 2)
Bluetooth	20 m
Distance Range	

7 Troubleshooting



Warning

· Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

General

No power

· Recharge your speaker.

No sound

- Adjust volume on the connected device
- In AUDIO IN mode, make sure that music playback through Bluetooth is stopped.
- Make sure that your Bluetooth device is within the effective operational range.

No response from the speaker

· Recharge the speaker.

About Bluetooth device

The audio quality is poor after connection with a Bluetooth-enabled device.

 The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.

Fail to find [Philips BT110] on your device for pairing.

 Press and hold of for two seconds to enter pairing mode, and then try again.

Cannot connect with the device.

- The Bluetooth function of the device is not enabled. Refer to the user manual of the device for how to enable the function.
- This product is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

The paired device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this product or remove any obstacle between them.
- For some devices, Bluetooth connection may be deactivated automatically as a power-saving feature. This does not indicate any malfunction of this product.

8 Notice

Any changes or modifications made to this device that are not expressly approved by Gibson Innovations may void the user's authority to operate the equipment.

Compliance

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

This product is designed to be waterproof in compliance with IEC 60529 IPX4

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.




This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste. We strongly advise you to take your product to an official collection point or a Philips service centre to have a professional remove the rechargeable battery. Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health



Caution

 Removal of the built-in battery invalidates the warranty and may destroy the product.

Always bring your product to a professional to remove the built-in battery.

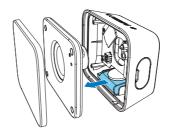

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene

foam (buffer) and polyethylene (bags, protective foam sheet.)
Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Trademark notice



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Gibson Innovations Limited is under license. Other trademarks and trade names are those of their respective owners.



2016 © Gibson Innovations Limited. All rights reserved.

This product has been manufactured by, and is sold under the responsibility of Gibson Innovations Ltd., and Gibson Innovations Ltd. is the warrantor in relation to this product.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license.