
## www.philips.com/welcome

SHC5100



EN User manual

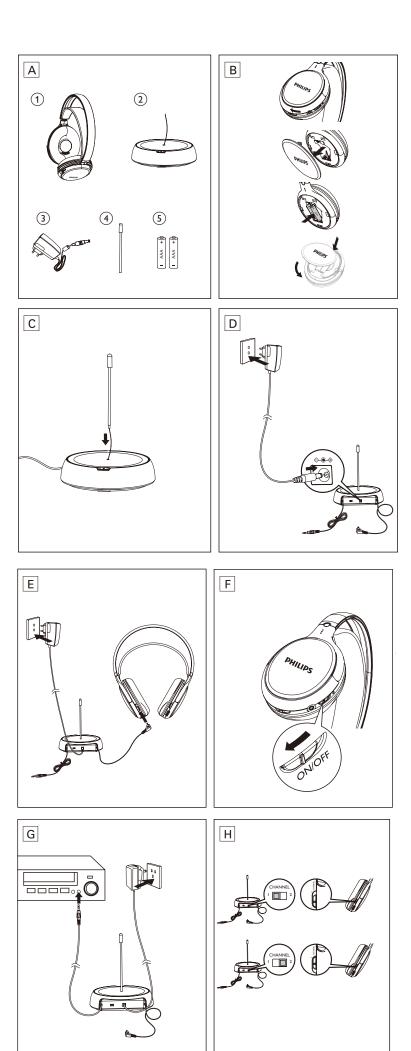



## 1 What's in the box

1) Headphone	2) Transmitter				
3) AC/DC adaptor	4) Antenna tube				
5) 2 × AAA rechargeable shortened sleeve NiMH batteries (SBC HB550L)					

## 2 Get started



- Before using the headphones for the first time, charge the supplied batteries for at least 10 hours.
- Only use Philips rechargeable shortened sleeve NiMH batteries with your headphones. Other types of rechargeable or alkaline batteries cannot be charged with this system.
- AAA alkaline batteries can be used to operate the headphones.
- If the volume of the audio source is insufficient, the transmitter automatically turns off.
- 1 Install/Replace supplied batteries (Fig. B).
- 2 Install the antenna tube into the transmitter (Fig. C).
- **3** Power on the transmitter (Fig. D).
  - → Red LED is on when audio source is connected.
  - → Red LED blinks if no audio source is connected for two minutes.
  - → Red LED is off if no audio source is connected for four minutes.
- 4 To charge the headphones, connect the charging cable with the headphones (Fig. E).
  - → Headphones: red LED is off during charge.
  - → Transmitter: green LED is on during charge and is off when headphones are fully charged.
- 5 Power on the headphones and red LED is on (Fig. F).
- Connect the audio device with the transmitter (Fig. G).
  - → Red LED is on when audio source is connected.



 If there is interference, tune the transmitter and the headphones to the same channel (Fig. H).

## Product version table

Version / Region	Adaptor type number	Input voltage / frequency	Output voltage	Carrier / Reception frequency	
				Channel 1	Channel 2
/10 Europe	SVV-005-080-020-A2	100-240V / 50/60Hz	8V 200mA	863.5MHz	864.5MHz
/05 UK	SBH-005-080-020-A2	100-240V / 50/60Hz	8V 200mA	863.5MHz	864.5MHz

For further product support, please visit www.philips.com/welcome

