

DVD Mini Hi-Fi System

FWD186

User manual

Manual do usuário

Manual del usuario



PHILIPS

México



Es necesario que lea cuidadosamente su instructivo de manejo.

	PRECAUCIÓN - ADVERTENCIA	
	No abrir, riesgo de choque eléctrico	
	ATENCIÓN	
	Verifique que el voltaje de alimentación sea el requerido para su aparato	
Para evitar el riesgo de choque eléctrico, no quite la tapa. En caso de requerir servicio, dirijase al personal calificado.		

Descripción: **Minisistema de Audio**
Modelo : **FWD186/55**
Alimentación: **110-127 / 220-240V~; 50-60 Hz**
Consumo: **50W**
Importador: **Philips Mexicana, S.A. de C.V.**
Domicilio: **Av. La Palma No.6**
Col. San Fernando La Herradura
Huixquilucan
Localidad y Tel: **Edo. de México C.P. 52784**
Tel.52 69 90 00
Exportador: **Philips Electronics HK, Ltd.**
País de Origen: **China**
Nº de Serie: _____

**LEA CUIDADOSAMENTE ESTE INSTRUCTIVO
ANTES DE USAR SU APARATO.**

AVISO IMPORTANTE

Philips Mexicana, S.A. de C.V. no se hace responsable por daños o desperfectos causados por:

- *Maltrato, descuido o mal uso, presencia de insectos o roedores (cucarachas, ratones etc.).*
- *Cuando el aparato no haya sido operado de acuerdo con el instructivo del uso, fuera de los valores nominales y tolerancias de las tensiones (voltaje), frecuencia (ciclaje) de alimentación eléctrica y las características que deben reunir las instalaciones auxiliares.*
- *Por fenómenos naturales tales como: temblores, inundaciones, incendios, descargas eléctricas, rayos etc. o delitos causados por terceros (choques asaltos, riñas, etc.).*

CAUTION

Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

DEMO MODE

To turn ON

Press & HOLD



button

for 5 seconds

To turn OFF

Press & HOLD



button

for 5 seconds

PLUG & PLAY⁻for tuner installation

1



Plug in the unit

2



Follow instructions
in the display

3



Press "PLAY"

Manufactured under license from Dolby Laboratories. "Dolby", "Pro-logic" and the double-D symbol are trademarks of Dolby Laboratories.

MANUFACTURED UNDER LICENSE FROM DIGITAL THEATER SYSTEMS, INC. US PAT. NO 5,451,942, 5,956,674, 5,974,380, 5,978,762, 6,226,616, 6,487,535 AND OTHER U.S. AND WORLD-WIDE PATENTS ISSUED AND PENDING. "DTS" AND "DTS DIGITAL SURROUND" ARE REGISTERED TRADEMARKS OF DIGITAL THEATER SYSTEMS, INC. COPYRIGHT 1996, 2003 DIGITAL THEATER SYSTEMS, INC. ALL RIGHTS RESERVED.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

English 6

Español 46

Português 86

English

Español

Português

General Information/Maintenance

Features	8
Discs for playback	8
Region codes	
Supplied accessories	9
Environmental information	10
Care and safety information	10

Connections

Step 1: Placing speakers and subwoofer	11
Step 2: Connecting speakers and subwoofer...11	
Step 3: Connecting TV set	12-13
Using Video In jack (CVBS)	
Using Line out jack(L/R)	
Using Component Video In jack (Pr Pb Y)	
Using S-Video In jack	
Using an accessory RF modulator	
Step 4: Connecting FM/MW antennas	14
Step 5: Connecting the power cord	14
Step 6: Connecting a VCR or cable/satellite box	15
Step 7: Connecting digital audio equipment .	15

Basic Function

Basic function	16
Switching the system on	16
Switching the system to Standby mode	16
Power-saving automatic standby	16
Demonstration mode	16
Plug and Play	16

Functional Overview

Controls on the system	17
Remote control	18-19

Preparations

Step 1: Inserting batteries into the remote control	20
Step 2: Setting the TV set	20-21
Step 3: Setting language preference	21

Disc Operations

Playing discs	22
Using the disc menu	22
Basic playback controls	23
Skipping to another title (track)/chapter	
Fast search	
Continuing playback from the last stop point	
Selecting various mode functions	23-24
Repeat play mode	
Shuffle play mode	
Repeating a section within a chapter/track	
Programing favorite tracks	24
Special DVD/VCD features	25-27
Changing subtitle language	
Changing the pictures scales	
Changing view angle	
Changing sound track language	
Searching for a particular passage	
Displaying the disc information during playback	
Moving to another title (track) / chapter	
Playing from a selected point	
Using the System Menu	
Playing in slow motion mode	
Viewing from another angle	
Advancing by frames	
Playback control (PBC)	
Checking the contents of DVD	

MP3/ WMA/ DivX/ Picture Disc

Operations

Playing MP3/ WMA/ Picture disc (Kodak, JPEG)	28
MP3/ WMA/JPEG Picture disc	28
Kodak Picture disc	28
Playing DivX disc	29

DVD Menu Operations

Using the menu bar	30
Using the setup menu(user preference settings)	31-34
Setting the TV shape	
Improving the image for progressive scan video output setting	
Setting the screen saver	
Night mode - turning on/off	
Test Tone	
Changing the password	
Restricting playback by setting parental level	

Tuner Operations

Tuning to radio stations	35
Presetting radio stations	35-36
Automatic preset programming	
Manual preset programming	
Selecting a preset radio station	36
Deleting a preset radio station	
Changing tuning grid	36

Tape Operation/Recording

Tape playback	37
General information on recording	37
Preparation for recording	38
Disc synchro recording	38

Timer Operations

Setting the sleep timer	38
-------------------------------	----

Sound and Volume Controls

Sound control	39
Selecting sound effect	
Selecting DBB effect	
Volume control	39
Changing the volume level	
Switching off the volume temporarily	
Listening through headphones	

Other Functions

Switching on/off	40
Switching the system on	
Switching the system to standby mode	
Power saving automatic standby	
Dimming the display	40
Vocal	40
Key control	40
Echo	40
Karaoke	41
Listening to external sources	41

Specifications

Troubleshooting

Glossary

General Information/Maintenance

Features

Your DVD Mini Hi-Fi System with 5.1-channel full analog amplifier creates the same dynamic sound qualities that you find in full-fledged cinemas and incorporates some of the best features in home theater technology.

Other features include:

Built-in DTS and Dolby Digital decoder, supporting virtual surround and stereo.

Built-In Dolby Digital decoder, supporting virtual surround and stereo.

Additional Component Connections

Lets you connect other audio and audio/visual components to the system so you can use the system's speakers.

Night mode

Lets you compress the dynamic range, reducing the difference in loudness between different sounds in Dolby Digital mode.

Parental control (rating level)

Lets you set a rating level so that your children cannot watch a DVD that has a rating higher than you set.

Sleep timer


Enables the system to switch to standby mode automatically at a preset time.

Discs for playback

Your DVD Mini Hi-Fi System will play:

- Digital Video Discs (DVDs)
- Video CDs (VCDs)
- SuperVideo CDs (SVCDs)
- Digital Video Discs + Rewritable (DVD+RW)
- Compact Discs (CDs)
- Picture (Kodak JPEG) files on CDR(W)
- DivX(R) disc on CD-R(W):
- DivX 3.11, 4.x and 5.x
- WMA
- Supported MP3-CD format.
- ISO 9660 / UDF format
- Max. title/album name -12 characters
Max. title number plus album is 255.
- Max. nested directory is 8 levels.
- The max. album number is 32.
- The max. MP3 track number is 999.
- Supported sampling frequencies for MP3 disc: 32 kHz, 44.1 kHz, 48 kHz.
- Supported Bit-rates of MP3 disc are: 32, 64, 96, 128, 192, 256 (kbps).
- Following formats can't be supported

- The files like *.VMA, *.AAC, *.DLF, *.M3U, *.PLS, *.WAV
- Non-English Album/Title name
- The discs recorded under Joliet format

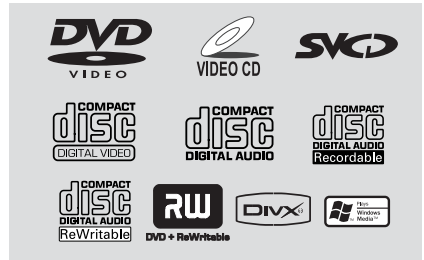

Region codes

DVDs must be labeled for **ALL regions** or for **Region 4** in order to play on this system. You cannot play discs that are labeled for other regions.



Notes:

- For mixed mode discs, only one mode will be selected for playback according to the recording format.
- If you are having trouble playing a certain disc, remove the disc and try a different one. Improperly formatted discs will not play on this system.

Supplied accessories

- Composite video cable (yellow)
- Component video cables (red/blue/green)
- Audio cables (white, red)
- FM wire antenna
- MW loop antenna
- Remote Control with two AA batteries
- AC power cable



- This instruction booklet and a Quick Use Guide

Environmental information

Any unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialised company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Care and safety information

Avoid high temperatures, moisture, water and dust


- Do not expose the system, batteries or discs to humidity, rain, sand or excessive heat (caused by heating equipment or direct sunlight). Always keep disc trays closed to avoid dust buildup on the lens.
- No objects filled with liquids, such as vases, shall be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.

Avoid condensation problem

- The lens may cloud over when the player is suddenly moved from cold to warm surroundings, making it impossible to play a disc. Leave the player in the warm environment until the moisture evaporates.

Do not block the vents

- Do not operate the system in an enclosed cabinet and allow about 10 cm (4 inches) of free space all around the player for adequate ventilation.

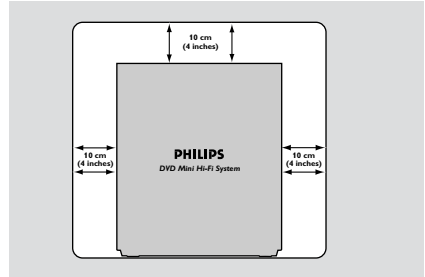

- The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

Cleaning the cabinet

- Use soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning discs

- To clean a CD, wipe it in a straight line from the center towards the edge using soft and lint-free cloth. A cleaning agent may damage the disc.
- Write only on the printed side of a CDR(W) and only with a soft felt-tipped pen.
- Handle the disc by its edge. Do not touch the surface.

Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.



Finding a suitable location

- Place the player on a flat, hard, stable surface.


General Information/Maintenance

Cleaning the head and the tape paths

- To ensure good recording and playback quality, clean the head (A), the capstan(s) (B), and pressure roller(s) (C) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You also can clean the head by playing a cleaning tape once.

Demagnetising the head

- Use a demagnetising tape available at your dealer:

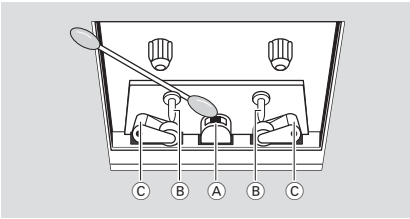

- Don't expose the system to dripping or splashing.
- Install this unit near the AC outlet and where the AC Power can be reached easily.
- When the system is switched to standby mode, it is still consuming some power. To disconnect the system from the power supply completely, remove the AC power plug from the wall sockets.

Hearing Safety

Listen at a moderate volume.

• *Using headphones at a high volume can impair your hearing. This product can produce sounds in decibel ranges that may cause hearing loss for a normal person, even for exposure less than a minute. The higher decibel ranges are offered for those that may have already experienced some hearing loss.*

• *Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes*

of sound. So after prolonged listening, what sounds "normal" can actually be loud and harmful to your hearing. To guard against this, set your volume to a safe level before your hearing adapts and leave it there.

To establish a safe volume level:

- *Set your volume control at a low setting.*
- *Slowly increase the sound until you can hear it comfortably and clearly, without distortion.*


Listen for reasonable periods of time:

- *Prolonged exposure to sound, even at normally "safe" levels, can also cause hearing loss.*
- *Be sure to use your equipment reasonably and take appropriate breaks.*

Be sure to observe the following guidelines when using your headphones.

- *Listen at reasonable volumes for reasonable periods of time.*
- *Be careful not to adjust the volume as your hearing adapts.*
- *Do not turn up the volume so high that you can't hear what's around you.*
- *You should use caution or temporarily discontinue use in potentially hazardous situations.*
- *Do not use headphones while operating a motorized vehicle, cycling, skateboarding, etc.; it may create a traffic hazard and is illegal in many areas.*

Step 1: Placing speakers and subwoofer

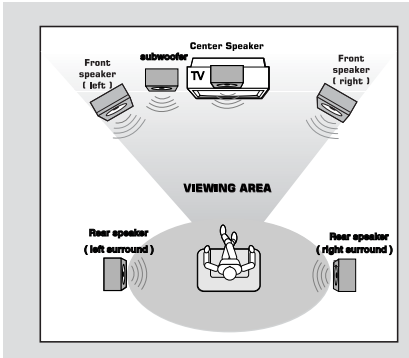

For best possible surround sound, all speakers (except subwoofer) should be placed at the same distance from the listening position . Place the front left and right speakers at equal distances from the TV set and at an angle of approximately 45 degrees from the listening position.

- place the center speaker above the TV set or the system so the center channel's sound is localized.
- Place the surround speaker at normal listening ear level facing each other or mounted on the set .
- Place the subwoofer on the floor near the TV set.

Notes:


- To avoid magnetic interference, do not position the front speakers too close to your TV set.
- Allow adequate ventilation around the DVD Mini Hi-Fi System.

IMPORTANT!

The type plate is located on the rear of the system.

To avoid overheating of the system, a safety circuit has been built in. Therefore, your system may switch to Standby mode automatically under extreme conditions. If this happens, let the system cool down before reusing it.

Step 2: Connecting speakers and subwoofer

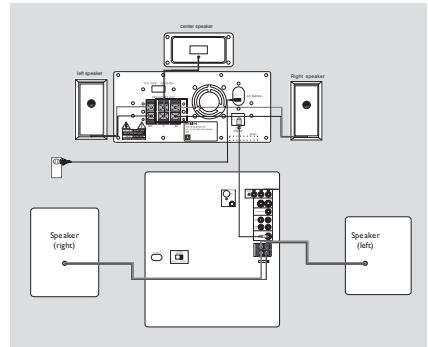

Connect the speaker wires to the SPEAKERS (FRONT) terminals, right speaker to "R" and left speaker to "L", coloured (marked) wire to "+" and black (unmarked) wire to "-". Fully insert the stripped portion of the speaker wire into the terminal as shown.

- Connect the Surround Speakers and Center Speaker system using the supplied speaker cable to the speaker jacks on the SUBWOOFER by matching the colours of the jacks and speaker plugs.
- Connect the subwoofer using the supplied speaker cable to the DIN OUT jack on the DVD Mini Hi-Fi System.
- Connect the AC MAINS .


speakers	⊖	⊕
Front Left(L)	Black	White
Front Right(R)	Black	Red
Center	Black	Green
Surround(Rear) Left(L)	Black	Blue
Surround(Rear) Right(R)	Black	Grey

Notes:

- For optimal sound performance, use the supplied speakers.
- Do not connect more than one speaker to any one pair of +/- speaker terminals.
- Do not connect speakers with an impedance lower than the speakers supplied. Please refer to the SPECIFICATIONS section of this manual.

Connections

Step 3: Connecting TV set

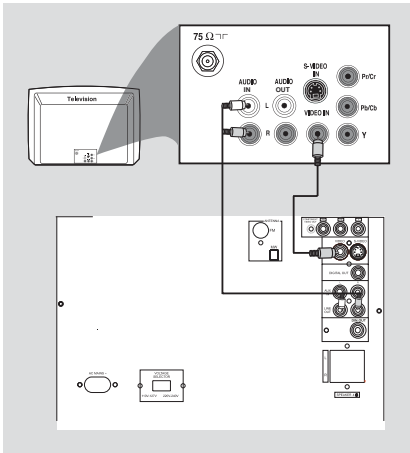

IMPORTANT!


- You only need to make one video connection from the following options, according to the capabilities of your TV system.
- S-Video or Component Video connection provides higher picture quality. These options must be available on your TV set.
- Connect the system directly to the TV set.

Using Video In jack (CVBS)

- Use the composite video cable (yellow) to connect the system's VIDEO jack to the video input jack (or labeled as A/V In, Video In, Composite or Baseband) on the TV set.


Using LINE OUT jack (L/R)

- To listen this system channels through TV, use the audio cables (white/red) to connect LINE OUT (L/R) jacks to the corresponding AUDIO IN jacks on the TV set.

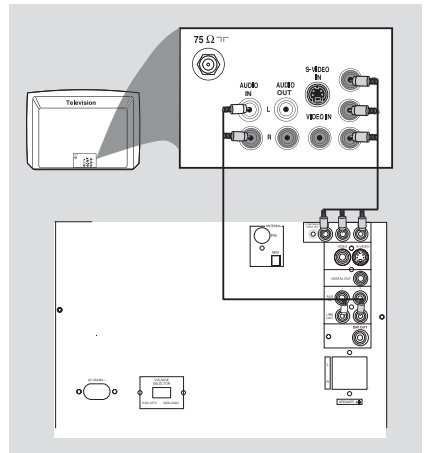


Using component Video In jack (Pr Pb Y)

- Use the component video cables (red/blue/green) to connect the system's Pr Pb Y jacks to the corresponding Component video input jacks (or labeled as Pr, Pb, Y or YUV) on the TV set.
- To listen this system channels through TV, use the audio cables (white/red) to connect LINE OUT (L/R) jacks to the corresponding AUDIO IN jacks on the TV set.

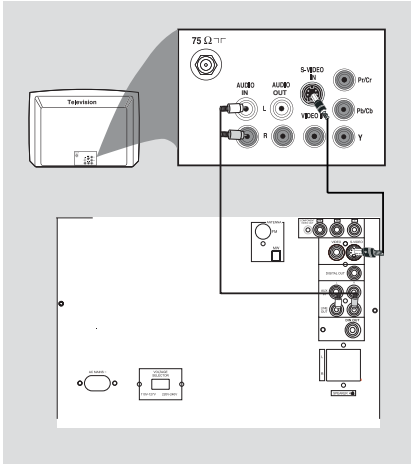

Using S-Video In jack

- Use the S-Video cable (not supplied) to connect the system's **S-VIDEO** jack to the S-Video input jack (or labeled as Y/C or S-VHS) on the TV set.
- To listen this system channels through TV, use the audio cables (white/red) to connect **LINE OUT (L/R)** jacks to the corresponding **AUDIO IN** jacks on the TV set.

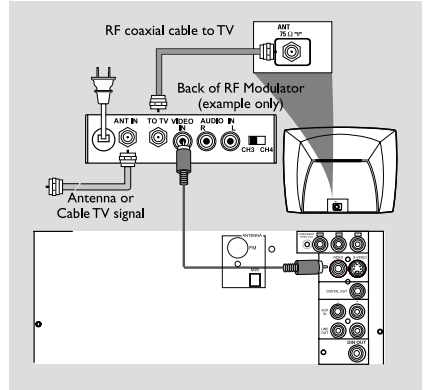


Using an accessory RF modulator

- Use the composite cable (yellow) to connect the system's **VIDEO** jack to the video input jack on the RF modulator.
- Use the RF coaxial cable (not supplied) to connect the RF modulator to your TV's RF jack.

IMPORTANT!


– **If your TV set only has a single Antenna In jack (or labeled as 75 ohm or RF In), you will need a RF modulator in order to view the DVD playback via TV. See your electronics retailer or contact Philips for details on RF modulator availability and operations.**

Step 4: Connecting FM/MW antennas

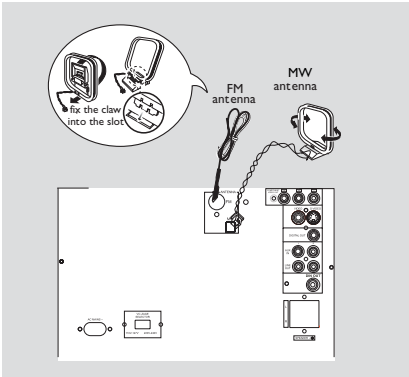

- Connect the supplied MW loop antenna to the **MW** jack. Place the MW loop antenna on a shelf or attach it to a stand or wall.
- Connect the supplied FM antenna to the **FM** jack. Extend the FM antenna and fix its end to the wall.


For better FM stereo reception, connect an outdoor FM antenna to the FM ANTENNA terminal.

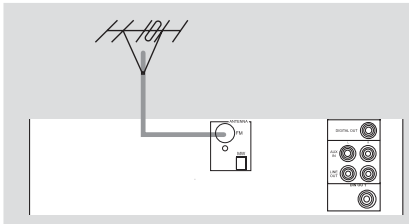

Notes:

- Adjust the position of the antennas for optimal reception.
- Position the antennas as far as possible from your TV set, VCR or other radiation sources to prevent unwanted interference.

Step 5: Connecting the power cord

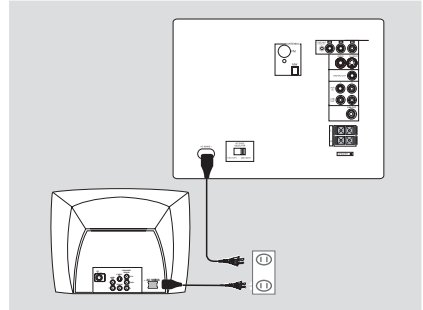


After everything is connected properly, plug in the AC power cord to the power outlet.

Never make or change any connection with the power switched on.


On the DVD Mini Hi-Fi System

"AUTO INSTALL - PRESS PLAY" may appear on the display panel. Press **▶▶** on the front panel to search and store all available radio stations or press **■** to exit.

 If your system is equipped with a Voltage Selector, set the VOLTAGE SELECTOR to the local power line voltage.



Step 6: Connecting a VCR or cable/satellite box

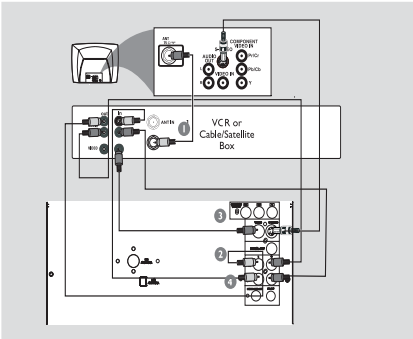

Viewing and listening to playback

- 1 Connect the VCR or Cable/Satellite Box to the TV system as shown.
- 2 Connect the system's **AUX IN** jacks to the AUDIO OUT jacks on the VCR or Cable/Satellite box.

Before starting operation, press **AUX** on the remote control to select "AUX" in order to activate the input source.

Using the VCR for recording DVDs


Some DVDs are copy-protected. You cannot record or dub protected discs using a VCR.

- 3 Connect the system's **VIDEO** jack to the VIDEO IN jack on the VCR.
- 4 Connect the system's **LINE OUT (R/L)** jacks to the AUDIO IN jacks on the VCR. This will allow you to make analog stereo (two channel, right and left) recording.

To view DVD playback while recording

You must connect the system to your TV system using the S-VIDEO (as shown above) or the Component (Pr Pb Y) video connection.

Step 7: Connecting digital audio equipment

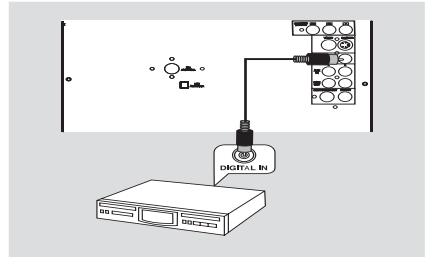

Recording(digital)

Connect the system's DIGITAL OUT jack to the DIGITAL IN jack on a digital recording device (DTS-Digital Theater System compatible, with a Dolby Digital decoder, for example).

Before operation, set the DIGITAL OUTPUT according to the audio connection.


Basic Function

Basic function


IMPORTANT!

Before you operate the system, complete the preparation procedures.

Switching the system on

- Press **STANDBY ON**  or **SOURCE**.
→ The system will switch to the last selected source.
- Press **DISC, TUNER, TAPE** or **AUX** on the remote control.
→ The system will switch to the selected source.

Switching the system to Standby mode

- Press **STANDBY ON**  in the active mode.
→ The backlight of display is dim in standby.
- The volume level, interactive sound setting, last selected mode, source and tuner presets will be retained in the player's memory.

Power-saving automatic standby

- As a power-saving feature, the system will automatically switch to standby mode if you do not press any buttons within 30 minutes after a disc or tape has stopped playing.

Demonstration mode

The system has a demonstration mode that shows various features offered by the system.

Activating demonstration

- In Standby, press and hold **STOP** to activate demo mode.
→ "DEMO ON" is displayed.
→ Demonstration will begin.

Deactivating demonstration

- Press and hold **STOP** on the system, or press DISC key, or press STANDBY ON key, until "DEMO OFF" is displayed.
→ The system will switch to DISC mode.

Note:

- Even if you remove the AC power cord and reconnect it to the wall socket, the demonstration will remain off until you activate it again.

Plug and Play (for tuner installation)

Plug and play allows you to store all available radio stations automatically.

If plug and play has not been installed

- 1 When you turn on the system, "AUTO INSTALL - PRESS PLAY" will be displayed.
- 2 Press **▶||** on the system to start installation.
→ "INSTALL" will be displayed and followed by "TUNER" and then "AUTO SEARCHING".
→ **PROG** will start to flash.
→ The system will search all radio stations on the FM band, and then the MW band.
→ All available radio stations with strong signal strength will be stored automatically.
→ The system will stop searching when all available radio stations are stored or when the memory for 40 preset radio stations is full.
→ The first preset radio station will play when Plug and Play is completed.

Reinstalling plug and play

- 1 In Standby or demonstration mode, press and hold **▶||** on the system until "AUTO INSTALL - PRESS PLAY" is displayed.
- 2 Press **▶||** again to start installation.
→ All previously stored radio stations will be replaced.

To exit without storing the plug and play

- Press **■** on the system.

Notes:

- When the power is turned on, the disc tray may open and close to initialise the system.
- If Plug and Play installation is not completed, it will be reinitiated the next time you power on the system.
- If auto-install is not preset, the system will store the radio station automatically.


Controls on the system

- ① **STANDBY ON**
 - to switch the system on or Standby mode.
- ② **DISPLAY SCREEN**
 - to view the current status of the system.
- ③ **DSC**
 - to select various sound effect:
- ④ **SOURCE DISC**
 - to select disc tray.
- TUNER**
 - to select waveband:FM/MW.
- AUX**
 - to select a connected external source:
AUX(auxiliary)
- ⑤ **▶|| (PLAY/PAUSE)**
 - for DISC to start or interrupt playback.
- ⑥⑮ **◀◀ / ▶▶**
 - for DISC press to search backward/
forward.
 - for TUNER ----- to tune to a lower or higher
radio frequency.
- ⑦ **MICVOL.**
 - to adjust the mixing level for karaoke or
microphone recording.
- ⑧ **OPEN.CLOSE**
 - to open or close the disc tray.
- ⑨ **MIC IN**
 - to connect microphone jack.
- ⑩ **PROGRAM**
 - for DISC..... to program favorite tracks.
 - for TUNER..... to program favorite stations.
- ⑪⑳ **I◀ / ▶I**
 - for DISC.....to skip to the previous/next
chapter/track.
 - for TUNER.....to select a preset radio station.
- ⑫ **STOP ■**
 - for DISC to stop playback or to clear a
programme.
- ⑬ **IR SENSOR**
 - point the remote control towards this sensor:
- ⑭ **MASTER VOLUME**
 - to adjust master volume level.
- ⑮ **DBB**
 - to settings to enhance the bass
response.(Dynamic Bass Boost)
- ⑰ **SUBTITLE**
 - to select the preferred language for subtitle.

- ⑱ **🎧**
 - to connect headphones.
- ⑲ **AUDIO**
 - to select the audio channel.
- ㉑ **TAPE DECK**
- ㉒ **OPEN ▶**
 - to open the tape deck door.
- ㉓ **DISC TRAY**
- ㉔ **CASSETTE KEY**
 - to control cassette play.

Functional Overview

Remote control

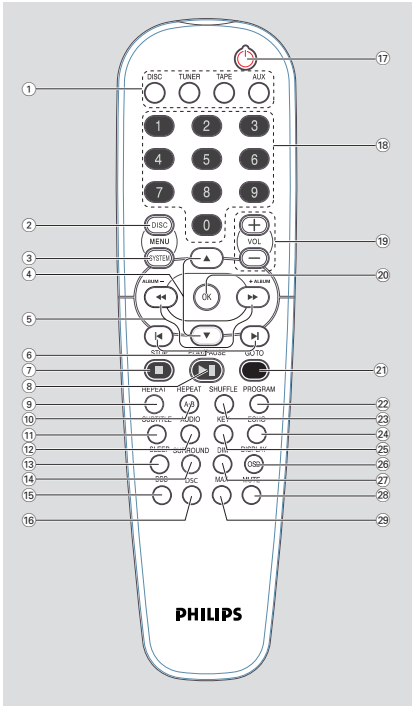

Notes:

- First, select the source you wish to control by pressing one of the source select keys on the remote control (DISC or TUNER, for example).
- Then select the desired function (▶▶, ◀◀ or ▶/◀ for example).

① SOURCE

- to select the relevant active mode: DISC, TUNER, TAPE or AUX.
- TUNER: toggles between FM and MW band.

② DISC MENU (disc mode only)

- to enter or exit the disc contents menu.

③ SYSTEM MENU (disc mode only)

- to enter or exit the system menu bar.

④ ▲ / ▼

- to select movement direction in disc contents menu/system menu bar.

⑤ ◀◀ / ▶▶

- to tuner mode, to tune to lower or higher radio frequency. (◀◀ / ▶▶)
- in Disc mode, press to fast reverse/forward the disc.

⑥ ◀ / ▶

- in Disc mode, press to skip to the previous/next chapter/track.
- in Tuner mode, to select a preset radio station number

⑦ STOP ■

- to stop playing the disc.

⑧ PLAY/PAUSE ▶||

- to start or interrupt disc playback.
- to resume playback from last stop point.

⑨ REPEAT

- to select variations of continuous playback.

⑩ REPEAT A-B

- to select variations of continuous playback.
- to repeat a specific section on a disc.

⑪ SUBTITLE

- to select desired subtitle.

⑫ AUDIO

- to select the audio channel.

⑬ SLEEP

- to set the sleep timer function.

⑭ SURROUND

- to select various sound effect.

⑮ DBB

- to enhance the bass response.

⑯ DSC

- to select various sound effect.

⑰ ⏻

- to switch to standby mode.

⑱ Numeric Keypad (0-9)

- to enter a track/title number of the disc.
- to enter a number of preset radio stations.

⑳ VOL +/-

- adjust the volume level.
- adjust key control/ ECHO level in karaoke mode.

㉑ OK

- to exit or confirm the selection.



㉒ GOTO

- to go direct to desired title, chapter or time.

㉓ PROGRAM

- in disc mode, to program favorite tracks.
- in tuner mode, to program favorite stations.

- ②③ **SHUFFLE**
 - to playback in random mode.
- ②④ **ECHO**
 - to adjust the echo level in karaoke mode.
- ②⑤ **KEY**
 - to change the tone level to suit your vocal range.
- ②⑥ **DISPLAY (OSD)**
 - to view the time, title or chapter information.
- ②⑦ **DIM**
 - to select different brightness for VFD.
- ②⑧ **MUTE**
 - to interrupt or resume sound reproduction.
- ②⑨ **MAX**
 - to view and set clock/timer.

- 1 In disc mode, stop playback and press **SYSTEM MENU**.
- 2 Select  icon and press **▼**.
- 3 Press **◀◀ / ▶▶ / ▲ / ▼** keys on the remote control to toggle through the functions and select your preferred option.
 - Move to  and press **▶▶**.
 - Move to "TV System" and press **▶▶**.

AUTO

– Select this if the connected TV set is compatible with both NTSC and PAL (multi system). The output format will be consistent with the video signal of the disc.

NTSC

– Select this if the connected TV set is NTSC system. It will change the video signal of a PAL video disc and output to NTSC system.

PAL

– Select this if the connected TV set is PAL system. It will change the video signal of an NTSC disc and output to PAL format.


- 4 Select an item and press **OK**.



To remove the menu

Press **SYSTEM MENU**.

Step 3: Setting language preference

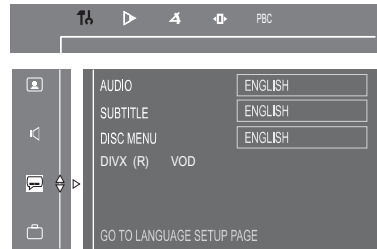You can select your preferred language settings so that this DVD Mini Hi-Fi System will automatically switch to the language for you whenever you load a disc. If the language selected is not available on the disc, the language set by default will be used instead. But the menu language of the DVD Mini Hi-Fi System cannot be changed once selected.



- 1 In disc mode, stop playback and press **SYSTEM MENU**.
- 2 Select  icon and press **▼**.
- 3 Press **◀◀ / ▶▶ / ▲ / ▼** keys on the remote control to select your preferred option.
 - Move to  and press **▶▶**.
 - Move to one of the following and press **▶▶**.
 - Audio (disc's soundtrack)
 - Subtitle (disc's subtitles)
 - Disc Menu (on screen menu)
- 4 Press **▲ / ▼** to select a language and press **OK**.
- 5 Repeat **steps 3~4** for other settings.

To remove the menu


Press **SYSTEM MENU**.


Disc Operations

IMPORTANT!

- This system is designed for regular discs. Therefore, do not use any accessories such as disc stabiliser rings or disc treatment sheets, etc., as offered on the market, because they may jam the disc mechanism.
- Do not move the system during playback. Doing so may damage the system.
- Do not push on the disc tray or put any object other than disc on the disc tray. Doing so may cause the system to malfunction.
- DVD discs and players are designed with regional restrictions. Before playing a disc, make sure the disc matches the regional code of your player.
- According to the format requirement of DVD or VCD, some operations may be different or restricted.

Playing discs

- 1 Press **STANDBY ON**  to switch on the system, and then press **DISC** to select disc mode.
- 2 Power on the TV system and set to the correct Video In channel.
→ You should see the blue Philips DVD background screen on the TV set.
- 3 Press **OPEN/CLOSE** to open the disc tray and load a disc respectively.
→ Make sure the disc label is facing up. For double-sided discs, load the side you want to play facing down.

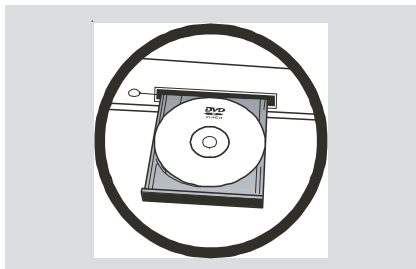

- 4 Press **OPEN•CLOSE** to close the disc tray.
→ "DISC LOADING" will be displayed.

- Some discs can play automatically. For discs with Table Of Contents, a menu may appear on the TV screen. When the menu is displayed, press **◀◀ / ▶▶ / ▲ / ▼** keys to highlight your selection and press **OK** to confirm. To select a play option, press **numeric keys (0-9)**.
→ If the disc is locked by parental control, you must enter your four-digital password .
- 5 Press **▶II** to start playback.

For MP3

- Load an MP3 disc in the disc tray.
→ Press **DISC MENU** to select menu on/off.

Notes:

- Load discs with the label side facing up.
- To ensure good system performance, wait until disc reading is completed before proceeding.

Using the disc menu

For disc with Table Of Contents, a menu may appear on the TV screen once you load the disc.

To select a playback feature or item

- Press **◀◀ / ▶▶ / ▲ / ▼** or **numeric keys (0-9)** on the remote control, then press **▶II** or **OK** to start playback.

To access or remove the menu

- Press **DISC MENU** on the remote control.

Basic playback controls

To start playback

- Press **▶II**.

To interrupt playback

- Press **▶II**.
- To resume playback, press **▶II** again.

To stop playback

- Press **■**.

Skipping to another title (track) / chapter

- Press **◀** or **▶** on the front panel or on the remote control repeatedly during playback to skip backward or forward. Each press will take the disc to the beginning of the previous or next title (track) / chapter.

Note:

– If the player has been set to repeat chapter (track), pressing this button will replay the same chapter (track) from its beginning.

To go directly to any title (track) / chapter

For CD/VCD/MP3/WMA/DIVX

- Use the **numeric keys (0-9)** to enter the number of the desired track.

For DVD

- Please see "Special DVD/VCD features: Moving to another title/chapter".

Fast search

- 1 Press **◀◀** or **▶▶** on the front panel (or on the remote control) to fast reverse or forward the disc.
- 2 To resume normal play, press **▶II**.

Continuing playback from the last stop point

- In Pre-stop mode and before the disc is removed, press **▶II** to resume playback from where you have stopped.

To cancel the resume mode

- Press **■** again, or go into **STANDBY, POWER OFF** or press **OPEN/CLOSE** key.

Notes:

- Resume information will be erased if you have changed the disc, opened the disc tray, changed source or disconnected the system from the power supply.
- This function is not available for MP3 disc.

Selecting various mode functions

Repeat play mode

You can only select the Repeat play mode during playback.

For DVD - repeat chapter/title

- Press **REPEAT** repeatedly to select the following:
REPEAT CHAPTER → REPEAT TITLE → REPEAT OFF

For SVCD/VCD/CD - repeat track/disc

- Press **REPEAT** repeatedly to select the following:
REPEAT TRACK → REPEAT DISC → REPEAT OFF

During program playback

- Press **REPEAT** repeatedly to select the following:
REPEAT TRACK → REPEAT PROGRAM → REPEAT OFF

For MP3/WMA/DIVX repeat - track/album/disc

MENU ON:

- Press **REPEAT** repeatedly to select the following:
REPEAT TRACK → REPEAT ALBUM → REPEAT DISC → REPEAT OFF

MENU OFF:

- Press **REPEAT** repeatedly to select the following:
REPEAT TRACK → REPEAT DISC → REPEAT OFF

Notes:

- When you open the disc tray, the Repeat function will be cancelled automatically.
- For SVCD and VCD 2.0 discs, the Repeat function is not available when the PBC function is set to ON.

Modo de reprodução aleatória

Neste modo, todas as pistas do directório actual serão reproduzidas uma vez, por ordem aleatória.

- 1 Premir repetidamente o botão **SHUFFLE** durante a leitura para seleccionar: SHUFFLE DISC → REPEAT SHUFFLE DISC → SHUFFLE OFF
- 2 Press ►|| to start shuffle play.

In shuffle playback mode:

- Press ►| button to select another track in a shuffle order.
- 3 Press ■ to stop shuffle playback.

To cancel Shuffle mode:

- Press twice **STOP** to cancel Shuffle mode.

Notes:

- In Tuner, Tape or AUX mode, this button does not function.
- When the disc tray is opened, the Shuffle function will be cancelled automatically.
- This function is only available for CD or VCD (PBC OFF).

Repeating a section within a chapter/ track

You can play a specific section in a chapter/track repeatedly.

- 1 Press **REPEAT A-B** at your chosen start point.
- 2 Press **REPEAT A-B** again at your chosen end point.
→ The passage will now repeat continuously.
- 3 To resume normal play, press **REPEAT A-B** again.

Note:

- The REPEAT A-B function can only be set within the same chapter or track.

Programing favorite tracks

You can play the contents of the disc in the order you want. At most 99 tracks can be stored.

- 1 Load the desired discs on the disc trays.
- 2 While playback is stopped, press **PROGRAM** to enter program mode.
→ "P 00 :00" is displayed.
- 3 Use the **numeric keys (0-9)** to input the track number in the order you want.
→ If you attempt to program more than 99 tracks, "FULL" is displayed.
- 4 Press **OK** to store the track.
- Repeat **steps 3-5** to store other tracks.
- 5 Press ►|| to play the program.
- 6 To stop playback, press ■ once.
- 7 To exit the program mode, press ■ again.

Note:

- This function is not available for DVD or MP3/WMA/DIVX discs.

Special DVD/VCD features

Changing subtitle language

This operation only works on DVDs with multiple subtitle languages.

- Press **SUBTITLE** to select the desired language.

Changing the pictures scales

This operation only works on VCDs/DVDs/ JPEGs with images.

For VCD/DVD:

- Press **ZOOM** to change the zooming scale: ZOOM X1.5 → ZOOM X2 → ZOOM X4 → ZOOM OFF.

For JPEG:

ZOOM ON → ZOOM OFF.

- Selected "**ZOOM ON**", then press **◀ / ▶** to change the picture zooming scale: 025 PCT, 050 PCT, 100 PCT, 150 PCT, 200 PCT.
- To pan through the enlarged image, press **◀◀ / ▶▶ / ▲ / ▼** buttons to move the zoomed picture left, right, up or down.
- Selected "**ZOOM OFF**" to exit ZOOM mode.

Changing view angle

If the playing DVD disc is recorded with multiple camera angles, the ANGLE mark on the setup page will be set to ON automatically. This allows you to view the picture from different angles.

- press **ANGLE** buttons to select the desired angle: 1/4, 2/4, 3/4 or 4/4.

Changing sound track language

This operation only works on DVDs with multiple audio languages.

- Press **AUDIO** to select the desired language.

For VCD:

- Press **AUDIO** to select the desired audio channels for sound. This function is only available for discs recorded with different channels: LEFT VOCAL → RIGHT VOCAL → MONO LEFT → MONO RIGHT → STEREO

Note:

– If your desired language is not set in the disc, you cannot select the language via this function.

Searching for a particular passage

- 1 Press **◀◀** or **▶▶** on the system (or on the remote control) to select fast reverse search or fast forward search respectively.
- 2 Press **◀◀** or **▶▶** on the system (or on the remote control) repeatedly to select the required search speed:

For DVD

(reverse): FR X2 → FR X4 → FR X6 → FR X8 → PLAY

(forward): FF X2 → FF X4 → FF X6 → FF X8 → PLAY

For SVCD, VCD or CD


(reverse): FR X1 → FR X2 → FR X3 → FR X4 → PLAY

(forward): FF X1 → FF X2 → FF X3 → FF X4 → PLAY

- 3 To resume normal play, press **▶▶**.

Displaying the disc information during playback

- In disc mode, press **DISPLAY** repeatedly to select the following display information:

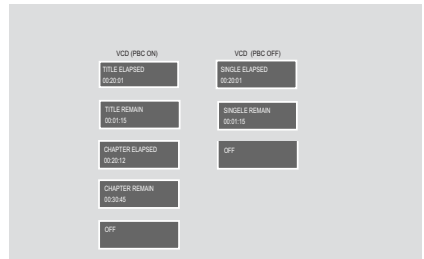

Moving to another title/chapter

Some discs may contain more than one title or chapter. If the disc has a title or chapter menu recorded on it, you can start playback from the selected item.

- 1 Press **GOTO** on the remote control to display the message of title and chapter; use **◀◀** or **▶▶** to highlight an item.
- 2 Use **numeric keys (0-9)** to select a desired title/chapter number.
- 3 Press **OK** to start playback.

Note:

– Selecting a title or chapter might not be possible on certain discs.

Disc Operations

Playing from a selected point

This function allows you to start playback at any chosen time on the disc.

For DVD

- 1 Press **GOTO** twice to activate time menu.
- 2 Enter hours, minutes and seconds from left to right in the time edit box using the **numeric keys (0-9)**.
→ Each time an item has been entered, the next item will be highlighted.
- 3 Press **OK** to start playback.

For SVCD, VCD or CD

- 4 Press **GOTO** to activate time menu, "GOTO -- : --" will be displayed on the TV screen.
- 5 Enter minutes and seconds from left to right in the time edit box using the **numeric keys (0-9)**.
→ Each time an item has been entered, the next item will be highlighted.
- 6 Press **OK** to start playback.

Note:

- In repeat disc or repeat all mode, you can search a desired time point.
- This function is not available for MP3/WMA disc.

Using the System Menu


Some operations can be carried out directly via the menu bar on the TV screen without interrupting disc playback.

- 1 Press **SYSTEM MENU**.
→ The menu bar will be displayed across the top of the TV screen.
- 2 Press **◀◀** or **▶▶** to select:
SETUP MENU → SLOW → ANGLE → STEP → PBC.
- 3 Press **▼** to select the highlighted icon and press **◀◀/▶▶/▲ / ▼** to select your preferred option.
- 4 Press **OK** to confirm a highlighted selection.
- 5 To exit, press **SYSTEM MENU**.

 
IMPORTANT!

Some operations may be different or restricted according to the disc format. Refer to the jacket or case of the disc you are playing.


Note:

- When you press a button and  appears on the TV screen, this means the function is not available on the current disc or at the current time.

Playing in slow motion mode



For DVD

- 1 Select  from the menu bar and press **▼** repeatedly to select the required slow motion speed:
SF X 2 → SF X 4 → SF X 8 → SR X 2 → SR X 4 → SR X 8 → PLAY
SF = slow forward
SR = slow reverse

For SVCD or VCD

 
- 1 Press **▼** to select the required slow motion speed:
(forward): SF X 1 → SF X 2 → SF X 3 → PLAY
- 2 Press **▶▶** to cancel the slow function.

Note:

- This function is not available for CD or MP3 disc.


Viewing from another angle

If the playing DVD disc is recorded with multiple camera angles, the ANGLE mark on the setup page will be set to ON automatically. This allows you to view the picture from different angles. Angle selection is determined by the disc format.



- 1 Select **ANGLE** from the menu bar and press **▲** / **▼** buttons to select the desired angle.
→ Playback changes to the selected angle.

 Advancing by frames



- 1 Select **STEP** from the menu bar and press **▼** to play the disc step by step (one frame each step).
- 2 To resume normal play, press **▶II**.

Note:

– This function is not available for DVD/CD or MP3 disc.

Playback control (PBC)

PBC playback allows you to play Video CD interactively, following the menu on the display.



- 1 Select **PBC** from the menu bar and press **▼** to toggle between PBC ON and PBC OFF.

Playing a disc with PBC function

- 1 If PBC OFF, the system will start playback automatically.
- 2 If PBC ON, the PBC menu (if available) will appear on the TV screen for selection. Use the **numeric keys (0-9)** to enter your choice.

Note:

– This function is not available for CD or MP3 disc.

Checking the contents of DVD

- 1 Press **DISC MENU** on the remote control.
→ If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu will be displayed.
- 2 Press **◀◀** / **▶▶** / **▲** / **▼** to select the desired title or chapter; and then press **▶II** or **OK**.
→ Playback start from the selected title or chapter.
- 3 Press **DISC MENU** on the remote control to go to disc menu of the disc.

Note:

– If no title menu or root menu is recorded in the DVD disc, pressing this button will restart playback from the first track.

MP3/WMA/ DivX/ Picture Disc Operations

Playing MP3/WMA/ Picture disc (Kodak, JPEG)


IMPORTANT!

– You have to turn on your TV set and set to the correct Video In channel.

MP3/WMA/JPEG Picture disc

- 1 Load an MP3/Picture (JPEG) disc.
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- 2 Playback will start automatically.
→ The album/picture menu will appear on the TV screen. If not, press **DISC MENU** on the remote control.

(MP3 disc menu)

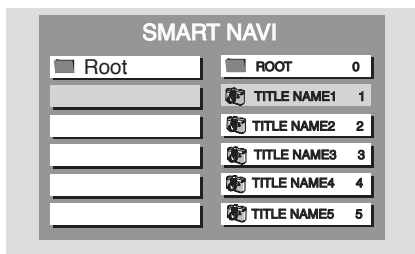

- 3 In stop mode, press ◀▶ / ▶▶ on remote control to select a desired album, then press **OK** or ▶▶ to confirm (for MP3 disc only).
- 4 In stop mode, Press ▲ / ▼ to select a desired title, then press **OK** or ▶▶ to start playback.
- You can also use the **numeric keys (0-9)** to enter your choice.
- 5 To stop playback, press ■.
- 6 Press ◀▶ or ▶▶ on the system to select previous/next album.

If the MP3 menu is switched off

- You can only play the current title by pressing ▶▶. While in playback mode, press ◀ or ▶ to select the previous/next title.
→ The title number will appear.

Note:


– No album search function in menu off mode.

- 7 During JPEG or Kodak Picture disc playback, press **KEY** repeatedly to select different scan effect. There are 12 types of scan effect for selection. The selected scan effect will be displayed on the TV screen.

Kodak Picture disc

- 1 Load a Kodak Picture disc.
→ The disc reading time may exceed 30 seconds due to complexity of the directory/file configuration.
- 2 Playback will start automatically.
- 3 Press ■.
→ 9 thumbnail pictures will appear on the TV screen.

(example for picture disc menu)

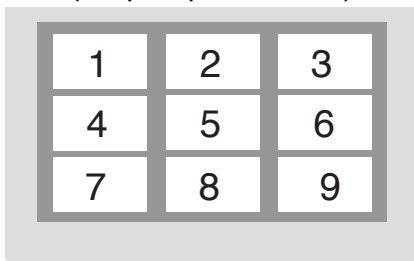

- 4 Press ◀ or ▶ to view the previous/next page (if available).
- 5 Press ◀◀ / ▶▶ / ▲ / ▼ to move within the menu and press **OK** to select the desired picture to play.
- 6 Press **KEY** to start the slide-show playback.

During playback, you can:

- Press ◀ or ▶ to select another title/picture in the current folder.
- Press ◀◀ / ▶▶ / ▲ / ▼ on the remote control to rotate or flip the picture files.
- Select "ZOOM ON" and press ◀/▶ on the system to zoom the picture in and out.
- Press ▶▶ to pause/resume playback.

Notes:


- Due to the recording nature of Digital Audio MP3 (DAM), only digital audio music will play.
- It is normal to experience an occasional "skip" while you are listening to your MP3 discs.
- For multi-session discs with different formats, only the first session can be read and played.
- **DISC MENU** does not function during Kodak Picture disc playback.

MP3/WMA/ DivX/ Picture Disc Operations

Playing DivX disc

There are two types of subtitle available on DivX disc: embedded subtitle and external subtitle.

- 1 Load a DivX disc.
→ Press **DISC MENU** to set the menu on.
→ In stop mode, the SMART NAVI appears on the TV screen.

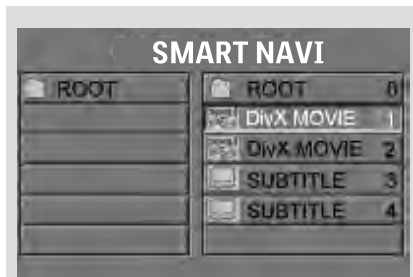



When playing DivX disc with embedded subtitle

- 2 Press **▲ / ▼** to select DivX Movie, and then press **OK** to start playback.
- 3 When playing disc, press **SUBTITLE** button on the remote control to select: SUBTILTE 1/8 → SUBTILTE 2/8 → SUBTILTE 3/8 → SUBTILTE 4/8 → SUBTILTE 5/8 → SUBTILTE 6/8 → SUBTILTE 7/8 → SUBTILTE 8/8 → SUBTILTE OFF.

Note:

- The maximum number of subtitle languages stipulated by the manufacturer is 8/8.

When playing DivX disc with external subtitle

- 4 Press **▲ / ▼** on the remote control to select an external subtitle option .
- 5 Press **SUBTITLE** to select subtitle file .
- "DivX SUBTITLE SELECTED" appears on the TV screen.
- 6 Press **▲ / ▼** to highlight the movie file, and press **OK** to confirm.
→ The playback will start accordingly.
- 7 During playback, you can zoom the picture by selecting zoom icon from the menu bar and press **▼** to select ZOOMX2 or ZOOM OFF.


Notes:

- During playback, press **SUBTITLE** button on remote control to select available font: SUBTITLE 1/1, ENCODING LATIN 1, ENCODING LATIN 2, ENCODING CYRILLIC, ENCODING CP1254, ENCODING CP1251, ENCODING CP1250, SUBTITLE OFF.
- If an external subtitle has been selected, the DivX embedded subtitle will be deactivated.
- This model supports LATIN 1, LATIN 2, and LATIN CYRILLIC, ENCODING CP1254, ENCODING CP1251, ENCODING CP1250 fonts.
- LATIN 1 font supports the following languages: Albanian, Basque, Catalan, Danish, Dutch, English, Faeroese, Finnish, German, Icelandic, Irish, Italian, Norwegian, Portuguese, Rhaeto-Romanic, Scottish, Spanish, Swedish, Afrikaans and Swahili.
- LATIN 2 supports the following languages: Bosnian, Croatian, Czech, Hungarian, Polish, Romanian, Serbian, Serbo-Croatian, Slovak, Slovenian, Upper Sorbian and Lower Sorbian.
- LATIN CYRILLIC font supports the following languages: Russian, Ukrainian and Belarusian.
- Standard fonts (CP1254): Albanian, Danish, Dutch, English, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish.
- Cyrillic fonts (CP1251): Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian.
- Central Europe fonts (CP1250): Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Sorbian.
- Subtitle files with the following filename extension are supported: .sub, .srt and .smi.

DVD Menu Operations

Using the menu bar

You can continue some operations directly via the menu bar on the TV screen without interrupting the disc playback. But when you enter **TM** (SETUP MENU), the playback will pause.

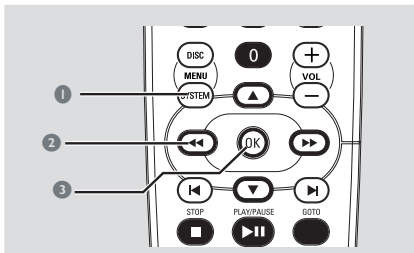

- 1 In disc mode, press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV set screen.



- 2 Press the **◀◀ / ▶▶ / ▲ / ▼** on the remote control to navigate in the menu.
→ Press **◀◀ / ▶▶** to move through the menu bar.
→ Press **▼** to enter the selection.
- 3 Press **OK** to confirm the selection.
→ Playback will resume or begin automatically.

To remove the menu

Press **SYSTEM MENU** or **OK**.


IMPORTANT!

– Some operations may be different or restricted according to the disc format. Refer to the jacket or care of the disc you are playing.


▶	Slow The slow motion speed will display. Press ▼ repeatedly to select a reverse or forward slow motion speed. To cancel the slow function, press ▶▶.
↔	ANGLE Press ▼ to view the same scene from different angles if the DVD is recorded with multi-angles.
◀▶	STEP Press ▼ repeatedly to play forward the disc step by step (one frame every step). To cancel the step function, press ▶▶.
PBC	PBC ON/OFF Press ▼ to select PBC ON or OFF, and then playback will return to the beginning of the disc. (This function is only available for VCD with PBC feature.)

Using the setup menu (user preference settings)

This DVD setup is carried out via your TV set, enabling you to customize the DVD Mini Hi-Fi System to suit your particular requirements.

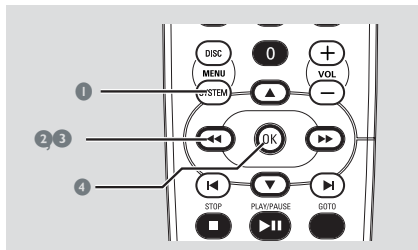

- 1 In disc mode, press **SYSTEM MENU**.
→ The menu bar will appear across the top of the TV screen.
- 2 Select and press **▼** to enter the setup menu. Then press **▲ / ▼** to select one of the setup menu options and press **▶▶** to enter the menu.
→ Playback will pause.

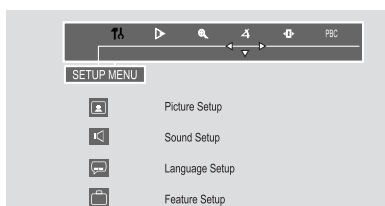

- 3 Press **◀◀ / ▶▶ / ▲ / ▼** on the remote control to navigate in the menu.
- 4 Press **OK** to confirm your selection.
→ Playback will resume or begin automatically.

Removing the menu


Press **SYSTEM MENU** or **OK**.

Note:

– Some features of the Setup Menu are described in “Preparations”.

Setting the TV shape

Make sure the format you need is available on the disc. If not, your setting will be invalid.

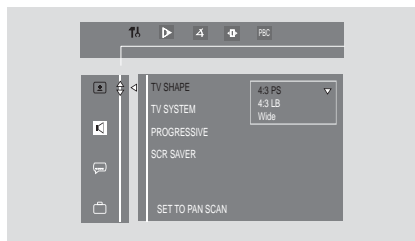

4:3PS (Pan and Scan mode)

Select this if you have a conventional TV set and your DVD is not formatted for wide screen viewing. A wide picture will display on the whole TV screen with a portion automatically cut off.

4:3LB (Letterbox mode)

Select this if you have a conventional TV set and your DVD is formatted for wide screen viewing. Black bars appear on the upper and lower portions of the TV screen.

Wide (Wide-screen TV)

Select this if you have a wide-screen TV set (you must also set your wide screen TV to “full size”).

WIDE (Wide screen)



4:3 LB (Letter Box)




4:3 PS (Pan Scan)



DVD Menu Operations

Improving the image for progressive scan video output setting

This feature is only applicable when you have connect this system to a Progressive Scan TV system through the Component Video jacks

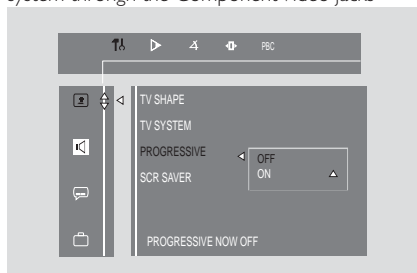

Off

Select this a conventional TV set is connect to your system.

On


To enjoy the full quality potential offered by progressive scan feature, a progressive scan TV set is required.

You can press and hold **OPEN / CIOSE** on the panel and **1** on remote control for more than 5 seconds to exit progressive scan .

Notes:


- A progressive scan TV set is required.
- The progressive scan video quality is only possible through PR PB Y output connection.

Setting the screen saver

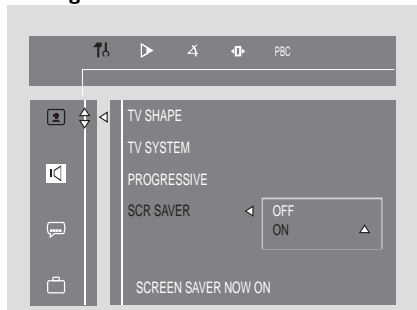

If set to ON, the screen saver will be activated when you leave the system in stop or pause mode for 5 minutes. The default setting is ON.

Night mode - turning on/off

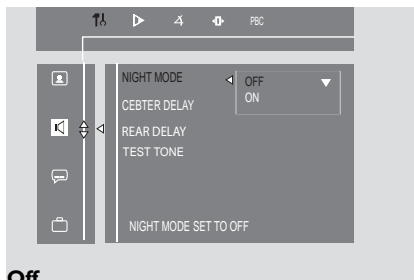


Off

Select this when you want to enjoy the surround sound with its full dynamic range.

On

Select this to level out the volume. High volume output will be softened and low volume output will be brought upward to an audible level. This feature is only available for movies with Dolby Digital mode.

Test Tone

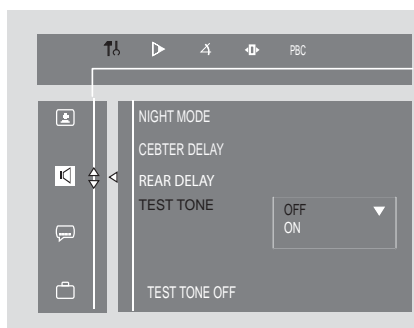


If you have turned on the test tone, the test signal will be automatically generated to help you judge the sound level of each speaker.


- 1 In disc mode, press **SYSTEM MENU**.
→ Use the **◀◀ / ▶▶ / ▲ / ▼** keys on the remote to navigate in the menu.
- 2 Highlight **⏏** icon and press **▼**.
Move to **⏏** and press **▶▶**.
Move to **{TEST TONE}** and press **▶▶**.
- 3 Press **▲▼** to select a setting.

Changing the password


You can change the four-digit code used as Password.

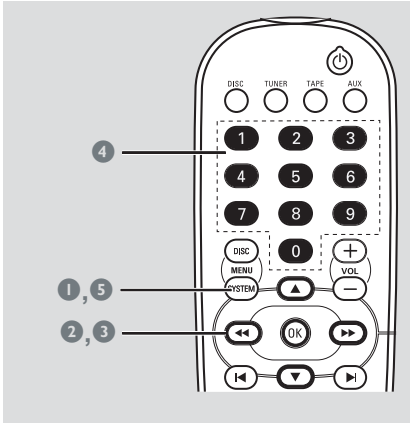

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select icon and press **▼**.
- 3 Press **◀ / ▶ / ▲ / ▼** on the remote control to navigate in the menu.
 - Move to icon and press **▶▶**.
 - Move to "PASSWORD" and press **▶▶**.

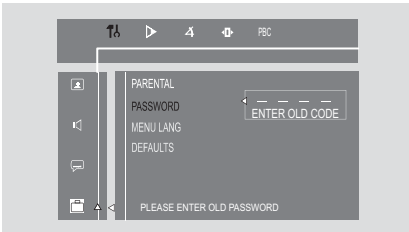

- 4 Use the **numeric keys (0-9)** to enter your four-digit code.
 - The password supplied by default is 1234.
 - If you forget the four-digit code, press **■** four times, the system will change back to the default password.
- 5 Go to "Password" and enter your new code. Then, enter the same code again to confirm.

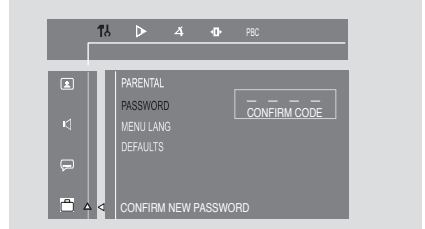


- 5 Press **SYSTEM MENU** again to remove the menu.


DVD Menu Operations

Restricting playback by setting parental level


Some DVDs may have a parental level assigned to the complete disc or to certain scenes on the disc. This feature lets you set a playback limitation level. The rating levels are from 1 to 8 and are country specific. You can prohibit the playing of certain discs that are not suitable for your children or have certain discs played with alternative scenes.

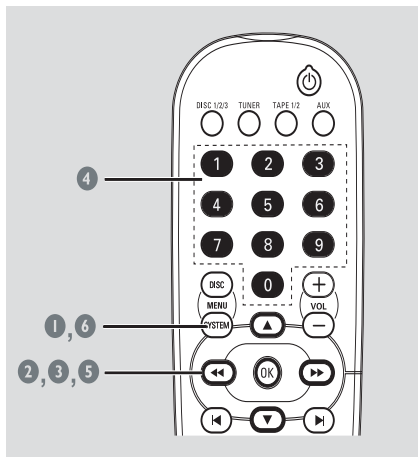

- 1 In disc mode, press **SYSTEM MENU**.
- 2 Select icon and press **▼**.
- 3 Use **◀▶ / ▲ / ▼** on the remote control to navigate in the menu.
→ Move to icon and press **▶▶**.
→ Move to "PARENTAL" and press **▶▶**.

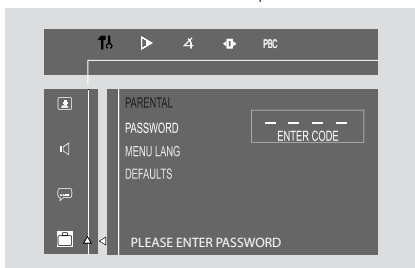

- 4 Use the **numeric keys (0-9)** to enter the four-digit code. You may have to enter the same code twice.
- 5 Press **▲ / ▼** to select a rating level between 1-8 and press **OK**.
→ DVDs rated above the level you select will not play unless you enter your four-digit password or choose a higher level rating. Select 'No Parental' to deactivate Parental level and have all discs play.

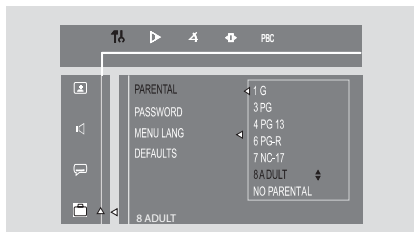

- 6 Press **SYSTEM MENU** again to remove the menu.

Rating explanations

NO PARENTAL – It will play all discs.

8 ADULT – material for adults only; viewed only by adults due to graphic sexual scenes, violence, or language.

7 NC-17 – No children under age 17; not recommended for children under age 17.

6 PG-R – Parental Guidance – Restricted; recommended that parents restrict children under 17 from viewing or allow them to view only when supervised by a parent or adult guardian.

4 PG 13 – Material is unsuitable for children under age 13.

3 PG – Parental Guidance suggested.

1 G – General Audience; recommended as acceptable for viewers of all ages.

– Menu language

To set the screen display language. The default setting is English.

– Default

If RESET is selected, all the items in the setup menu will be reset to default setting, except Parental Setting and Password.

IMPORTANT!

- Make sure **FM and MW antennas are connected.**

Tuning to radio stations

- 1 Press **TUNER** to select "FM XX" or "MW XX".
- 2 Press and hold ◀◀ / ▶▶ on the system or on the remote control until the frequency indication starts to change, then release.
 - The next radio station will be tuned automatically.
 - 🎧 lights up for FM stereo reception.
- 3 To tune a weak station, press ◀◀ / ▶▶ on the system or on the remote control to search until a radio station with sufficient signal strength is found.

Presetting radio stations

You can store up to 40 preset radio stations in the memory, starting from FM and followed by MW bands.

Automatic preset programming

You can start automatic presetting from a selected preset number:

- 1 Press **TUNER** (BAND) to select TUNER mode.
 - The current radio frequency will appear on the display.

To begin automatic preset from a desired preset number

- Press ◀ / ▶ or **numeric keys (0-9)** to select the desired preset number.

- 2 Press and hold **PROGRAM** until "AUTO PROG" appears on the display.
 - **PROG** will start to flash.
 - The system will start to search all radio stations on the FM band, then MW band.
 - All radio stations with strong signal strength will be stored automatically.
 - The system will stop searching when all available radio stations are stored or when the memory of 40 preset radio stations is full.
 - The first preset radio station will then be played when completed.

To stop storing the automatic preset

- Press ■ to stop storing the automatic preset.

Note:

- *If no preset number is selected, automatic preset will begin from "0 1" and all your former presets will be overridden.*

Tuner Operations

Manual preset programming

- 1 Press **TUNER** (BAND) repeatedly to select the desired tuner band: FM or MW.
- 2 Press and hold ◀◀ / ▶▶ on the system or on the remote control to search a radio frequency.
- 3 Press **PROGRAM**.
→ "PROG" and "P 00:00" will display.
- 4 Press ◀ / ▶ or **numeric keys (0-9)** to select the desired preset number.
- 5 After selecting an address number, press **PROGRAM** again to store the radio station.
- Repeat **steps 3-5** to store other preset radio stations.

To stop storing the manual preset

- Press ■ on the system.

Note:

– If you attempt to store more than 40 preset radio stations, "FULL" will be displayed.

Selecting a preset radio station

- In tuner mode, press ◀ / ▶ or use the **numeric keys (0-9)** to select the desired preset number.
→ The preset number, radio frequency, and waveband are displayed.

Deleting a preset radio station

- 1 Press ◀ or ▶ to select the preset radio station to be erased.
- 2 Press ■ on the system, "PRESET DELETED" appears on the display.
→ The radio frequency remains on the display.
→ The preset numbers of all other preset radio stations in the band with higher numbers are also decreased by one.
- Repeat **steps 1-2** to erase other preset radio stations.

Changing tuning grid

In some countries, the frequency step between adjacent channels in the MW band is 9 kHz (10 kHz in some areas). The preset frequency step in the factory is 10 kHz.

- 1 Plug the AC power cord.
- 2 Press **TUNER** to select MW mode.
- 3 Press and hold ■ for more than 3 seconds on the panel.
→ "STEP XX K" appears.

Note:

– All preset stations will be lost and need to be reprogrammed.

Tape Operation/Recording

IMPORTANT!


- Before playing a tape, check and tighten slack tape with a pencil. Slack tape may get jammed or may burst in the mechanism.
- Store tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV set or speaker).

Tape playback

- Only cassette keys can be used in control tape playback.



- 1 Press ▲ to open the tape deck door.
- 2 Insert a recorded tape and close the tape door.
- Load the tape with the open side down and the full spool to the left.

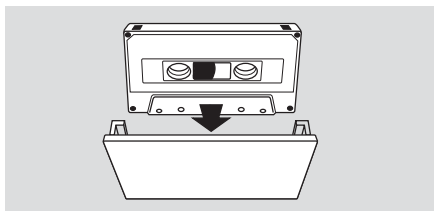

- 3 Press **TAPE** on the remote control to select tape mode.
- 4 Press ► to start playback.

Interrupting playback

- Press ■ to interrupt playback.

Stopping playback

- Press ■▲ to stop playback.


Rewinding or forwarding fast when playback is stopped

- 1 Press ◀◀ or ▶▶ on the front panel.
- 2 Press ■ when you reach the desired passage.

General information on recording

If you don't intend to record via the microphone, unplug it to avoid unwanted recording source.

- For recording, only use tape of IEC type I (normal tape).
- The recording level is set automatically, regardless of the position of the Volume, Vocal, Key control and so forth.
- The type is secured at both ends with leader tape. At the beginning and end of the tape, nothing will be recorded for seven seconds.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.

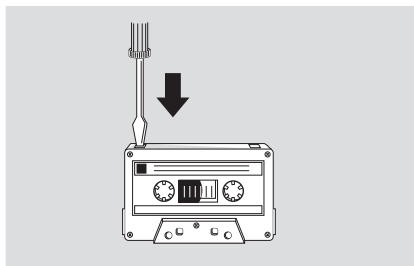

- Press ● in Disc, Tuner or AUX mode, the record key ● can't be press if there is no recordable tape in tape deck.

Tape Operation/Recording

IMPORTANT!

- Recording is permissible if copyright or other rights of third parties are not infringed upon.
- Recording is possible only in tape deck.

Preparation for recording

- 1 Load a recordable tape into tape deck with the full spool to the left.
- 2 Prepare the source to be recorded.
 - DISC** – load the disc (s)
 - TUNER** – tune to the desired radio station.
 - AUX** – connect external equipment.

When recording is in progress

- 1 Press **DISC**, **TUNER** or **AUX** to select the source.
- 2 Start to play the selected source.
- 3 Press ● to start recording.

To stop recording

- Press ■ on the system.

Disc synchro recording

- 1 Press **DISC** to select the disc.
- You can record programmed tracks in the order you want.
- 2 Press ● to start recording.
 - "REC" will flash, but the first 9 seconds of the start passage will not be recorded.

Selecting another track during recording

- 1 Press **II** to interrupt recording.
- 2 Press ◀ or ▶ to select another track.
- 3 Press **II** to resume recording.

To stop recording

- Press ■▲.
- Recording and disc playback will stop simultaneously.

Timer Operations

Setting the sleep timer

The sleep timer enables the system to switch to Standby mode automatically at a preset time.

- Press **SLEEP/DIM** on the remote control repeatedly and stop at the desired preset turn-off time.
 - Following options are available (time in minutes):
 - 15 → 30 → 45 → 60 → 90 → 120 → OFF
 -
 - "zzz ⌚" will show on the display panel unless "OFF" is selected.

To check or change the setting

- Press **SLEEP/DIM** once to show the remaining time before switching off. If you continue pressing the **SLEEP/DIM** button, the next Sleep Timer option will appear on the display.

To cancel the sleep timer

- Press **SLEEP/DIM** repeatedly until "OFF" is displayed or press the **STANDBY ON** button.

Sound control

Selecting sound effect

The digital sound effect allows you to select from various preset modes that control the frequency bands of sound to optimize certain musical styles. It greatly enhances the excitement and enjoyment of your favorite music.

- Press **DSC** repeatedly to select the available sound effect.

Playing a DVD/VCD

- You can select Virtual Ambience Control as follows:
 - CONCERT, ACTION, DRAMA, SCI-FI.

Playing a CD/MP3 or in Tuner or AUX mode

- You can select Digital Sound Control:
 - TECHNO, ROCK, JAZZ, OPTIMAL.

Selecting DBB effect

- Press DBB to settings the Dynamic Bass Boost.
- You can settings to enhance the bass response:
 - DBB ON, DBB OFF.

Volume control


Changing the volume level

- Rotate **VOLUME** clockwise / anti-clockwise (or press **VOL +/-**) to increase or decrease the master volume level.
 - "MIN" is displayed at minimum level.
 - "MAX" is displayed at maximum level.
 - The range is from 1dB to 39 dB, and the step is 1dB.

Switching off the volume temporarily

- Press **MUTE**.
 - "MUTE ON" is displayed.
- Press **MUTE** again or adjust the volume level to
 - cancel the MUTE mode.

Listening through headphones

Connecting headphones to  will switch off the speakers. The system will switch STEREO and the surround sound will be reduced to a stereo signal which is reproducible by standard headphones.

Disconnecting the headphones will switch on the speakers again. If you wish to enjoy surround sound again, switch the system back to surround sound.

Other Functions

Switching on/off

Switching the system ON

In Standby

- Press **STANDBY ON**
→ The system will go back to its previous status.
- Press **DISC, TUNER, TAPE, AUX**
→ The system will switch to the selected source.

Switching the system to STANDBY mode

In any other source mode

- Press **STANDBY ON** (or  on the remote control).

Power saving automatic standby

As a power-saving feature, the system will automatically switch to Standby mode if you don't press any button within 30 minutes in the stop mode.

Dimming the display

- After the preset sleep timer disappears from the display, press **SLEEP/DIM** repeatedly to select different levels of brightness for the display: HIGH, MID or LOW.

Vocal

This function allows you to fade out the original vocal from a karaoke. Press **AUDIO** key to select different audio modes.

For DVD karaoke discs:

AUDIO 1, AUDIO 2, AUDIO 1 VOCAL, AUDIO 2 VOCAL.

For VCD karaoke discs:

LEFT VOCAL, RIGHT VOCAL, MONO LEFT, MONO RIGHT or STEREO.

Key control

This feature allows you to change the key tone when you play a DVD or VCD disc.

- Press **KEY**.
→ "KEY CONTROL ON" will be display on the TV screen for 5 seconds.
→ The Key control indicator will flash when you press VOL +/- to change the key tone level.
→ If you don't adjust the key control level within 5 seconds, the indicator will turn off.
- Press **KEY** again to exit key control mode.
→ "KEY CONTROL OFF" will be displayed on the TV screen for 5 seconds.

Echo


This feature allows you to add echo while singing or talking through a microphone.

- Press **ECHO**.
→ "ECHO CONTROL ON" will be displayed on the TV screen for 5 seconds.
→ Press VOL +/- to change the echo level between 0 and 8.
– Select level 0 to switch off Echo.
- Press **ECHO** again to exit Echo control mode.
→ "ECHO CONTROL OFF" will be displayed on the TV screen for 5 seconds.

Notes:

- Echo will be disabled automatically when the microphone is unplugged.
- "PLEASE INSERT MIC" is displayed on your TV screen if you have not connected the microphone to the system in ECHO CONTROL ON mode.

Karaoke

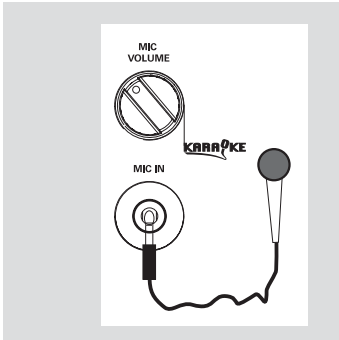

Connect a microphone (not supplied) to the system to sing along with the music source.

- 1 Connect a microphone to the MIC jack.
 → "🎤" will appear on the display.
 → "MICROPHONE PLUG IN" will display on your TV screen.
- 2 Before connecting the microphone, set the microphone **MIC VOLAME** to the minimum level to prevent howling.
- 3 Press **DISC, TUNER, TAPE** or **AUX** to select the source to be mixed and start playback.
- 4 Adjust the volume of the source through VOLUME control.
- 5 Adjust the microphone volume through microphone **MIC VOLAME** control .

Notes:

- Keep the microphone away from the speakers to prevent howling.
- "MICROPHONE PLUG OUT" will display on your TV screen when you plug out the microphone

Listening to external sources

- 1 Connect the audio out terminals of the external equipment (TV,VCR, Laser Disc player; DVD player or CD Recorder) to the AUX IN terminals of your system.
- 2 Press **AUX** to select AUX mode directly.

Notes:

- You are advised not to listen to and record from the same source simultaneously.
- All navigation sound control features are available.

Specifications

AMPLIFIER SECTION

Output power
Stereo mode 2x30+3x30+ 60 RMS
Frequency Response . 150 Hz - 18 kHz / \pm 3 dB
Signal-to-Noise Ratio . > 60dB (VN-WEIGHED)
Input Sensitivity
AUX In 500 mV
Output Sensitivity
Headphone 1000 mV \pm 2dB
Line Out 1000 mV

TUNER SECTION

Tuning Range
..... FM 87.5 – 108 MHz (50 kHz steps)
..... MW 531 – 1602 kHz (9 kHz steps)
..... MW 530 – 1710 kHz (10 kHz steps)
Signal-to-Noise Ratio FM \geq 50 dB
..... MW \geq 30 dB

TAPE SECTION

Frequency Response
Normal tape 80 – 12500 Hz (8 dB)
Signal-to-Noise Ratio
Normal tape \geq 45 dBA
JIS and WTD \leq 0.3% DIN

DVD SECTION

Laser Type Semiconductor
Disc Diameter 12cm / 8cm
Video Decoding MPEG-2 / MPEG-1
Video DAC 10 Bits
Signal System PAL / NTSC
Video Format 4:3 / 16:9
Video S/N 56 dB (minimum)
Composite Video Output 1.0Vp-p, 75 Ω
S-Video Output Y - 1.0Vp-p, 75 Ω
..... C - 0.286Vp-p, 75 Ω
Audio DAC 24 Bits / 96 kHz
Frequency Response ... 4 Hz - 20 kHz (44.1kHz)
..... 4 Hz - 22 kHz (48kHz)
..... 4 Hz - 44 kHz (96kHz)

MAIN UNIT

Power Supply Rating 110 - 127 / 220 - 240 V
..... 50/60HZ Switchable
Power Consumption
Active 50 W
Standby \leq 10 W
Dimensions (w x d x h) .265x 335 x 310 (mm)
Weight 4.05 kg
Packaging Dimensions (w x d x h)
..... 567x460x413(mm)
Gross weight 20.9kg

SPEAKERS

Front speakers
System 3-way, Bass reflex
Impedance 4 Ω
Speaker drivers 9.5cm woofer;
..... 5cm tweeter
Frequency response 50 Hz – 20 kHz
Dimensions (w x d x h)
..... 190 x 207 x 310 (mm)
Weight 2.34 kg/each

Center or Surround speakers

System.....2 multi directional driver
Impedance.....8 Ω (center) /8 Ω (surround)
Speaker drivers.....1x4"woofer
.....1x2.5"tweeter
Frequency response.....150HZ--
18KHZ
Dimensions(w x h x d).....
.....140 x 310 x 310mm (surround speaker)
..... 245.5 x 159.7 x 130mm (center
speaker)
Weight..... 1.29 kg (center
speaker)..... 1.03 kg/ each (surround
speaker)

SUBWOOFER

Impedance..... 4 Ω
Speaker driver.....60W
Frequency response..... 30---200 HZ
Dimensions(w x h x d).....
.....200 x 310 x 380 (mm)
Weight6.51kg

Specifications subject to change without prior notice

ADVERTÊNCIA!

Em nenhuma circunstância deverá tentar reparar a aparelhagem por si próprio porque, se o fizer, a garantia perderá a validade. Não abra o sistema porque poderá sofrer choques eléctricos.

Se ocorrer uma avaria, verifique primeiramente os pontos enumerados a seguir antes de levar a aparelhagem para reparação. Se não conseguir resolver um problema recorrendo a estes conselhos, consulte o representante ou centro de assistência.

Problema	Solução
Sem energia.	<ul style="list-style-type: none"> ✓ Verifique se o cabo de alimentação está devidamente ligado.
A mensagem “UNREADABLE DISC” é apresentada.	<ul style="list-style-type: none"> ✓ Coloque um disco. ✓ Verifique se o disco está colocado com a etiqueta para baixo. ✓ Substitua ou limpe o disco, consulte “Manutenção”. ✓ Use um disco legível ou um formato MP3/CD correctamente gravado.
Sem imagem.	<ul style="list-style-type: none"> ✓ Verifique se o televisor está ligado. ✓ Verifique a ligação do vídeo. ✓ Por vezes é provável o aparecimento de uma pequena distorção da imagem. ✓ Não se trata de uma deficiência.
Imagem distorcida ou fraca.	<ul style="list-style-type: none"> ✓ Por vezes é provável o aparecimento de uma pequena distorção da imagem. Não se trata de uma deficiência. ✓ Limpe o disco. ✓ Ligue o sistema à entrada S-video do seu televisor.
O rácio do aspecto do ecrã. não pode ser alterado apesar de ter definido a forma do televisor.	<ul style="list-style-type: none"> ✓ O rácio de aspecto é fixado no disco DVD. ✓ Dependendo do televisor, poderá não permitir alterar o rácio do aspecto.
O leitor DVD não inicia a leitura.	<ul style="list-style-type: none"> ✓ Insira um disco legível. ✓ Verifique o tipo de disco, sistema de cores e código regional. ✓ Limpe o disco. ✓ Coloque o disco com o lado de reprodução voltado para baixo. ✓ Prima SYSTEM MENU para desligar o ecrã do menu de configuração. ✓ Cancele a função da classificação de controlo parental ou altere o nível de classificação. ✓ A humidade está condensada no interior do sistema. Retire o disco e deixe o sistema ligado durante cerca de uma hora.
A aparelhagem não reage quando os botões são premidos	<ul style="list-style-type: none"> ✓ Retire o cabo eléctrico e volte a colocá-lo, ligando novamente a aparelhagem.

Troubleshooting

Problema	Solução
The language for the sound or subtitle cannot be changed when playing a DVD.	<ul style="list-style-type: none">✓ A banda sonora ou legendas multi-idiomas não estão gravadas no DVD.✓ Não é possível alterar o idioma para o som e legendas no DVD.
No image is output when a function is selected.	<ul style="list-style-type: none">✓ Make sure the component is connected correctly.✓ Press the correct function button for the input source.
Sound cannot be heard or is of poor quality	<ul style="list-style-type: none">✓ Adjust the volume.✓ Disconnect the headphones.✓ Check that the speakers are connected correctly.✓ Check if the stripped speaker wire is clamped.✓ If the system is in pause, slow motion or fast forward/reverse mode, press ► to resume the normal play mode.✓ Make sure the MP3-CD was recorded within 32-256 kbps bit rate with sampling frequencies at 48 kHz, 44.1 kHz or 32 kHz
Poor radio reception.	<ul style="list-style-type: none">✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception.✓ Increase the distance between the System and your TV set or VCR.
Recording or playback cannot be made	<ul style="list-style-type: none">✓ Clean deck parts, see "Maintenance".✓ Use only NORMAL tape.✓ Apply a piece of adhesive tape over the missing tab space.
The tape deck door cannot open	<ul style="list-style-type: none">✓ Remove and reconnect the AC power plug and switch on the system again.
Left and right sound outputs are reversed.	<ul style="list-style-type: none">✓ Check the speaker connections and location.
The remote control does not function.	<ul style="list-style-type: none">✓ Point the remote control at the remote control sensor of the unit.✓ Reduce the distance to the player.✓ Remove any possible obstacles.✓ Replace the batteries with new ones.✓ Check that the batteries are loaded correctly.
The display is dark	<ul style="list-style-type: none">✓ Press DIM again.

Analog: Sound that has not been turned into numbers. Analog sound varies, while digital sound has specific numerical values. These jacks send audio through two channels, the left and right.

Aspect ratio: The ratio of vertical and horizontal sizes of a displayed image. The horizontal vs. vertical ratio of conventional TVs is 4:3, and that of wide-screens is 16:9.

AUDIO OUT Jacks: Jacks on the back of the DVD System that send audio to another system (TV set, Stereo, etc.).

Bit Rate: The amount of data used to hold a given length of music; measured in kilobits per second, or kbps. Or, the speed at which you record. Generally, the higher the bit rate better the sound quality. However, higher bit rates use more space on a Disc.

Chapter: Sections of a picture or a music piece on a DVD that are smaller than titles. A title is composed of several chapters. Each chapter is assigned a chapter number enabling you to locate the chapter you want.

Component Video Out Jacks: Jacks on the back of the DVD System that sends high-quality video to a TV set that has Component Video In jacks (R/G/B, Y/Pb/Pr, etc.).

Disc menu: A screen display prepared for the selection of images, sound, subtitles, multi-angles, etc recorded on a DVD.

Digital: Sound that has been converted into numerical values. Digital sound is available when you use the DIGITAL AUDIO OUT COAXIAL or OPTICAL jacks. These jacks send audio through multiple channels, instead of just two channels as analog does.

Dolby Digital: A surround sound system developed by Dolby Laboratories containing up to six channels of digital audio (front left and right, surround left and right and center).

JPEG: A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio.

MP3: A file format with a sound data compression system, "MPE" is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. Through the MP3 format, one CD-R or CD-RW can contain about 10 times as much data volume as a regular CD can.

Multichannel: DVD is specified to have all sound tracks constitute one sound field. Multichannel refers to a structure of sound tracks having three or more channels.

Parental control: A function of the DVD to limit playback of the disc by the age of the users according to the limitation level in each country. The limitation varies from disc to disc; when it is

activated, playback will be prohibited if the software's level is higher than the user-set level.

Playback control (PBC): Refers to the signal recorded on video CDs or SVCDs for reproduction control. By using screen menus recorded on a Video CD or SVCD that supports PBC, you can enjoy interactive-type software as well as software having a search function.

Progressive Scan: It displays all the horizontal lines of a picture at one time, as a signal frame. This system can convert interlaced video from DVD into progressive format for connection to a progressive display. It dramatically increases the vertical resolution. A progressive scan TV set is needed to receive progressive scan output from the player.

Region code: A system allowing discs to be played only in preset regions. This unit will only play discs that have compatible region codes. You can find the region code of your unit from the product label. Some discs are compatible with more than one region (or ALL regions).

S-Video: Produces a clear picture by sending separate signals for luminance and the color. You can use S-Video only if your TV set has S-Video In jack.

Sampling Frequency: Frequency of data sampling when analog data is converted to digital data. Sampling frequency numerically represents how many times the original analog signal is sampled per second.

Title: The longest section of a picture or music feature on DVD, music, etc., in video software, or the entire album in audio software. Each title is assigned a title number enabling you to locate the title you want.

VIDEO OUT jack: Jack on the back of the DVD System that sends video to TV.

POLIZA DE GARANTIA

ESTA POLIZA ES GRATUITA

Este aparato ha sido cuidadosamente diseñado y se ha fabricado con los mejores materiales bajo un estricto control de calidad, garantizando su buen funcionamiento por los periodos establecidos según el aparato (ver lista en la parte inferior) **a partir de la entrega del aparato al consumidor.**

Esta póliza incluye la reparación o reposición gratuita de cualquier parte o componente que eventualmente fallase y la mano de obra necesaria para su reparación, así como los gastos de transportación razonablemente erogados dentro de nuestros centros de servicio, misma que se hará efectiva en cualquiera de nuestros centros de servicio autorizados en el país.

Si su aparato llegase a requerir de nuestro servicio de garantía, acuda al centro de servicio más cercano a su domicilio, de tener alguna duda por favor llame a nuestra **CENTRO DE INFORMACIÓN AL CLIENTE LADA** sin costo en toda la republica al **01 800 504 62 00** en donde con gusto le indicaremos el centro de servicio autorizado más cercano a su domicilio.

PHILIPS MEXICANA S.A. de C.V. a través de sus centros de servicio autorizados **reparará y devolverá a usted su aparato en un plazo no mayor a 20 días hábiles,** contados a partir de la fecha de ingreso, impresa en la orden de servicio de cualquiera de nuestros centros de servicio autorizados.

La garantía de esta póliza cubre cualquier desperfecto o daño eventualmente ocasionado por los trabajos de reparación y/o traslado del aparato en el interior de nuestros centros de servicio autorizados.

Esta póliza sólo tendrá validez, si está debidamente requisitada, sellada por la casa vendedora, en caso de extravío de esta póliza, podrá hacer efectiva su garantía con la presentación de su factura de compra.

ESTA POLIZA NO SE HARA EFECTIVA EN LOS SIGUIENTES CASOS:

- Cuando el aparato sea utilizado en condiciones distintas a las normales.
- Cuando el aparato no haya sido operado de acuerdo con el instructivo de uso que se le acompaña.
- Cuando la causa de la falla o mal funcionamiento sea consecuencia de una reparación inadecuada o alteración producida por personas no autorizadas por PHILIPS MEXICANA S.A. de C.V.

PERIODOS DE GARANTIA

36 MESES. – Monitores para computadora.

12 MESES. – Televisores con y sin reproductor de video digital DVD, videocassetteras, reproductores de discos de video digital DVD, reproductores de disco de video digital con pantalla incluida, grabadores reproductores de disco de video digital DVD, grabadores reproductores de disco compacto, Radiograbadoras con y sin reproductor de disco compacto, reproductores de disco compacto portátil, video proyectores (excepto la lámpara) , cámaras de video, decodificadores de señal (IRD), televisores para hotel, sistemas de observación, televisores de proyección, teléfonos celulares, pagers, minisistemas de audio, minisistemas de audio con reproductor de disco de video digital integrado, microsistemas de audio, sistemas de cine en casa, sistemas reproductores de disco de video digital, equipos modulares, sintonizadores, facsímils, LNB, antenas de recepción de satélite, DVD ROM, CDR ROM y CDRW ROM para computadora.

6 MESES. – Radiograbadoras con y sin reproductor de disco compacto, reproductores de cassette portátil, reproductores de disco compacto portátil, radio relojes, radios A.M./F.M., reproductores de audio digital MP3 (internet), auto estéros y teléfonos inalámbricos.

3 MESES. – Accesorios, controles remotos, bocinas, cinta para fax y para cámaras de videoconferencia.



PHILIPS

Philips Mexicana, S.A. de C.V.

Producto importado por:

Philips Mexicana, S.A. de C.V.
 Av. La Palma No. 6
 Col. San Fernando La Herradura
 Huixquilucan, Edo. de México C. P. 52784
 Tel. 52 69 90 00

Centro de Información al Cliente

Información General
 LADA SIN COSTO PARA TODA LA REPUBLICA
01 800 504 62 00
 CORREO ELECTRONICO
philips@merkafon.com

MODELO _____ No. DE SERIE _____

La presente garantía contará a partir de: _____ DIA _____ MES _____ AÑO _____

En caso que en su producto presente alguna falla, acuda al centro de servicio más cercano a su domicilio (según listado de talleres anexo) y en caso de tener alguna duda o pregunta por favor llame a nuestro

Centro de información al Cliente, en donde con gusto le atenderemos en todo lo relativo a:

- * Servicio de sus aparatos Philips
- * Información de productos y Talleres Autorizados Philips
- * Asesoría en el manejo e instalación de su producto Philips
- * Información en donde puede adquirir productos y accesorios Philips

Para hacer efectiva la garantía de su producto, es necesario presentar esta póliza debidamente requisitada o de lo contrario, presentar su factura de compra.

CENTROS DE SERVICIO AUTORIZADOS PHILIPS EN LAS PRINCIPALES CIUDADES

NOTA: Los Centros que tengan (S) solo proporcionan Servicio y los que tengan (SR) venden refacciones, accesorios y proporcionan Servicio

CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO		CIUDAD	LADA	TELEFONO	CORREO ELECTRONICO	
ACAPULCO, GRO	744	483-32-96	serproa@yahoo.com.mx	S	MEXICO, D. F. ZONA NORTE	55	55-67-19-92 55-67-22-56	chyts_electronica@yahoo.com.mx	S
AGUASCALIENTES, AGS	449	915-25-81	jmsale@hotmail.com	S	MEXICO, D. F. ZONA ORIENTE	55	57-58-89-37	cnoguedm@terra.com.mx	S
CAMPECHE, CAMP	981	816 25 75	oreza@hotmail.com	S	MEXICO, D. F. ZONA PONIENTE	55	58 12 44 12	raulmz@avantel.net	S
CANCUN, Q ROO,	998	984 18 74	gammacancun@webtelmexnet.mx	S	MONTERREY, N.L.	818	375-16-17 400-54-03	mcsa@prodigy.net.mx	S
CD, JUAREZ, CHIH	656	618-21-28 623-46-20	teleservicio@prodigy.net.mx	S	MORELIA, MICH	443	312-03-17	multiservicios_profesionales_de_zamora@msnz.com	S
CD, OBREGON, SON	644	412-41-51 416-20-93	mena747@prodigy.net.mx	S	NEZAHUALCOYOTL EDO, MEX	55	57-33-34-98	vicentegutierrez@prodigy.net.mx	S
CD, VICTORIA, TAMPS	834	315-66-03 315-51-93	eei_smiller@yahoo.com.mx	S	OAXACA, OAX	951	516-47-37	eifranctor@prodigy.net.mx	S
COLEMA, COL	312	314-03-01	tv_antenas@hotmail.com	S	ORIZABA, VER	272	724 38 53	barreda_electronica@hotmail.com	S
CUERNAVACA, MOR	777	313-00-49 313-90-92	centroserviciohertz@hotmail.com	S	PACHUCA, HGO	771	714-15-81	zarateek@hotmail.com	S
CUJAJCAN, SIN	667	716-15-10	stereovox@chunegared.net.mx	S	POZA RICA, VER	782	824 47 82	sonydigital@prodigy.net.mx	S
CHIHUAHUA, CHIH	614	421-59-30 421-63-61	comercialdomestica@hotmail.com	S	PUEBLA, PUE	222	248-77-64 231-43-77	rascon12@prodigy.net.mx	S
CHILPANCINGO, GRO,	747	471 72 73	ingetec_gro@hotmail.com	S	QUERETARO, QRO	412	216-10-09		S
DURANGO, DGO	618	825-00-05	evsurdgo@yahoo.com	S	SALTILLO, COAH	844	415 35 80	electronica digital_07@hotmail.com	S
GUADALAJARA, JAL	33	36-15-72-62 36-16-83-27	www.Leecom.com.mx	S	SAN LUIS POTOSI SLP,	444	815-34-07	centroservicio@prodigy.net.mx	S
HERMOSILLO, SON	662	2105-4-95 2105-8-86	manuelv@prodigy.net.mx	S	SATELITE, EDO, MEX	55	55 62 59 73	missus_satelite@hotmail.com	S
RAPUATO, GTO	462	626-51-10	tv_gaso@hotmail.com	S	TAMPICO, TAMPS	833	214 13 60	electronioves@prodigy.net.mx	S
LA PAZ, BCS	612	122-95-49	centa1a@prodigy.net.mx	S	TEPEC, NAY	311	212-66-93	spe_tm@hotmail.co	S
LEON, GTO	477	770-26-99	tecespealazados@hotmail.com	S	TIJUANA, B.C.N	664	621-22-45	www.wgl@telhor.net	S
MATAMOROS, TAMPS	868	813-50-13	digital_electronica@comunicable.net	S	TOLUCA, EDO, MEX	722	214-83-09		S
MAZATLAN, SIN	669	982-42-21	e_santel@hotmail.com	S	TOLUCA, EDO, MEX	722	213 62 94		S
MERIDA, YUC	999	928-59-05	evia2@prodigy.net.mx	S	TORREON, COAH	871	732-49-49	jomar02@prodigy.net.mx	S
MEXICALI, B.C.N	686	561-98-08 561-98-18	bajarelectronica@adl.com	S	TUXTLA GUTIERREZ, CHIS	961	618-19-08	kovideo@prodigy.net.mx	S
MEXICO D.F. ZONA ARAGON	55	57 94 06 34	philipservicio@hotmail.com	S	URUAPAN, MICH	452	524-08-38 524-37-78	rosalia@nich11.com.mx	S
MEXICO D.F. ZONA CENTRO	55	55 21 60 07	univelmex@yahoo.com.mx	SR	VERACRUZ, VER	229	932-78-23 932-44-44	antiza@servmegared.net.mx	S
MEXICO D. F. ZONA SUR	55	55-36-71-03 55-36-25-75	centrosdeservicioelectronico@hotmail.com	S	VILLAHERMOSA, TAB	993	314-31-36 314-61-67	villitec@intrassur.net.mx	S
MEXICO, D. F. ZONA NORTE	55	53 68 30 21	tissasen@prodigy.net.mx	S	ZACATECAS, ZAC,	492	922 31 63	sercomur@hotmail.com	S

Para mayor referencia de Talleres de Servicio Autorizados en otras ciudades comunicarse al 01 800 504 62 00 (lada sin costo)

ACRE									
RIO BRANCO	(68)	2249116	CASTELO COLATINA	(27)	5421811	IPATINGA	(31)	8222332	PARÁ
			GUARAPARI	(27)	3722288	ITABIRA	(31)	38316218	ABAETETUBA
ALAGOAS			LINHARES	(27/3)	3710858	ITAPECERICA	(35)	36211315	BELÉM
ARAPIRACA	(82)	5222367	NOVA VENÉCIA	(27)	37521729	ITAÚNA	(37)	2412468	BELÉM
MACEÓ	(82)	2417237	PINHEIROS	(27)	7651303	ITUJUBA	(34)	26862131	CAPANEMA
PALMEIRA DOS ÍNDIOS	(82)	4213452	SÃO DOMINGOS DO NORTE	(27)	7421237	JANAÚBA	(38)	38211605	CASSTANHAL
UNIÃO DOS PALMARES	(82)	2811305	SÃO GABRIEL DA PALHA	(27)	7271153	JOÃO MONLEVADE	(31)	38512909	ITAITUBA
			SÃO MATEUS	(27)	7631386	JOÃO MONLEVADE	(31)	8521112	MARABÁ
AMAZONAS			VILA VELHA	(27)	32891233	JOÃO PINHEIRO	(38)	35611327	ÓBIDOS
MANAUS	(92)	6633366	VITÓRIA	(27)	32233899	JUIZ DE FORA	(32)	32151514	PARAGOMINAS
MANAUS	(92)	6330305				LAGOA DA PRATA	(37)	2611908	PARAUPEBAS
						LAGOA SANTA	(31)	6812311	PORTO TROMBETAS
AMAPÁ			GOIÁS			LAVRAS	(35)	38219188	REDEÇÃO
MACAPÁ	(96)	2234869	ANAPOLIS	(62)	3243562	MACAÇU	(33)	3314735	SANTARÉM
MACAPÁ	(96)	2236109	CAÇU	(62)	6561811	MANTENA	(33)	2411625	XINGUBA
SANTANA	(96)	2811080	CATALÃO	(62)	4412786	MONTE CARMELO	(34)	38422082	
			GOIANÉSIA	(62)	3531302	MONTE SANTO DE MINAS	(35)	35911888	
			GOIÂNIA	(62)	2919095	MONTE CLAROS	(38)	3218925	PARAIBA
			GOIÂNIA	(62)	2929208	MURIAE	(32)	7224334	CAMPINA GRANDE
BAHIA			GOIÂNIA	(62)	4952401	NUBUENA	(35)	5712419	ESPERANÇA
ALAGOINHAS	(75)	4211128	GOIÂNIA	(62)	5111840	MUZAMBINHO	(35)	3621165	GUARABIRA
BARREIRAS	(77)	6117592	GOIÂNIA	(62)	4511184	NANUIQUE	(38)	3621165	JOÃO PESSOA
BOM JESUS DA LAPA	(77)	4814335	IPORÁ	(62)	6032342	NOVA LIMA	(31)	35412026	NOVA FLORESTA
BRUMADOURO	(77)	4412381	IPORÁ	(62)	3551484	OLIVEIRA	(37)	33314444	PATOS
CAETITE	(77)	4541183	ITAPURANGA	(62)	4310837	PARÁ DE MINAS	(37)	2316369	SAPÉ
CAMAÇARI	(71)	6216288	ITUMBARA	(62)	6314819	PARACATU	(35)	36711250	SOLÂNEA
CATU	(71)	6411982	JATAÍ	(62)	3731806	PASSOS	(35)	35214342	
CÍCERO DANTAS	(75)	2782440	JUSSARA	(62)	4611133	PATOS DE MINAS	(34)	3822988	PERNAMBUCO
CRUZ DAS ALMAS	(75)	6212839	PIRES DO RIO	(62)	3671799	PATROCÍNIO	(31)	8311531	BELO JARDIM
ESPLANADA	(75)	4271454	PORANGATU	(62)	3971320	PEDRO LEOPOLDO	(31)	38612784	CABO DE SANTO AGOSTINHO
EUNÁPOLIS	(73)	2815181	RIALMA	(62)	6210173	PIRAPORA	(38)	37414197	CAMARAGIBE
FEIRA DE SANTANA	(73)	2232882	RIO VERDE	(62)	3641301	PITANGUI	(37)	2714101	CARIARI
GANDU	(73)	2541592	SÃO MIGUEL DO ARAUÁ	(62)	5051505	PIUI	(37)	33714632	FLORESTA
ILHÉUS	(73)	2315995	TRINHADE	(62)	3571285	POÇOS DE CALDAS	(35)	37222531	GARANHUNS
IPIAÚ	(73)	5311219	URUAÇU	(62)	5381889	POUSO ALEGRE	(35)	34212120	PAULISTA
IRECÊ	(74)	6411248				SÃO SEBASTIAO PARAISO	(35)	3313094	RECIFE
ITABERABA	(75)	2512358	MARANHÃO			SÃO SEBASTIAO PARAISO	(35)	33512054	RECIFE
ITABUNA	(73)	6137777	AÇAILÂNDIA	(98)	5381889	SETE LAGOAS	(35)	33211836	RECIFE
ITAPETINGA	(77)	2613003	BACABAL	(98)	6216370	SANTO ANTONIO MONTE	(33)	32811558	RECIFE
JACOBINA	(74)	6213451	BALSAS	(98)	5410113	TEÓRIO OTONI	(33)	35224804	SALGUEIRO
JEQUIÊ	(73)	5254141	CAROLINA	(98)	7311335	TIMÓTEO	(31)	38482278	SERRA TALHADA
JEQUIÊ	(73)	5254421	CAXIAS	(98)	5212377	SÃO JOÃO DO REI	(32)	2514820	
JUAZEIRO	(74)	6116456	CHAPADINHA	(98)	4711364	SÃO LOURENÇO	(35)	33311303	PIAÚI
JUAZEIRO	(74)	6111002	CODÓ	(98)	6611277	SETE LAGOAS	(33)	33718306	CAMPO MAIOR
MURITIBA	(75)	4241908	COELHO NETO	(98)	4731351	SANTO ANTONIO MONTE	(33)	32811558	CAJARI
PAULO AFONSO	(75)	2811349	IMPERATRIZ	(98)	5244969	TEÓRIO OTONI	(33)	35224804	OLÉRIO
POÇÕES	(77)	4311523	PRESIDENTE DUTRA	(98)	6631815	TRÊS CORAÇÕES	(31)	38482278	PIRIPARI
RIBEIRA DO POMBAL	(75)	2761953	PRESIDENTE DUTRA	(98)	6631309	TRÊS PONTAS	(35)	32312493	PIRIPARI
SALVADOR	(71)	2072791	SANTA INÊS	(98)	6532006	TRÊS PONTAS	(35)	32652728	TERESINA
SALVADOR	(71)	3356233	SÃO JOSÉ DE RIBAMAR	(98)	2241581	UBA	(32)	5323626	
SANTO AMARO	(75)	2411340	SÃO LUÍS	(98)	2323236	UBERABA	(34)	33332520	PARANÁ
SENHOR DO BONFIM	(74)	5413143				UBERLÂNDIA	(34)	3212636	AMPÉRE
SERRINHA	(75)	2611794	MINAS GERAIS			UNAI	(38)	6781576	ANTONINA
SANTO ANTONIO DE JESUS	(75)	6314470	ALFENAS	(35)	32923911	VARGINHA	(35)	32129007	APUCARANA
VALENÇA	(75)	6413710	ANDARAÍ	(33)	7212324	VAZANTE	(34)	8131420	ARAPONGAS
VITÓRIA DA CONQUISTA	(77)	4241183	ANDRADAS	(34)	33512970	VIÇOSA	(31)	8918000	ASSIS CHATEAUBRIAND
			ARAXÁ	(34)	36611132				ASTORGA
CEARÁ			ARCOS	(37)	33513455	MATO GROSSO DO SUL			BANDERANTES
BREJO SANTO	(88)	5310123	BAMBUI	(34)	34311473	AMAMBÁI	(67)	4811543	CAMPO MOURÃO
CRATÉUS	(88)	6901019	BARBACENA	(32)	33310283	CAMPO GRANDE	(67)	3827229	CAPANEMA
CRATO	(88)	5212501	BELO HORIZONTE	(31)	32733777	CAMPO GRANDE	(67)	3242804	CASCATEL
FORTALEZA	(85)	2875906	BELO HORIZONTE	(31)	34420944	CORUMBÁ	(67)	2313923	CIANORTE
FORTALEZA	(85)	2573155	BELO HORIZONTE	(31)	32254086	DOURADOS	(67)	4212117	CORNÉLIO PROCÓPIO
IGUAÇU	(88)	5801052	BETIM	(31)	35322088	IVINHEMA	(67)	4421244	CORNÉLIO PROCÓPIO
ITAPIPOCA	(88)	6312030	BOA ESPERANÇA	(35)	38512295	NAVIARÁ	(67)	4612486	CORNÉLIO PROCÓPIO
JUAZEIRO DO NORTE	(88)	5112867	BOM DESPACHO	(37)	5212906	NOVA ANDRADINA	(67)	4413851	CURITIBA
LIMOEDO DO NORTE	(88)	4243198	BOM DESPACHO	(37)	5222511	PONTA PORÁ	(67)	4314313	CURITIBA
ORÓS	(88)	5841271	CARANGOLA	(32)	37412017	RIO BRILHANTE	(67)	4527950	DOIS VIZINHOS
SOBRAL	(88)	6110805	CARATINGA	(33)	3212379	TRÊS LAGOAS	(67)	5212007	FOZ DO IGUAÇU
UBAJARA	(88)	6341233	CÁSSIA	(35)	35412293				FOZ DO IGUAÇU
			CATAGUASES	(32)	34215321	MATO GROSSO			FRANCISCO BELTRÃO
DISTRITO FEDERAL			CAXAMBU	(35)	33413661	ALTO ARAGUAMA	(65)	4811726	GOIÃO-ERÉ
BRASILIA	(61)	2269898	CONGONHAS	(31)	7311638	BARRA DO GARÇAS	(65)	4011394	GUARAPUAVA
BRASILIA	(61)	2462825	CONSELHEIRO LAFAIETE	(31)	7612871	CÁCERES	(65)	2334760	IBATI
GAMA	(61)	5564840	CONTAGEM	(31)	3953461	CIJUBÁ	(65)	6230421	IBIPORÁ
TAGUATINGA	(61)	3526855	CONTAGEM	(31)	33912994	LUCAS DO RIO VERDE	(65)	5491333	IGUAÇUARA
			CORONEL FABRICIANO	(31)	38411804	MIRASSOL D'ESTE	(65)	2411716	IPORÁ
			CURVELO	(38)	37213009	PONTES E LACERDA	(65)	2662326	IPORÁ
ESPÍRITO SANTO			DIVINÓPOLIS	(37)	3221353	PRIMAVERA DO LESTE	(65)	4981682	IRATI
ALEGRE	(27)	5526349	FORMIGA	(37)	33212988	RONDONÓPOLIS	(65)	4233888	LAPA
ALFREDO CHAVES	(27)	2691326	FRUTAL	(34)	34235279	SINOP	(65)	5311473	LARANJEIRAS DO SUL
ARACRUZ	(27)	3256151	GOVERNADOR VALADARES	(33)	32716650	SORRISO	(65)	5441443	LOANDA
BAIXO GUANDU	(27)	3762245	GOXUPÉ	(35)	35513891	TANGARÁ DA SERRA	(65)	3261431	LONDRINA
BARRA SÃO FRANCISCO	(27)	35219372	GOXUPÉ	(35)	5514124				MARECHAL CÂNDIDO RONDON
CACHOEIRO DO ITAPEMIRIM	(27)	35219372							

Certificado de Garantia no Brasil

Este aparelho é garantido pela PHILIPS DA AMAZÔNIA INDÚSTRIA ELETRÔNICA LTDA, por um período superior ao estabelecido por lei, porém, para que a garantia tenha validade, é imprescindível que, além deste certificado, seja apresentada a nota fiscal de compra do produto.

6)

A garantia não será válida se o produto necessitar de modificações ou adaptações para habilitá-lo a operar em qualquer outro país que não aquele para o qual foi designado, fabricado, aprovado e/ou autorizado, ou ter sofrido qualquer dano decorrente deste tipo de modificação.

Centro de Informações ao Consumidor (CIC),
fone: (011) 2121-0203. Atendimento de segunda
à sexta-feira, das 08:00hs às 20:00hs. Aos sábados,
das 08:00hs às 13:00hs ou escreva para CAIXA
POSTAL: n° 21.315 - CEP 04602-970 - São Paulo - SP


- 1) A PHILIPS DA AMAZÔNIA INDÚSTRIA ELETRÔNICA LTDA. assegura ao proprietário consumidor deste aparelho a garantia de 180 dias (90 dias legal mais 90 dias adicionais) **CONTADOS A PARTIR DA DATA DE COMPRA DO PRODUTO, CONFORME EXPRESSO NA NOTA FISCAL DE COMPRA.** que passa a fazer parte deste certificado.
- 2) Esta garantia perderá sua validade se:
 - A) O defeito apresentado for ocasionado por uso indevido ou em desacordo com o seu manual de instruções.
 - B) O produto for alterado, violado ou consertado por pessoa não autorizada pela Philips.
 - C) O produto for ligado a fonte de energia (rede elétrica, pilhas, bateria, etc.) de características diferentes das recomendadas no manual de instruções e/ou no produto.
 - D) O número de série que identifica o produto estiver de alguma forma adulterado ou rasurado.
- 3) Estão excluídos desta garantia defeitos decorrentes do descumprimento do manual de instruções do produto, de casos fortuitos ou de força maior; bem como aqueles causados por agentes da natureza e acidentes.
- 4) Excluem-se igualmente desta garantia os defeitos decorrentes do uso dos produtos em serviços não doméstico/residencial regular ou em desacordo com o uso recomendado.
- 5) Nos municípios onde não exista oficina autorizada de serviço Philips, as despesas de transporte do aparelho e/ou do técnico autorizado, correm por conta do consumidor requerente do serviço.

Os dados deste manual estão sujeitos a alterações



Meet Philips at the Internet
<http://www.philips.com>

English
Español
Português

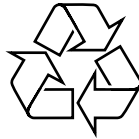

FWD186

