# Always there to help you

Register your product and get support at www.philips.com/welcome



AJ7260D



# User manual



# **Contents**

1	Important Safety Notice	2 2 3
2	Your Docking Entertainment S	ystem 4
	Introduction	4
	What's in the box	4
	Overview of the main unit	5
3	Get started	7
	Install batteries	7
	Connect power	7
	Turn on	7
	Set time and date	8
4	Play	9
	Play from iPod/iPhone/iPad	9
	Play from an external device	10
5	Listen to radio	11
	Tune to a radio station	11
	Program radio stations	11
6	Other features	12
	Set the alarm timer	12
7	Adjust sound	14
	Adjust volume level	14
	Select a sound effect	14
8	Product information	15
	Specifications	15
9	Troubleshooting	16

# 1 Important

# Safety

### Know these safety symbols







This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING:To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

# A

#### Warning

- · Never remove the casing of this apparatus.
- · Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- Use only power supplies listed in the user manual.



#### Caution

- · Danger of explosion if battery is incorrectly replaced.
- Remove battery if it is exhausted or will not be used for a long time.
- Batteries contain chemical substances, so they should be disposed of properly.
- Perchlorate Material-special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.
- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death.
   Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Battery usage CAUTION –To prevent battery leakage which may result in bodily injury, property damage, or damage to the remote control:

- Install all batteries correctly, + and as marked on the remote control.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Remove batteries when the remote control is not used for a long time.
- Make sure that there is enough free space around the product for ventilation.
- The system shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the system (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

### **Notice**

Any changes or modifications made to this device that are not expressly approved by WOOX Innovations may void the user's authority to operate the equipment.

# Disposal of your old product and battery

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health.

Your product contains batteries, which cannot had disposed of with personal bayes held waste.

be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.



#### Caution

 Removal of the built-in battery invalidates the warranty and may destroy the product.

Always bring your product to a professional to remove the built-in battery.



"Made for iPod," "Made for iPhone," and "Made for iPad" mean that an electronic accessory has been designed to connect specifically to iPod, iPhone, or iPad, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, iPhone, or iPad may affect wireless performance.

iPod and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. iPad is a trademark of Apple Inc.

#### Class II equipment symbol:



CLASS II apparatus with double insulation, and no protective earth provided.



#### Vote

• The type plate is located on the bottom of the unit.

# Your Docking Entertainment System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

#### Introduction

With this unit, you can enjoy music from iPod/iPhone/iPad and listen to radio or other audio devices.

Your iPod/ iPhone/iPad and radios can be set as alarm sources. You can set two alarms to go off at different time.

You can enrich sound output with these sound effects:


- Digital Sound Control (DSC)
- Dynamic Bass Boost (DBB)

### What's in the box

Check and identify the contents of your package:

- Main unit
- Short user manual

# Overview of the main unit

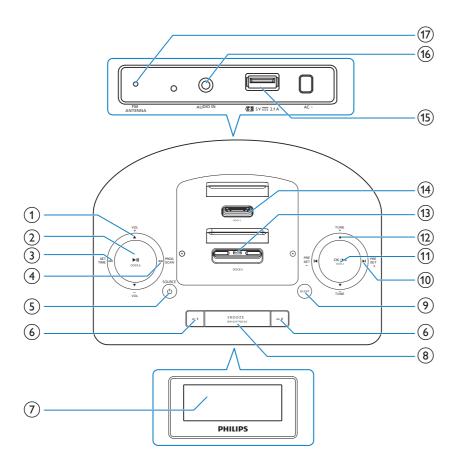

- 1 VOL +/VOL -
  - Increase/decrease volume.
- ② ►II DOCK 1
  - In Dock 1 mode, start or pause play.
  - In other modes, select Dock 1 source.
- (3) SET TIME
  - In standby mode, set day, month and year.
  - In other modes, enable/disable DBB (Dynamic Bass Boost) or select a DSC (Digital Sound Control) sound effect.

- In dock mode, press and hold to search within a track,
- In FM mode, select FM stereo or FM mono.

### 4 PROG/SCAN

- Program radio stations.
- Automatically scan for radio stations.
- In dock mode, press and hold to search within a track.

#### (5) U/SOURCE

- Press and hold to turn on the unit or switch to standby mode.
- Stop alarm.
- Select a source: DOCK 1/DOCK 2, FM or AUDIO IN.

#### (6) AL1/AL2

- Set alarm.
- View alarm settings.
- Activate/deactivate alarm timer.

#### (7) Display panel

Show the current status.

#### (8) SNOOZE/BRIGHTNESS

- Snooze alarm.
- Adjust the display brightness.

#### (9) SLEEP

Set the sleep timer.

#### (10) PRESET +/PRESET -

- Skip to next/previous track,
- Select a preset radio program.
- In dock mode, press and hold to search within a track.

#### (11) OK/►II DOCK 2

- In Dock 2 mode, start or pause iPod/ iPhone/iPad play.
- In other modes, select Dock 2 mode.

#### (12) TUNE+/TUNE-

- Set time and date.
- When setting alarm, adjust alarm clock and volume, and select a sound source.
- Tune to an FM audio station
- (13) Dock 1 for iPod/iPhone/iPad with Lightning connection
- (14) Dock 2 for iPod/iPhone/iPad with 30-pin connection
- (15) USB charging port
- (16) AUDIO IN
  - Connect external audio device.

#### (17) FM ANTENNA

Connect an FM antenna to improve FM reception.

# 3 Get started



#### Caution

 Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

If you contact Philips, you will be asked for the model and serial number of this apparatus. The model number and serial number are on the bottom of the apparatus. Write the numbers here:

Model No	 	 
Serial No.		

### Install batteries



#### Note

 You can only use AC power as power supply. Batteries (not supplied) are for backup purpose.



- 1 Open the battery compartment.
- 2 Insert 2 × AA size batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.



#### Caution

 
- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Risk of decreased battery life! Never mix different brands or types of batteries.
- Risk of product damage! When the remote control is not used for long periods, remove the batteries.

# Connect power



#### Caution

- Risk of product damage! Ensure that the power voltage corresponds to the voltage printed on the bottom of the apparatus.
- Risk of electric shock! When you unplug the AC power cord, always pull the plug from the socket. Never pull the cord.
- Before connecting the AC power cord, ensure you have completed all other connections.
- To disconnect the set from the mains completely, remove the mains plug from the wall socket.



Connect the AC power cord to the wall outlet.

### Turn on

Press and hold &.

→ The unit switches to the last selected source.

### Switch to standby

Press and hold  $\ensuremath{\mathfrak{O}}$  again to switch the unit to standby mode.

→ The time and date (if set) appear on the display panel.

#### Select source

Press **SOURCE** repeatedly to select from DOCK 1/Dock 2, FM and AUDIO IN.

# Set time and date

- 1 In standby mode, press and hold **SET TIME** for 2 seconds.
  - → [24H] begins to blink, and you can hear a beep.
- Press TUNE+ or TUNE- to select the 12/24 hour format.
- **3** Press **OK** to confirm.
  - → 00:00 will display, and the hour digits begin to blink.
- 4 Repeat steps 2-3 to set the hour, minute, day, month and year.



- In 12 hour format, [MONTH--DAY] is displayed.
- in 24 hour format, [DAY--MONTH] is displayed.



 When iPod/iPhone/iPad is connected, the docking unit synchronizes time from the iPod/iPhone/iPad automatically.

# 4 Play

# Play from iPod/iPhone/iPad

You can enjoy audio from iPod/iPhone/iPad through this unit.

#### Compatible iPod/iPhone/iPad

The integrated dual dock unit supports the following iPod, iPhone, and iPad models: Made for (Dock 1):


- iPod nano (7th generation)
- iPod touch (5th generation)
- iPad (4th generation)
- iPad mini
- iPhone 5

Also made for (Dock 2):

- iPod nano (2nd/3rd/4th/5th/6th generation)
- iPod classic
- iPod touch (1st/2nd/3rd/4th generation)
- iPad (3rd generation)
- iPad 2
- iPad
- iPhone 4S
- iPhone 4
- iPhone 3GS
- iPhone 3G
- iPhone

### Listen to the iPod/iPhone/iPad

- 1 Press **SOURCE** repeatedly to select DOCK 1 or DOCK 2 mode.
- Place the iPhone/iPod/iPad into the Dock 1 or Dock 2.

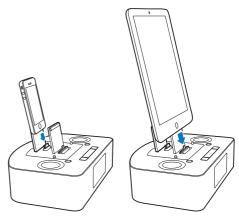

- To pause/resume play, press ► II.
- To skip to a track, press I ✓ / ►I.
- To search during play, press and hold | ◀◀ / ▶▶| or PRESET +/PRESET -, then release to resume normal play.

# Charge the iPod/iPhone/iPad

When the unit is connected to power, the docked iPod/iPhone/iPad begins to charge.



Пр

• For certain iPod models, it may take up to a minute before the charging indication appears.

# Play from an external device

You can also listen to an external audio device through this unit.

- 1 Press **SOURCE** repeatedly to select the AUDIO IN source.
- 2 Connect a 3.5mm audio link cable (not supplied) to:
  - the **AUDIO IN** jack (3.5mm) on the back of the unit.
  - the headphone jack on an external device.
  - the screen displays scrolling text message [AUDIO IN]; and shows date and time.
- 3 Start to play the device (see the device user manual).

#### 5 Listen to radio



Only FM radio reception is available on this unit.

# Tune to a radio station



- · Use an FM antenna for optimal reception. Fully extend and adjust the position of the antenna.
- Position the antenna as far as possible from TV.VCR or other radiation source.
- . [STEREO] is default setting for tuner mode.
- In tuner mode, you can press and hold DBB/DSC/SET TIME to toggle between [STEREO] and [MONO], and the unit memorizes your setting even if you turn off the unit or turn to other sources.
- Press **SOURCE** repeatedly to select FM mode.
- Press and hold TUNE+/TUNE- for more than 2 seconds.
  - → The radio tunes to next station with strong reception automatically.
- Repeat step 2 to tune to more stations.
  - To tune to a weak station, press TUNE+/TUNE- repeatedly until you find optimal reception.

# Program radio stations

Radio station preset allows you to save radio stations, and quickly tune to a favorite station.



- The preset list can store up to 20 stations.
- If the preset list is fully occupied, the screen will show
- If saving a radio station to a position that has already been occupied, the original radio station will be replaced.

### Program radio stations manually

- 1. Press **SOURCE** repeatedly to enter the FM mode.
- 2. Press TUNE+/TUNE- to tune to a radio station.
- 3. Press PROG/SCAN.
  - → A position number flashes.
- 4. Press **OK** to save current radio station to the selected position.



Press PRESET +/PRESET - to change the position to save a radio station.

# Program radio stations automatically

- Press **SOURCE** repeatedly to enter the FM mode.
- Press and hold **PROG/SCAN**.
  - → The screen displays [AUTO] (auto);
  - → The unit starts to scan for all available radio stations automatically, and stores them to the preset list.
- Wait until the auto scan finishes.
  - → The first station in the preset list broadcasts automatically.

### Select a preset radio station

Press I ✓ / I to select a preset number.

# 6 Other features

### Set the alarm timer

You can set two alarms at different times.



Note

- · Ensure that you have set the clock correctly.
- 1 Press and hold AL1 or AL2.
  - The hour digits begin to blink, and you can hear one beep.
  - → [AL SET] (alarm set) flashes on the screen.
- 2 Press TUNE+/TUNE- repeatedly to set the hour.
- 3 Press **OK** to confirm.
  - → The minute digits begin to blink.
  - → [AL SET] (alarm set) flashes on the screen.
- 4 Repeat steps 2-3 to set the minute, select when to ring alarm, and choose alarm sound source and alarm volume.

After alarm volume is set, the unit will exit alarm setting, and you can hear two beeps.



Гір

- If you select DOCK 1/DOCK 2 as alarm sound source, when there is no device docked, the alarm will automatically switch to buzzer to ring the alarm.
- If both alarms are set to the same time, only Alarm 1 will ring.

### View the alarm settings

Press AL1 or AL2 to view alarm settings.

# Activate and deactivate the alarm timer

When an alarm setting is shown on the screen, press AL1/AL2 repeatedly to activate or deactivate the timer.

- If the timer is activated, [♣ AL 1] or [♣ AL2] is displayed.
- If the timer is deactivated, [♣ AL1] or [♣ AL2] disappears.

#### Snooze

When the alarm rings, press SNOOZE.

- → The alarm stops, and the alarm icon flashes
- → The alarm will resume ringing 9 minutes later.



Note

 When using batteries to operate, alarms can only use buzzer as sound source.

### Stop alarm ring

When the alarm rings, press the corresponding AL1 or AL2.

→ The alarm stops but the alarm settings remain.



Гір

- You can also press O to stop the alarm. The unit will switch to the last selected source.
- If you press and hold O, the alarm will also be stopped, and the unit will switch to standby mode.
- · If you do not stop the alarm, it will ring for 30 minutes.
- When an alarm rings, it shall begin from a relative low volume, and rise gradually to the highest alarm volume in 90 seconds.

# Set the sleep timer

This unit can switch to standby automatically after a set period of time.

Press **SLEEP** repeatedly to select from 120, 90, 60, 45, 30 and 15 minutes.

When the sleep timer is activated, the display shows <sub>z</sub>z<sup>Z</sup>.

#### To deactivate sleep timer

- Press SLEEP repeatedly until [OFF] (off) is displayed.
  - → The sleep timer is deactivated, zz² disappears on the display.

### Adjust display brightness

When no alarm is firing, press **BRIGHTNESS** repeatedly to select different levels of display brightness.



#### Note

• When using batteries to operate, you can not select brightness levels.

# 7 Adjust sound

# Adjust volume level

During play, press **VOL** +/- to increase/decrease the volume level step by step.



#### Tip

 Press and hold VOL +/- to increase/decrease the volume at faster speed.

# Select a sound effect

During play, press **SETTIME** repeatedly to select from a preset sound effect and turn on/ off dynamic bass enhancement.



#### Note

- The unit supports the following sound effects: [POP] (pop), [JAZZ] (Jazz), [ROCK] (rock), [CLAS] (classic) and [FLAT] (flat).
- If DBB is activated, [DBB] is displayed.

# 8 Product information



Note

Product information is subject to change without prior notice.

# **Specifications**

Amplifier	
Total output power	8 W
Frequency Response	80 Hz -16 kHz, ±3dB
Signal to Noise Ratio	≥ 67dBA
Aux Input (Audio in)	0.6 V RMS 20kohm

FM	
Tuning Range	FM 87.5 - 108 MHz
Tuning grid	50 KHz
- Mono, 26dB quieting	
sensitivity	<22 dBf
- Stereo, 46dB quieting	
sensitivity	<51 dBf
Search Sensitivity	<41 dBf
Total Harmonic	<2%
Distortion	
Signal to Noise Ratio	>45 dB

Speakers	
Speaker Impedance	4 ohm
Speaker Driver	57 mm
Sensitivity	>84dB/m/W

General information		
AC power	220V~,50Hz	
Operation Power Con-	15 W	
sumption		
Standby Power Con-	<1 W	
sumption (clock display)		
Dimensions		
- Main Unit		
$(W \times H \times D)$	260 x 138 x 185 mm	
Weight (Main unit,	1.13 kg	
without packing)		
Weight (Main unit,		

# 9 Troubleshooting

# Caution

· Never remove the casing of this apparatus

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this apparatus, check the following points before requesting service. If the problem remains unsolved, go to the philips web site (www. philips.com/support). When you contact philips, ensure that your apparatus is nearby and the model number and serial number are available.

#### No power

- Ensure that the AC power plug of the unit is connected properly.
- Ensure that there is power at the AC outlet
- Ensure that the batteries are inserted correctly.

#### No sound

- Adjust the volume.
- Check if the unit is performing auto scan.
   Volume is muted during auto scan process.

#### No response from the unit

 Remove the batteries from the main unit (if inserted), disconnect and reconnect the AC power plug, and turn on the unit again.

#### Poor radio reception

- Increase the distance between the unit and yourTV orVCR.
- Fully extend the FM antenna.

#### Timer does not work

- Set the clock correctly.
- · Switch on the timer.

#### Clock/timer setting erased

- Power has been interrupted or the power plug has been disconnected.
- Reset the clock/timer.



Specifications are subject to change without notice 2014 © WOOX Innovations Limited. All rights reserved. Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

