

Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

DVP3111



---

EN User manual

---

# PHILIPS

# Contents

|                                  |    |
|----------------------------------|----|
| <b>1 Important</b>               | 4  |
| Safety and important notice      | 4  |
| Trademark notice                 | 5  |
| <b>2 Your DVD player</b>         | 6  |
| Feature highlights               | 6  |
| Product overview                 | 6  |
| <b>3 Connect</b>                 | 8  |
| Connect video cables             | 8  |
| Connect audio cables             | 9  |
| Route audio to other devices     | 9  |
| Connect power                    | 9  |
| <b>4 Get started</b>             | 10 |
| Prepare the remote control       | 10 |
| Find the correct viewing channel | 10 |
| Select menu display language     | 10 |
| Turn on progressive scan         | 10 |
| <b>5 Play</b>                    | 12 |
| Play a disc                      | 12 |
| Play video                       | 12 |
| Play music                       | 14 |
| Play photo                       | 15 |
| <b>6 Adjust settings</b>         | 17 |
| General setup                    | 17 |
| Audio setup                      | 17 |
| Video setup                      | 18 |
| Preferences                      | 19 |
| <b>7 Additional information</b>  | 21 |
| Care                             | 21 |
| Specifications                   | 21 |

|                          |    |
|--------------------------|----|
| <b>8 Troubleshooting</b> | 23 |
| <b>9 Glossary</b>        | 24 |

# 1 Important



## Safety and important notice



### Warning

- Risk of overheating! Never install the product in a confined space. Always leave a space of at least 4 inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.
- Never place the product, remote control or batteries near naked flames or other heat sources, including direct sunlight.
- Only use this product indoors. Keep this product away from water, moisture and liquid-filled objects.
- Never place this product on other electrical equipment.
- Keep away from this product during lightning storms.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Visible and invisible laser radiation when open. Avoid exposure to beam.



This product complies with the radio interference requirements of the European Community.

This product complies with the requirements of the following directives and guidelines: 2004/108/EC + 2006/95/EC

## Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

## Copyright notice



**Be responsible  
Respect copyrights**

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

---

## Trademark notice



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

 


'DVD Video' is a trademark of DVD Format/Logo Licensing Corporation.



"DivX, DivX" Certified, and associated logos are trademarks of DivX, Inc. and are used under license.

Play DivX® video with menus, subtitles and audio tracks.



## 2 Your DVD player

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### Feature highlights

#### Screen Fit

View the movie in full screen display on any TV.

#### Progressive scan video

Push the limits of standard resolution and provide a more film-like DVD video display on a TV screen.


### Region codes

You can play discs with the following region codes.

| DVD region code  | Countries |
|--|-----------|
|   | Russia    |

### Product overview

#### Main unit

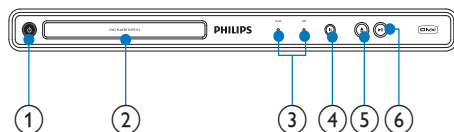

#### 1

- Turn on the unit or switch to standby.

#### 2 Disc compartment

#### 3 Indicators

#### 4 IR sensor

- Remote sensor.


#### 5

- Open or close the disc compartment.

#### 6

- Start, pause or resume disc play.

### Remote control

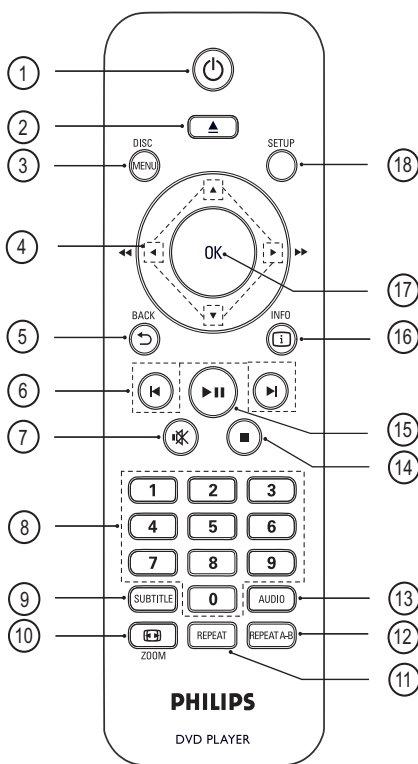

#### 1 (Standby-On)

- Turn on the DVD player or switches to standby mode.

- ② **▲ (Open/Close)**
  - Open or close the disc compartment.
- ③ **DISC MENU**
  - Access or exit the disc menu.
  - For VCD and SVCD, turn PBC (playback control) on or off in PBC mode.
- ④ **▲▼◀▶ (Navigation buttons)**
  - Navigate through the menus.
  - Search fast-forward (right) or fast-backward (left). Press repeatedly to change the search speed.
  - Search slow-forward (up) or slow-backward (down). Press repeatedly to change the search speed.
- ⑤ **↶ BACK**
  - Return to the previous menu.
  - For DVD, navigate to title menu.
  - For VCD version 2.0 or SVCD with PBC turned on, return to the menu.
- ⑥ **◀/▶ (Previous/Next)**
  - Skip to the previous or next title, chapter, or track.
  - Press and hold for fast-backward or fast-forward search.
- ⑦ **🔇 (Mute)**
  - Mute or restore audio output.
- ⑧ **Numeric buttons**
  - Select an item to play.
- ⑨ **SUBTITLE**
  - Select a subtitle language for video.
- ⑩ **🖼️ ZOOM**
  - Fit the picture format to the TV screen (using zoom factor 1.3X and 1.6X).
  - Zoom in or out of the picture.
- ⑪ **REPEAT**
  - Toggle between various repeat modes.
- ⑫ **REPEAT A-B**
  - Mark the section for repeat play, or turn off repeat mode.
- ⑬ **AUDIO**
  - Select an audio language or channel.
- ⑭ **■ (Stop)**
  - Stop disc play.
- ⑮ **▶|| (Play/Pause)**
  - Start, pause or resume disc play.
- ⑯ **ℹ️ INFO**
  - For discs, display information about the current status or the disc.
  - For slide shows, display a thumbnail view of photo files.
- ⑰ **OK**
  - Confirm an entry or selection.
- ⑱ **SETUP**
  - Access or exit the setup menu.

# 3 Connect

Make the following connections to use this product.

## Basic connections:

- Video
- Audio

## Optional connections:

- Route audio to other devices:
  - Digital amplifier/receiver
  - Analog stereo system

## Note

- Refer to the type plate at the back or bottom of the product for identification and supply ratings.
- Before you make or change any connections, ensure that all the devices are disconnected from the power outlet.

## Tip

- Different types of connectors may be used to connect this product to your TV, depending on availability and your needs. A comprehensive interactive guide to help you connect your product is available at [www.connectivityguide.philips.com](http://www.connectivityguide.philips.com).

## Connect video cables


Connect this product to TV to view disc play. Select the best video connection that TV can support.

- **Option 1:** Connect to component video jacks (for a standard TV or Progressive Scan TV).
- **Option 2:** Connect to video (CVBS) jack (for a standard TV).

## Note

- You must connect this product directly to a TV.

## Option 1: Connect to component video jacks

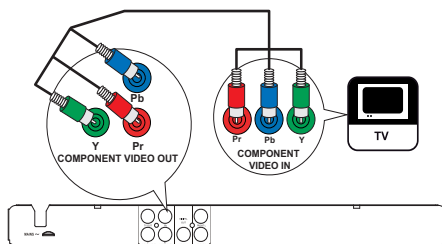


- 1 Connect the component video cables (not supplied) to:
  - the **Y Pb Pr** jacks on this product.
  - the **COMPONENT VIDEO** input jacks on the TV.

## Tip

- The component video input jacks on the TV may be labeled as Y Pb/Cb Pr/Cr or YUV.
- This type of connection provides good picture quality.

## Option 2: Connect to video (CVBS) jack

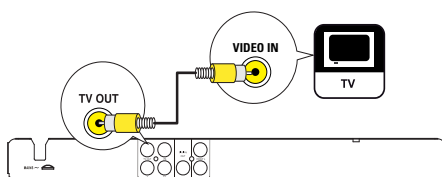


- 1 Connect a composite video cable to:
  - the **TV OUT** jack on this product.
  - the video input jack on the TV.

## Tip

- The video input jack on the TV may be labeled as A/V IN, VIDEO IN, COMPOSITE or BASEBAND.
- This type of connection provides standard picture quality.

## Connect audio cables

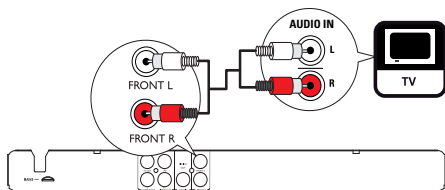


Connect the audio from this product to the TV to allow sound output through the TV.

- 1 Connect the audio cables to:
  - the **FRONT L/R** jacks on this product.
  - the audio input jacks on the TV.

## Route audio to other devices


Route the audio from this product to other devices to enhance audio play.

### Connect to digital amplifier/receiver

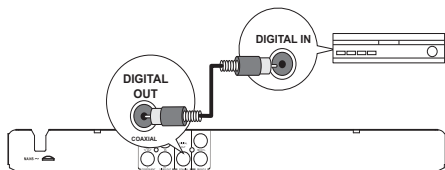

- 1 Connect a coaxial cable (not supplied) to:
  - the **COAXIAL** jack on this product.
  - the **COAXIAL/DIGITAL** input jack on the device.

## Connect analogue stereo system

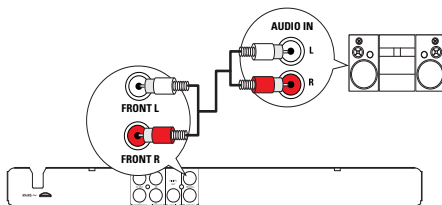

- 1 Connect the audio cables to:
  - the **FRONT L/R** jacks on this product.
  - the audio input jacks on the device.

## Connect power



### Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back of the unit.
- Before connecting the AC power cord, ensure you have completed all other connections.



### Note


- The type plate is located on the back of the product.

- 1 Connect the AC power cable to the wall socket.
  - ↳ The player is ready to be set up for use.



## 4 Get started

### Prepare the remote control

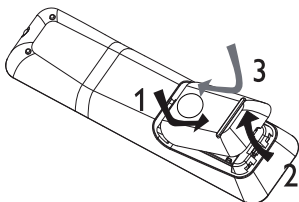

- 1 Open the battery compartment.
- 2 Insert two R03 or AAA batteries with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

#### ! Caution

- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Do not mix batteries (old and new or carbon and alkaline, etc.).
- Batteries contain chemical substances, so they should be disposed of properly.

### Find the correct viewing channel

- 1 Press **⏻** to turn on this product.
- 2 Turn on the TV and switch to the correct video-in channel. (Refer to the TV user manual on how to select the correct channel.)

### Select menu display language

- 1 Press **SETUP**.  
→ **[General Setup]** menu is displayed.
- 2 Select **[OSD language]**, then press **▶**.

| General Setup       |                               |
|---------------------|-------------------------------|
| Disc Lock           | <b>⊙ English</b>              |
| <b>OSD Language</b> | <input type="radio"/> 中文 (繁體) |
| Sleep Timer         | <input type="radio"/> ไทย     |
| Auto Standby        | <input type="radio"/> 한국어     |
| DivX(R) VOD Code    | <input type="radio"/> Melayu  |
|                     |                               |
|                     |                               |
|                     |                               |

- The language options may vary from different regions.

- 3 Press **▲▼** to select a language, then press **OK**.

### Turn on progressive scan

#### ≡ Note

- To use the progressive scan feature, you must connect a progressive scan TV with the component video jacks (see "Connect" > "Connect video cables" > "Option 1: Connect to the component video jacks" for details).

| Video Setup        |                           |
|--------------------|---------------------------|
| TV System          | <b>⊙ On</b>               |
| TV Display         | <input type="radio"/> Off |
| <b>Progressive</b> |                           |
| Picture Setting    |                           |
|                    |                           |
|                    |                           |
|                    |                           |

- 1 Turn on the TV to the correct viewing channel for this product.
- 2 Press **SETUP**.
- 3 Press **▼** to select **[Video Setup]**.
- 4 Select **[Progressive]** > **[On]**, then press **OK**.

↳ A warning message is displayed.

**5** To proceed, select **[Ok]** and press **OK**.

↳ The progressive setup is complete.



#### Note

- If a blank/distorted screen is displayed, wait for 15 seconds for the auto recovery.
- If no picture is displayed, turn off the progressive scan mode as follows:
  - 1) Press **▲** to open the disc compartment.
  - 2) Press the **Numeric button '1'**.

**6** Press **SETUP** to exit the menu.

**7** You can now turn on the progressive scan mode on the TV (see the TV user manual).



#### Note

- During play, when the progressive scan mode is on for both this product and the TV, distorted picture may display. In this case, turn off the progressive scan feature on both this product and the TV.

# 5 Play

## Play a disc

### ! Caution

- Do not place any objects other than discs into the disc compartment.
- Do not touch the disc optical lens inside the disc compartment.

- 1 Press **▲** to open the disc compartment.
- 2 Insert a disc with its label facing up.
- 3 Press **▲** to close the disc compartment and start disc play.
  - To view disc play, turn on the TV to the correct viewing channel for this product.
  - To stop disc play, press **■**.

### ≡ Note

- Check the types of discs supported (see "Specifications" > "Play media").
- If the password entry menu is displayed, enter the password before you can play the locked or restricted disc (see "Adjust settings" > "Preferences" > **[Parental Control]**).
- If you pause or stop a disc, the screen saver appears after 5 minutes of inactivity. To deactivate the screen saver, press **DISC MENU**.
- After you pause or stop a disc and no button is pressed within 15 minutes, this product automatically switches to standby.

## Play video

### ≡ Note

- Some operations may not work with some discs. See the information accompanying the disc for details.

## Control video play

- 1 Play a title.
- 2 Use the remote control to control the play.

| Button   | Action  |
|----------|---|
| ▶        | Start, pause or resume disc play.   |
| ■        | Stop disc play.   |
| ◀▶       | Skip to a previous/next title or chapter.   |
| ◀◀ ▶▶    | Search fast-backward or fast-forward. Press repeatedly to change the search speed.  |
| ▲, ▼     | Search slow-forward or slow-backward. Press repeatedly to change the search speed. For VCD/SVCD, slow-backward search is not available. |
| AUDIO    | Select an audio language or channel available on a disc.  |
| SUBTITLE | Select a subtitle language available on a disc.   |
| REPEAT   | Select or turn off repeat mode. Repeat options may vary from disc type.   |
| Ⓜ ZOOM   | Fit the picture format to the TV screen. Press repeatedly until the image is scaled to fit to the TV screen.                            |
| Ⓜ ZOOM   | Toggle between screen aspect ratio and different zoom factor. To pan through the zoomed image, press the <b>Navigation buttons</b> .    |
| ℹ INFO   | Access the play options and display the current disc status.  |

## Access DVD menu

- 1 Press **DISC MENU** to access the disc root menu.
- 2 Select a play option, then press **OK**.
  - In some menus, press the **Numeric buttons** to input your selection.

## Access VCD menu

The PBC (playback control) feature is available for VCD/SVCD, which can display the contents menu for you to select a play option. The PBC is on by default in the factory.



### Note

- See "Adjust settings" > **[Preferences]** > **[PBC]** on how to turn PBC on or off.

- 1 Display the contents menu via one of the following ways:
  - If PBC is on, load in a VCD/SVCD.
  - During play with PBC on, press **⏮** **BACK**.
- 2 Press the **Numeric buttons** to select a play option, then press **OK** to start play.
  - If PBC is turned off, it skips the menu display and starts play from the first track.

## Preview disc contents

- 1 During play, press **ⓘ** **INFO**.
  - ↳ The disc status menu is displayed.
- 2 Select **[Preview]**, then press **▶**.
- 3 Select a preview option, then press **OK**.
  - ↳ A thumbnails preview screen is displayed.
  - To go to the next/previous preview screen, select **[Prev]** or **[Next]**, then press **OK**.
  - To start play, press **OK** at the selected thumbnail picture.

## Skip play to a specific time

- 1 During play, press **ⓘ** **INFO**.
  - ↳ The disc status menu is displayed.
- 2 Select an option for the current elapsed playing time, then press **▶**.
  - **[TT Time]** (title time)
  - **[CH Time]** (chapter time)
  - **[Disc Time]** (disc time)

- **[Track Time]** (track time)

- 3 Press the **Numeric buttons** to enter the time to skip to, then press **OK**.

## Display play time

- 1 During play, press **ⓘ** **INFO**.
  - ↳ The disc status menu is displayed.
- 2 Select **[Time Disp.]**, then press **▶**.
  - ↳ The display options vary from disc type.
- 3 Select an option, then press **OK**.

## View DVD play from different angles

- 1 During play, press **ⓘ** **INFO**.
  - ↳ The disc status menu is displayed.
- 2 Select **[Angle]**, then press **▶**.
- 3 Press the **Numeric buttons** to change the angle.
  - ↳ Play changes to the selected angle.



### Note

- Applicable only to discs contain multi-angle scenes.

## Repeat play a specific section

- 1 During play, press **REPEAT A-B** at the start point.
- 2 Press **REPEAT A-B** again to set the end point.
  - ↳ Repeat play starts.
- 3 To cancel repeat play, press **REPEAT A-B** again.




### Note

- The marked section for repeat play is only possible within a track/title.

## Play DivX® video

DivX video is a digital media format that retains high quality despite a high rate of compression. You can enjoy DivX video on this DivX certified product.

- 1 Insert a disc that contains the DivX videos.  
↳ A contents menu is displayed.
- 2 Select a title to play, then press **OK**.
  - You may select subtitle/audio language.





 **Note**

- You can only play DivX videos that were rented or purchased with the DivX registration code of this player (see “Adjust Settings” - **[General Setup]** > **[DivX® VOD Code]**).

## Play music

### Control a track

- 1 Play a track.
- 2 Use the remote control to control the play.

| Button   | Action   |
|--|--|
|   | Start, pause or resume disc play.  |
|   | Stop disc play.  |
|  | Skip to a previous/next track.   |
| <div><div>123</div><div>456</div><div>789</div><div>0</div></div>                  | Select an item to play.  |
|  | Searches fast-backward or fast-forward. Press repeatedly to change the search speed. |

| Button        | Action   |
|---------------|--|
| <b>REPEAT</b> | Select or turn off repeat mode.<br>Repeat options may vary from disc type. |

### Quick skip play

- 1 During play, press **⏏** **INFO** repeatedly to select an option.

| Display               | Action  |
|-----------------------|---|
| <b>[Disc Go To]</b>   | Skip play to a specific time within the disc. |
| <b>[Track Go To]</b>  | Skip play to a specific time within a track.  |
| <b>[Select Track]</b> | Skip play to a specific track number.         |

- 2 Press the **numeric buttons** to change the time/number to skip to.

### Play MP3/WMA music

MP3/WMA is a type of highly compressed audio file (files with .mp3, .wma extensions).

- 1 Insert a disc that contains the MP3/WMA music.  
↳ A contents menu is displayed.
- 2 If play does not automatically start, select a track to play.
  - To select another track/folder, press **▲▼**, then press **OK**.



## Note

- For disc recorded in multiple sessions, only the first session is played.
- For a WMA file that is protected by Digital Rights Management (DRM), it cannot be played on this product.
- This product does not support MP3PRO audio format.
- For any special character that is present in the MP3 track name (ID3) or album name, it might not be displayed correctly on the screen because these characters are not supported.
- Folders/files that exceed the supported limit of this product cannot be displayed or played.



## Note

- It may require longer time to display the disc content on the TV due to the large number of songs/photos compiled onto one disc.
- If the JPEG photo is not recorded with an 'exif' type file, the actual thumbnail picture cannot be shown on the screen. It is replaced by a 'blue mountain' thumbnail picture.
- This player can only display digital camera pictures according to the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG, or pictures in formats other than JPEG, or sound clips associated with pictures.
- Folders/files that exceed the supported limit of this player cannot be displayed or played.

# Play photo

## Play photo as slideshow

You can play JPEG photos (files with .jpeg or .jpg extensions).

- 1 Insert a disc that contains the JPEG photos.
  - ↳ Slideshow begins (for Kodak disc), or a contents menu (for JPEG disc) is displayed.
- 2 Select a photo folder, then press **OK** to start slideshow.
  - To preview the photos in thumbnail, press **INFO**.
  - To select a photo, press the **Navigation buttons**.
  - To enlarge the selected photo and start slideshow, press **OK**.
  - To return to the menu, press **BACK**.

## Control photo play

- 1 Play a photo slideshow.
- 2 Use the remote control to control the play.

| Button      | Action   |
|-------------|--|
| ◀/▶         | Rotate a photo anti-clockwise/clockwise.             |
| ▲/▼         | Rotate a photo horizontally/vertically.              |
| <b>ZOOM</b> | Zoom in or out of a photo. Play pauses in zoom mode. |
| ■           | Stop a play.   |

## Play musical slideshow

Create a musical slideshow to play MP3/WMA music files and JPEG photo files simultaneously.



## Note

- To create a musical slideshow, the MP3/WMA and JPEG files must be stored on the same disc.

- 1 Play MP3/WMA music.
- 2 Press **BACK** to return to the main menu.

- 3 Navigate to the photo folder/album and press **OK** to start slideshow play.
- ↳ Slideshow begins and continues till the end of the photo folder or album.
  - ↳ Audio continues to play until the end of the disc.
  - To stop slideshow play, press **■**.
  - To stop music play, press **■** again.


## 6 Adjust settings



### Note

- If the setup option is grayed out, it means the setting cannot be changed at the current state.

### General setup

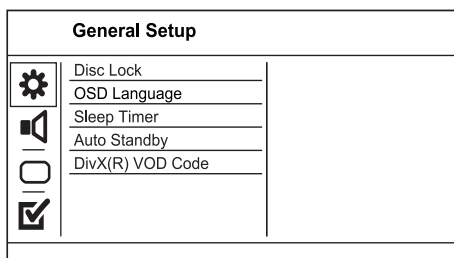

- 1 Press **SETUP**.  
→ **[General Setup]** menu is displayed.
- 2 Press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press **◀**.
  - To exit the menu, press **SETUP**.

#### [Disc Lock]

Set play restriction for a disc which is loaded in the disc compartment (maximum 20 discs can be locked).

- **[Lock]** - Restrict access to the current disc. The next time you want to play this disc or unlock it, you need to enter the password.
- **[Unlock]** - Play all discs.



### Tip

- You can set or change the password, go to **[Preferences]** > **[Password]**.

#### [OSD language]

Select an on-screen menu language.

#### [Sleep Timer]

Switch automatically to standby at the preset time.

- **[Off]** - Disable sleep mode.
- **[15 mins]**, **[30 mins]**, **[45 mins]**, **[60 mins]** - Select the count down time for this product to switch to standby.
- **[Auto standby]**  
Turn on or off automatically standby.
- **[On]** - Switch to standby 15 minutes of inactivity (for example, in pause or stop mode).
- **[Off]** - Disable the auto standby mode.

#### [DivX(R) VOD Code]


Display the DivX® registration code.



### Tip

- Use this player's DivX registration code when you rent or purchase video from [www.divx.com/vod](http://www.divx.com/vod). The DivX videos rented or purchased through the DivX® VOD (Video On Demand) service can be played only on the device to which it is registered.

### Audio setup

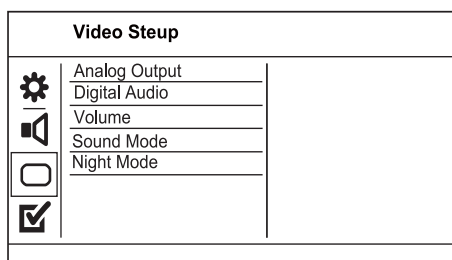

- 1 Press **SETUP**.  
→ **[General Setup]** menu is displayed.
- 2 Press **▼** to select **[Audio Setup]**, then press **▶**.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.



- To return to the previous menu, press ◀.
- To exit the menu, press **SETUP**.

### [Analogue Output]

Select an analogue setting based on the audio device that is connected through the analogue audio jack.

- **[Stereo]** - For stereo output.
- **[LT/RT]** - For surround sound output through two speakers.

### [Digital Audio]

Select a digital setting based on the digital amplifier/receiver that is connected through the digital jack (coaxial/digital).

- **[Digital Output]** - Select a type of digital output.
  - **[Off]** - Disable digital output.
  - **[All]** - Support multi-channel audio formats.
  - **[PCM Only]** - Downmix to two-channel audio format.
- **[LPCM Output]** - Select the LPCM (Linear Pulse Code Modulation) output sampling rate.
  - **[48kHz]** - For discs recorded at sampling rate of 48 kHz.
  - **[96kHz]** - For discs recorded at sampling rate of 96 kHz.

#### Note

- **[LPCM Output]** setting is only available if the **[Digital Output]** is set to **[PCM Only]**.
- The higher the sampling rate, the better the sound quality.

### [Volume]

Set the default volume level when you play a disc.

1. Press **OK**.
2. Press ◀▶ to set the volume.
3. Press **OK** to confirm and exit.

### [Sound Mode]

Select a preset sound effect to enhance the audio output.

- **[3D]** - Select a virtual surround sound effect that is produced from the left and right audio channels.
- **[Movie Mode]** - Select a sound effect for movies.
- **[Music Mode]** - Select a sound effect for music.

### [Night Mode]





Make loud sound level softer and soft sound level louder so that you can watch the DVD movies at a low volume, without disturbing others.

- **[On]** - Enjoy quiet viewing at night.
- **[Off]** - Enjoy surround sound with a full dynamic range.

#### Note

- Applicable only to Dolby Digital encoded DVD.

## Video setup

| Video Setup  |                 |
|--|-----------------|
|   | TV System       |
|   | TV Display      |
|   | Progressive     |
|  | Picture Setting |

- 1 Press **SETUP**.  
↳ **[General Setup]** menu is displayed.
- 2 Press ▼ to select **[Video Setup]**, then press ▶.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press ◀.
  - To exit the menu, press **SETUP**.

## [TV System]

Change this setting if the video does not appear correctly. By default, this setting matches the most common setting for TVs in your country.

- **[PAL]** - For PAL-system TV.
- **[Multi]** - For TV that is compatible with both PAL and NTSC.
- **[NTSC]** - For NTSC-system TV.

## [TV Display]

Select a display format:



- **[4:3 Pan Scan]** - For 4:3 screen TV: full-height display with the trimmed sides.
- **[4:3 Letter Box]** - For 4:3 screen TV: wide-screen display with black bars on the top and bottom of the screen.
- **[16:9]** - For wide-screen TV: display ratio 16:9.

## [Progressive]

If a progressive scan TV is connected to this product, turn on the progressive scan mode.

- **[On]** - Turn on progressive scan.
- **[Off]** - Turn off progressive scan mode.

## Note

- For more detailed description, see "Get started" > "Turn on progressive scan".

## [Picture Setting]

Select a predefined set of picture color settings or customize the personal setting.

- **[Standard]** - Original color setting.
- **[Bright]** - Vibrant color setting.
- **[Soft]** - Warm color setting.
- **[Personal]** - Customize the color setting. Set the level of brightness, contrast, tint and color saturation, then press **OK**.

# Preferences

## Note

- Stop disc play before you can access to **[Preferences]**.

| Preferences |                  |
|-------------|------------------|
|             | Audio            |
|             | Subtitle         |
|             | Disc Menu        |
|             | Parental Control |
|             | PBC              |
|             | Mp3 / Jpeg Nav   |
|             | Password         |
|             | DivX Subtitle    |

- 1 Press **SETUP**.  
↳ **[General Setup]** menu is displayed.
- 2 Press ▼ to select **[Preferences]**, then press ►.
- 3 Select an option, then press **OK**.
- 4 Select a setting, then press **OK**.
  - To return to the previous menu, press ◀.
  - To exit the menu, press **SETUP**.

## [Audio]

Select an audio language for disc play.

## [Subtitle]

Select a subtitle language for disc play.

## [Disc Menu]

Select a disc menu language.

## Note

- If the language you have set is not available on the disc, the disc uses its own default language.
- For some DVDs, the subtitle/audio language can only change from the disc menu.
- To select the languages that are not listed in the menu, select **[Others]**. Then check the Language Code list at the back of this user manual and enter the respective language code.

### [Parental control]

Restrict access to discs that are unsuitable for children. These types of discs must be recorded with ratings.

1. Press **OK**.
2. Select a rating level, then press **OK**.
3. Press the **numeric buttons** to enter the password.



#### Note

- Rated DVDs above the level you set in **[Parental control]** require a password to be played.
- The ratings are country-dependent. To allow all discs to play, select '8'.
- Some discs have ratings printed on them but are not recorded with ratings. This function has no effect on such discs.

### [PBC]

Turn on or off the content menu of VCDs/SVCDs with PBC (playback control) feature.

- **[On]** - Display the index menu when you load a disc for play.
- **[Off]** - Skip the menu and start play from the first title.

### [MP3/JPEG Nav]

Select to display the folders or display all the files.

- **[View Files]** - Display all the files.
- **[View Folders]** - Display the folders of MP3/WMA files.

### [Password]

Set or change the password for locked discs and play restricted DVDs.

1. Press the **Numeric buttons** to enter '136900' or the last set password at **[Old Password]** field.
2. Enter the new password at **[New Password]** field.
3. Enter the new password again at **[Confirm PWD]** field.
4. Press **OK** to exit the menu.



#### Note

- If you forget the password, enter '136900' before you set a new password.

### [DivX Subtitle]

Select a character set that supports the DivX subtitle.

- **[Standard]** – English, Irish, Danish, Estonian, Finnish, French, German, Italian, Portuguese, Luxembourgish, Norwegian (Bokmål and Nynorsk), Spanish, Swedish, Turkish
- **[Central Europe]** – Polish, Czech, Slovak, Albanian, Hungarian, Slovene, Croatian, Serbian (Latin script), Romanian
- **[Cyrillic]** – Belarusian, Bulgarian, Ukrainian, Macedonian, Russian, Serbian



#### Note

- Ensure that the subtitle file has the exact same file name as the movie file. If for example the file name of the movie is 'Movie.avi', then you need to name the text file 'Movie.sub' or 'Movie.srt'.

### [Version Info]

Display the software version of this product.



#### Tip

- This information is required when you want to find out if a newest software version is available at the Philips website that you may download and install on this product.

### [Default]

Reset all the settings of this product to factory default, except for **[Disc Lock]**, **[Parental control]** and **[Password]** settings.

# 7 Additional information

## Care

### ! Caution

- Never use solvents such as benzene, thinner, cleaners available commercially, or anti-static sprays intended for discs.

### Clean discs

Wipe the disc with a micro fibre cleaning cloth from the centre to the edge in a straight line movement.

## Specifications

### ≡ Note

- Specification and design are subject to change without notice

### Accessories supplied

- Remote control and batteries
- Audio/Video cables
- User Manual

### Play media

- DVD-Video, Video CD/SVCD, Audio CD, CD-R/CD-RW, DVD+R/+RW, DVD-R/-RW, DivX-CD, Picture CD, MP3-CD, WMA-CD

### TV standard

- Number of lines:
  - 625 (PAL/50Hz); 525 (NTSC/60Hz)
  - Play: Multi-standard (PAL/NTSC)

### Video performance

- Video DAC: 12 bits, 108 MHz
- Y Pb Pr: 0.7 Vpp ~ 75 ohm
- Video output: 1 Vpp ~ 75 ohm

### Video format

- Digital compression:
  - DVD/SVCD/VCD/DivX
- Horizontal resolution:
  - DVD: 720 pixels (50 Hz); 720 pixels (60 Hz)
  - VCD: 352 pixels (50 Hz); 352 pixels (60 Hz)
- Vertical resolution:
  - DVD: 576 pixels (50 Hz); 480 pixels (60 Hz)
  - VCD: 288 lines (50 Hz); 240 lines (60 Hz)

### Audio performance

- DA converter: 24 bits, 192 kHz
- Frequency response:
  - DVD: 4 Hz - 22 kHz (48 kHz); 4 Hz - 44 kHz (96 kHz)
  - SVCD: 4 Hz - 20 kHz (44.1 kHz); 4 Hz - 22 kHz (48 kHz)
  - CD/VCD: 4 Hz - 20 kHz (44.1 kHz)
- Signal-Noise (1 kHz): > 90 dB (A-weighted)
- Dynamic range (1 kHz): > 80 dB (A-weighted)
- Crosstalk (1 kHz): > 90 dB
- Distortion/noise (1 kHz): > 65 dB
- MP3: MPEG L3

### Audio format

- Digital:
  - MPEG/AC-3: Compressed digital (16, 20, 24 bits, fs 44.1, 48, 96 kHz)
  - MP3: 96, 112, 128, 256 kbps & variable bit rate, fs 32, 44.1, 48 kHz
- Analog sound stereo
- Dolby surround compatible downmix from Dolby Digital multi-channel sound

### Connections

- Y Pb Pr output: Cinch 3x
- Video output: Cinch (yellow)
- Audio output (L+R): Cinch (white/red)
- Digital output:
  - 1 coaxial: IEC60958 for CDDA/LPCM; IEC61937 for MPEG 1/2, Dolby Digital

**Main unit**

- Dimensions (w x h x d): 360 x 38 x 203 (mm)
- Net Weight: approximately 1.3 kg

**Power**

- Power supply rating: 230V, 50HZ
- Power consumption: <10 W
- Power consumption in standby mode: <1 W

**Laser specification**

- Type: Semiconductor laser InGaAlP (DVD), AlGaAs (CD)
- Wave length: 658 nm (DVD), 790 nm (CD)
- Output Power: 7.0 mW (DVD), 10.0 mW (VCD/CD)
- Beam divergence: 60 degrees

# 8 Troubleshooting



## Warning

- Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, register your product and get support at [www.philips.com/welcome](http://www.philips.com/welcome).

If you contact Philips, you will be asked for the model and serial number of your product. The model number and serial number are on the back of your product. Write the numbers here:

Model No. \_\_\_\_\_

Serial No. \_\_\_\_\_

## Main unit

### The buttons on this unit do not work.

- Disconnect this product from the power outlet for a few minutes, then connect again.

### No reaction to the remote control.

- Connect this product to the power outlet.
- Point the remote control at the IR sensor located on the front panel of this product.
- Insert the batteries correctly.
- Insert new batteries in the remote control.

## Picture

### No picture.

- See the TV's user manual on how to select the correct input on the TV. Change the TV channel until you see the Philips screen.

If you have turned on the progressive scan setting or change the TV system setting, switch back to default mode: 1) Press **▲** to open the disc compartment. 2) Press the **Numeric button '1'** (for progressive scan) or the **Numeric button '3'** (for TV system).

## Sound

### No audio output from the TV.

- Ensure that the audio cables are connected to the audio input of the TV.
- Assign the audio input of the TV to the corresponding video input. See the TV user manual for details.

### No audio output from the loudspeakers of the audio device (stereo system/amplifier/receiver).

- Ensure that the audio cables are connected to the audio input of the audio device.
- Turn on the audio device to its correct audio input source.

### No sound during DivX video playback

- The audio codec may not be supported by this product.

## Play

### DivX video files cannot be played.

- Ensure that the DivX video file is complete.
- Ensure that the file name extension is correct.

### The aspect ratio of the screen is not aligned with the TV display setting.

- The aspect ratio is fixed on the disc.

### DivX subtitles are not displayed correctly.

- Ensure that the subtitle file name is the same as the movie file name.
- Select the correct character set.
  - Press **SETUP**.
  - Select **[Preferences] > [DivX Subtitle]** in the menu.
  - Select the character set that supports the subtitle.

# 9 Glossary

---

## A

### Aspect ratio

Aspect ratio refers to the length to height ratio of TV screens. The ratio of a standard TV is 4:3, while the ratio of a high-definition or wide TV is 16:9. The letter box allows you to enjoy a picture with a wider perspective on a standard 4:3 screen.

---

## D

### DivX Video-On-Demand

This DivX Certified ® device must be registered in order to play DivX Video-on-Demand (VOD) content. To generate the registration code, locate the DivX VOD section in your device setup menu. Go to [vod.divx.com](http://vod.divx.com) with this code to complete the registration process and learn more about DivX video.

---

## J

### JPEG

A very common digital still picture format. A still-picture data compression system proposed by the Joint Photographic Expert Group, which features small decrease in image quality in spite of its high compression ratio. Files are recognized by their file extension 'jpg' or 'jpeg.'

---

## M

### MP3

A file format with a sound data compression system. MP3 is the abbreviation of Motion Picture Experts Group 1 (or MPEG-1) Audio Layer 3. With the MP3 format, one CD-R or CD-RW can contain about 10 times more data than a regular CD.

---

## P

### PBC

Playback Control. A system where you navigate through a Video CD/Super VCD with on-screen menus that are recorded onto the disc. You can enjoy interactive playback and search.

### Progressive scan

The progressive scan displays twice the number of frames per second than in an ordinary TV system. It offers higher picture resolution and quality.

---

## W

### WMA

Windows Media™ Audio. Refers to an audio compression technology developed by Microsoft Corporation. WMA data can be encoded with Windows Media player version 9 or Windows Media player for Windows XP. Files are recognized by their file extension 'wma.'


# Language Code

|                             |      |
|-----------------------------|------|
| Abkhazian                   | 6566 |
| Afar                        | 6565 |
| Afrikaans                   | 6570 |
| Amharic                     | 6577 |
| Arabic                      | 6582 |
| Armenian                    | 7289 |
| Assamese                    | 6583 |
| Avestan                     | 6569 |
| Aymara                      | 6589 |
| Azerhajjani                 | 6590 |
| Bahasa Melayu               | 7783 |
| Bashkir                     | 6665 |
| Belarusian                  | 6669 |
| Bengali                     | 6678 |
| Bihari                      | 6672 |
| Bislama                     | 6673 |
| Bokmål, Norwegian           | 7866 |
| Bosanski                    | 6683 |
| Brezhoneg                   | 6682 |
| Bulgarian                   | 6671 |
| Burmese                     | 7789 |
| Castellano, Español         | 6983 |
| Catalán                     | 6765 |
| Chamorro                    | 6772 |
| Chechen                     | 6769 |
| Chewa; Chichewa; Nyanja     | 7889 |
| 中文                          | 9072 |
| Chuang; Zhuang              | 9065 |
| Church Slavic; Slavonic     | 6785 |
| Chuvash                     | 6786 |
| Corsican                    | 6779 |
| Česky                       | 6783 |
| Dansk                       | 6865 |
| Deutsch                     | 6869 |
| Dzongkha                    | 6890 |
| English                     | 6978 |
| Esperanto                   | 6979 |
| Estonian                    | 6984 |
| Euskara                     | 6985 |
| Ελληνικά                    | 6976 |
| Faroeese                    | 7079 |
| Français                    | 7082 |
| Frysk                       | 7089 |
| Fijian                      | 7074 |
| Gaelic; Scottish Gaelic     | 7168 |
| Gallegan                    | 7176 |
| Georgian                    | 7565 |
| Gikuyu; Kikuyu              | 7573 |
| Guarani                     | 7178 |
| Gujarati                    | 7185 |
| Hausa                       | 7265 |
| Herero                      | 7290 |
| Hindi                       | 7273 |
| Hiri Motu                   | 7279 |
| Hrvatski                    | 6779 |
| Ido                         | 7379 |
| Interlingua (International) | 7365 |
| Interlingue                 | 7365 |
| Inuktitut                   | 7385 |

|                             |      |
|-----------------------------|------|
| Inupiaq                     | 7375 |
| Irish                       | 7165 |
| Íslenska                    | 7383 |
| Italiano                    | 7384 |
| Ivrit                       | 7269 |
| Japanese                    | 7465 |
| Javanese                    | 7486 |
| Kalaallisut                 | 7576 |
| Kannada                     | 7578 |
| Kashmiri                    | 7583 |
| Kazakh                      | 7575 |
| Kernewek                    | 7587 |
| Khmer                       | 7577 |
| Kinyarwanda                 | 8287 |
| Kirghiz                     | 7589 |
| Komi                        | 7586 |
| Korean                      | 7579 |
| Kuanyama; Kwanyama          | 7574 |
| Kurdish                     | 7585 |
| Lao                         | 7679 |
| Latina                      | 7665 |
| Latvian                     | 7686 |
| Letzeburgesch;              | 7666 |
| Limburgan; Limburger        | 7673 |
| Lingala                     | 7678 |
| Lithuanian                  | 7684 |
| Luxembourgish;              | 7666 |
| Macedonian                  | 7775 |
| Malagasy                    | 7771 |
| Magyar                      | 7285 |
| Malayalam                   | 7776 |
| Maltese                     | 7784 |
| Manx                        | 7186 |
| Maori                       | 7773 |
| Marathi                     | 7782 |
| Marshallese                 | 7772 |
| Moldavian                   | 7779 |
| Mongolian                   | 7778 |
| Nauru                       | 7865 |
| Navaho; Navajo              | 7886 |
| Ndebele, North              | 7868 |
| Ndebele, South              | 7882 |
| Ndonga                      | 7871 |
| Nederlands                  | 7876 |
| Nepali                      | 7869 |
| Norsk                       | 7879 |
| Northern Sami               | 8369 |
| North Ndebele               | 7868 |
| Norwegian Nynorsk;          | 7878 |
| Occitan; Provençal          | 7967 |
| Old Bulgarian; Old Slavonic | 6785 |
| Oriya                       | 7982 |
| Oromo                       | 7977 |
| Ossetian; Ossetic           | 7983 |
| Pali                        | 8073 |
| Panjabi                     | 8065 |
| Persian                     | 7065 |
| Polski                      | 8076 |
| Português                   | 8084 |

|                       |      |
|-----------------------|------|
| Pushto                | 8083 |
| Russian               | 8285 |
| Quechua               | 8185 |
| Raeto-Romance         | 8277 |
| Romanian              | 8279 |
| Rundi                 | 8278 |
| Samoan                | 8377 |
| Sango                 | 8371 |
| Sanskrit              | 8365 |
| Sardinian             | 8367 |
| Serbian               | 8382 |
| Shona                 | 8378 |
| Shqip                 | 8381 |
| Sindhi                | 8368 |
| Sinhalese             | 8373 |
| Slovensky             | 8373 |
| Slovenian             | 8376 |
| Somali                | 8379 |
| Sotho; Southern       | 8384 |
| South Ndebele         | 7882 |
| Sundanese             | 8385 |
| Suomi                 | 7073 |
| Swahili               | 8387 |
| Swati                 | 8383 |
| Svenska               | 8386 |
| Tagalog               | 8476 |
| Tahitian              | 8489 |
| Tajik                 | 8471 |
| Tamil                 | 8465 |
| Tatar                 | 8484 |
| Telugu                | 8469 |
| Thai                  | 8472 |
| Tibetan               | 6679 |
| Tigrinya              | 8473 |
| Tonga (Tonga Islands) | 8479 |
| Tsonga                | 8483 |
| Tswana                | 8478 |
| Türkçe                | 8482 |
| Turkmen               | 8475 |
| Twi                   | 8487 |
| Uighur                | 8571 |
| Ukrainian             | 8575 |
| Urdu                  | 8582 |
| Uzbek                 | 8590 |
| Vietnamese            | 8673 |
| Volapuk               | 8679 |
| Walloon               | 8765 |
| Welsh                 | 6789 |
| Wolof                 | 8779 |
| Xhosa                 | 8872 |
| Yiddish               | 8973 |
| Yoruba                | 8979 |
| Zulu                  | 9085 |



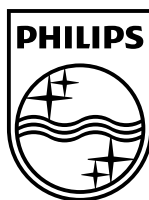

© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

Document order number: DVP3111\_51\_UM\_V1.0

