

Quick Start Guide



Step A *Connect*

Step B *Setup*


Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.




FM antenna

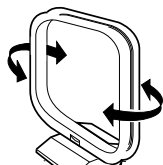

MW antenna



Remote Control

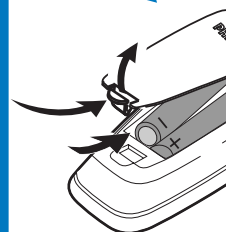

Quick Start Guide



User manual

PHILIPS

Step A *Connect*

1

Connect the speaker cables.

2


Connect the MW and FM antennas.

3

Connect the power cable of the system.

Tip


See the User Manual for how to connect other equipment to this system.

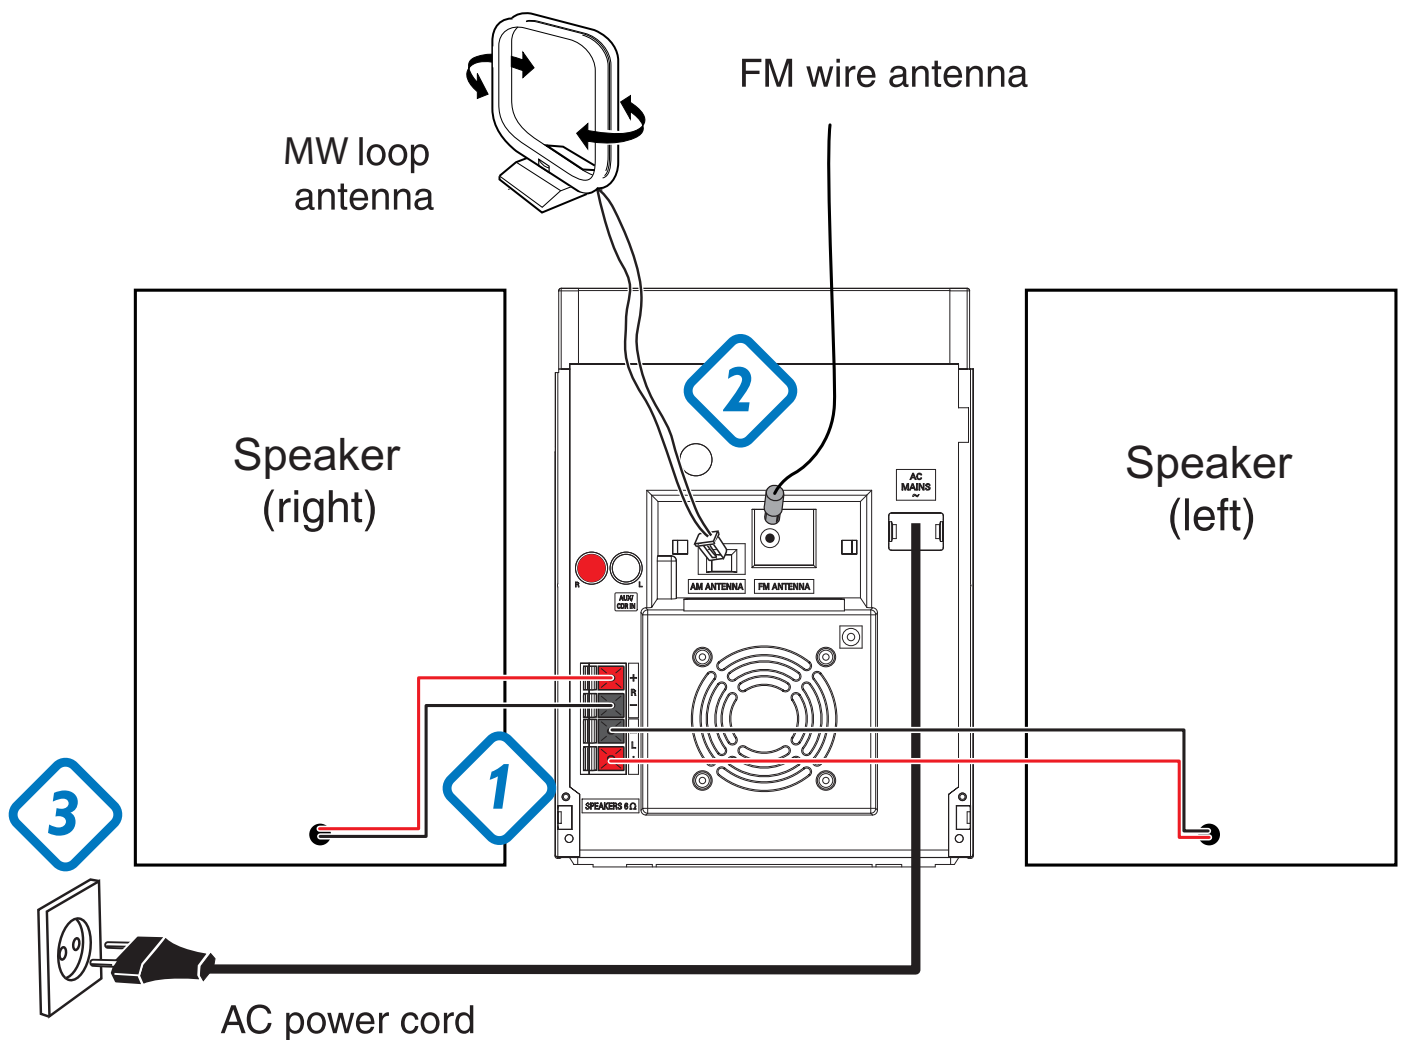

Step B Setup

Setting the clock

IMPORTANT!

– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

1

In standby mode, press and hold **CLOCK SET** on the system.

2


When the hour digits flash, turn the **VOLUME** control on the front panel to set the hours.

3

Press **CLOCK SET** again and the minute digits flash. Then turn the **VOLUME** control on the front panel to set the minutes.

4


Press **CLOCK SET** again to confirm the time setting.

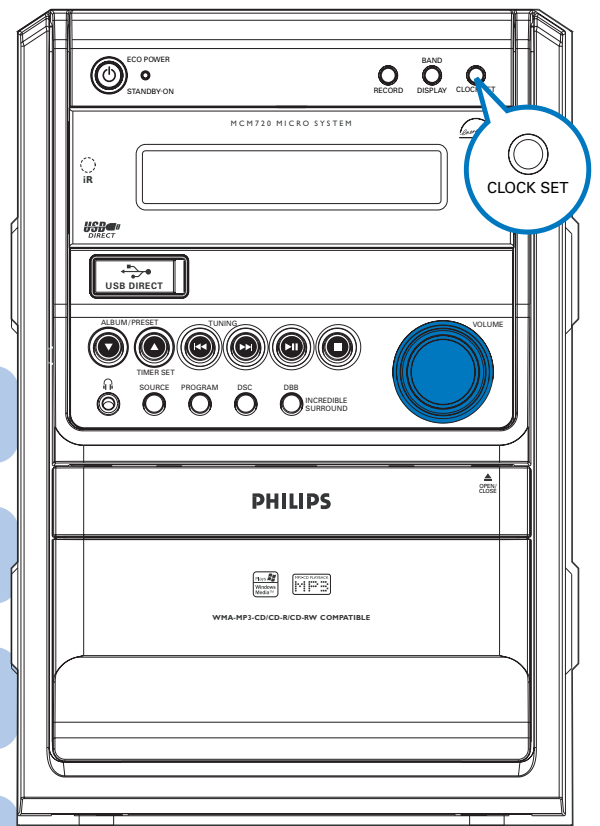

Step C Enjoy

Playing a disc

1


Press **OPEN•CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.


→ Make sure the label side of the disc is facing up.

2

Press **▶||** to start playback.


3

To stop playback, press **STOP** .

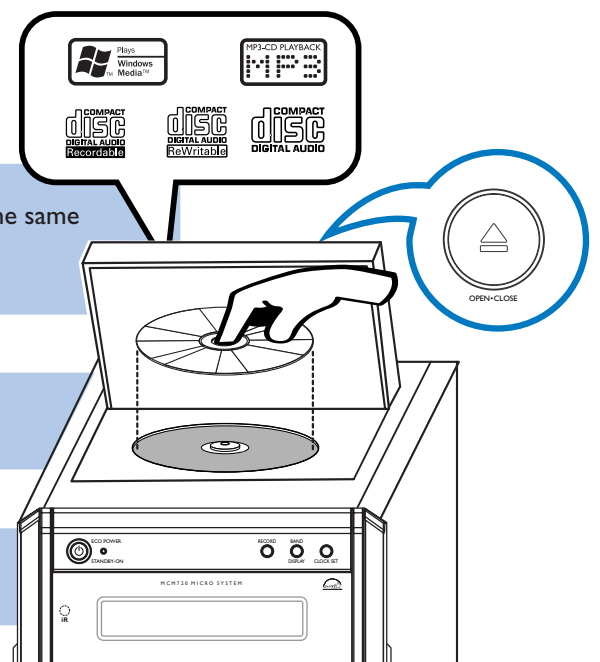


Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more to select **USB** (or **CD/USB** on the remote control).
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

Programming and tuning to radio stations

- 1 Press **SOURCE** repeatedly to select the tuner source.
- 2 Press **PROGRAM** for more than two seconds to program all available stations in order of waveband.
- 3 Press **▼** or **▲** until the desired preset station is displayed.

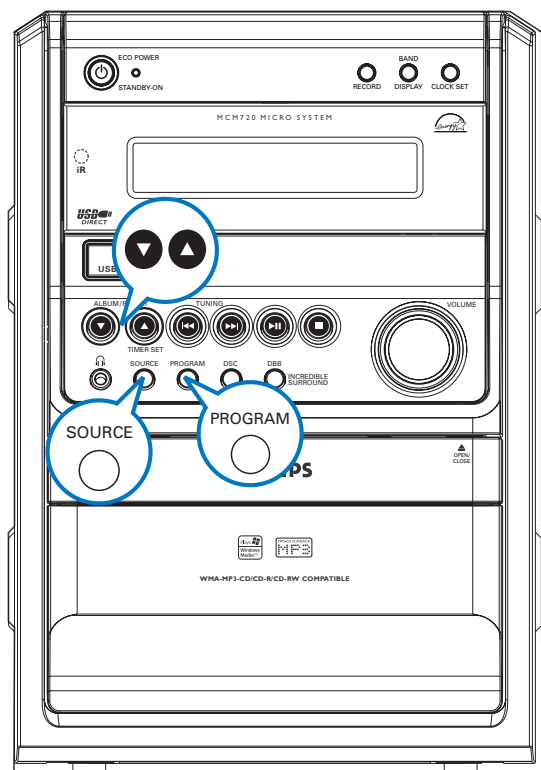

Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

