

# Quick Start Guide






Step A **Connect**

Step B **Setup**




Step C **Enjoy**

## What's in the Box?

You should find these items upon opening the box.

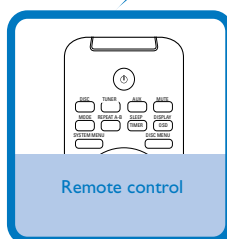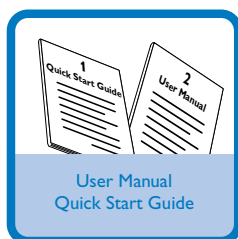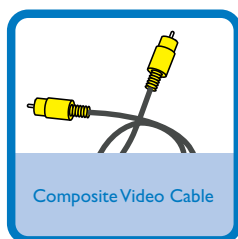

Pull out the plastic protective sheet before use.

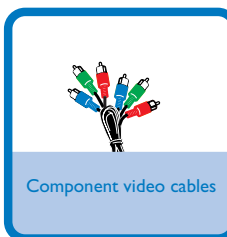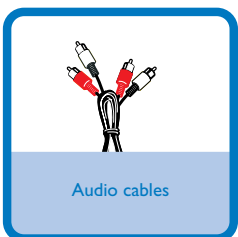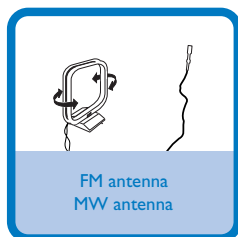

## Step A *Connect*

### Tips

– See the User Manual for other TV connection options.

1

Connect the speaker cables.

2


Connect the MW and FM antennas.

3

Connect the component video cables (red/blue/green) and audio cables (white/red) a TV.

4

Connect the power cords of the system and TV.

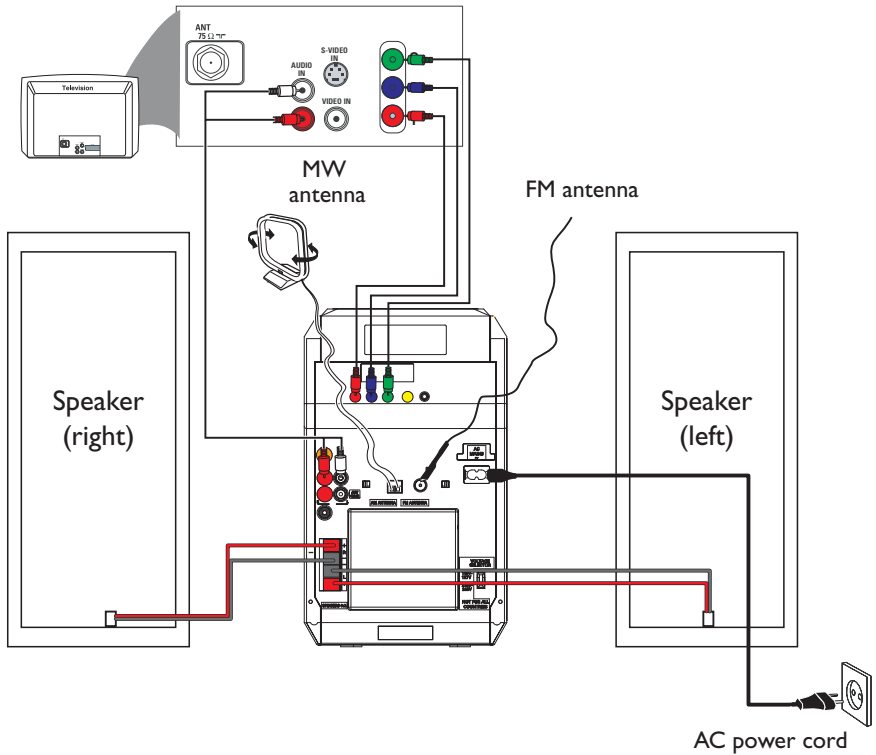

## Step B *Setup*


### Setting up the TV

1

Press **SOURCE** (**DISC** on the remote) to select disc source.

2


Turn on the TV and set it to the correct Video In channel.

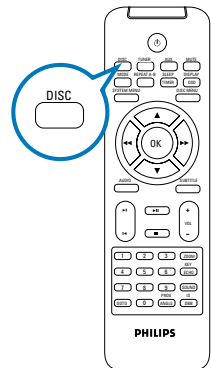






# Step B Setup

## Setting the clock

- 1 In standby mode, press and hold **CLOCK SET** on the system.
- 2 When the hour digits flash, press **SEARCH** **◀▶▶▶** ( **◀▶▶** on the remote) to set the hours.
- 3 Press **CLOCK SET** again and the minute digits flash. Then press **SEARCH** **◀▶▶▶** ( **◀▶** on the remote) to set the minutes.
- 4 Press **CLOCK SET** again to confirm the time setting.

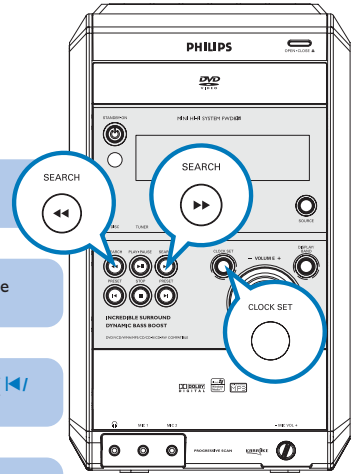

## Setting system menu options

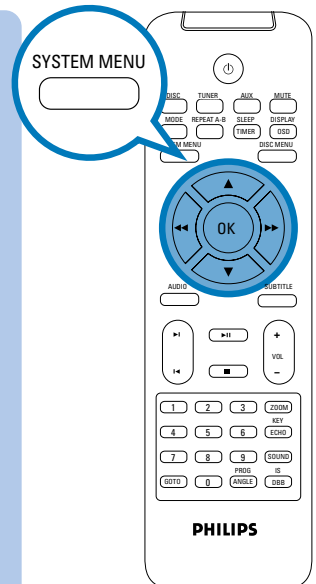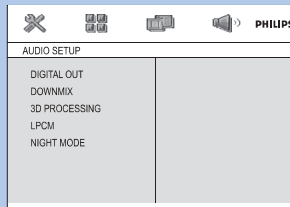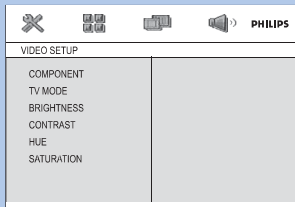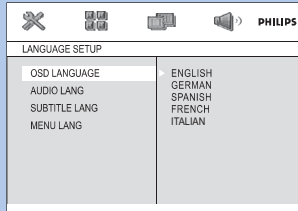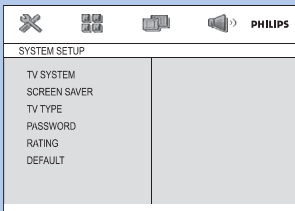


### Tip


See chapters "Preparations" and "System Menu Options" in the User Manual for detailed descriptions.


## Step C *Enjoy*



### Playing a disc

1 Press **OPEN-CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.

→ Make sure the label side of the disc is facing up.

2 Playback will start automatically. If not press **PLAY/PAUSE**  II.

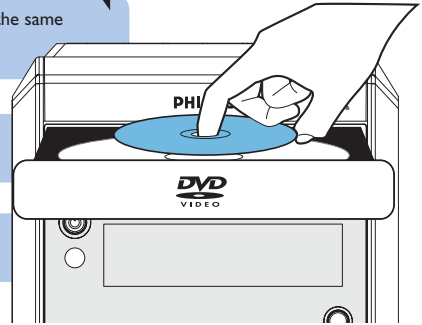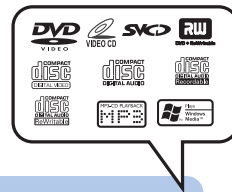

3 To stop playback, press **STOP** .



### Programming and tuning to radio stations

1 Press **SOURCE** (**TUNER** on the remote) to select tuner source.

2 Press **PROGRAM** for more than three seconds to program all available stations in order of waveband.

3 Press **PRESET**   until the desired preset station is displayed.

#### Tip

*Detailed playback features and additional functions are described in the accompany owner's manual.*

