

# Quick Start Guide




Step A **Install**

Step B **Prepare**

Step C **Enjoy**

## What's in the Box?


You should find these items upon opening the box.

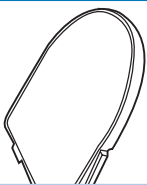


Stand




FM wire antenna

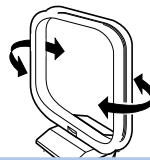


MW antenna

 

Remote control with  
1 x CR2025 battery

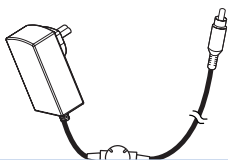

Power adaptor

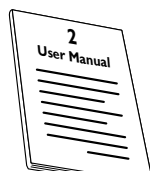

User manual




Quick start guide

## Step A *Install*


### Mounting the stand onto the set

1

Locate the bottom of the main unit and find the slot, then slide the stand in the slot until it stops, as indicated in the figure.

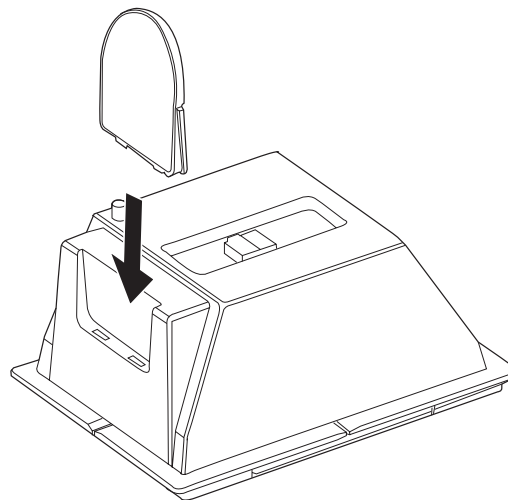

### Rear connections

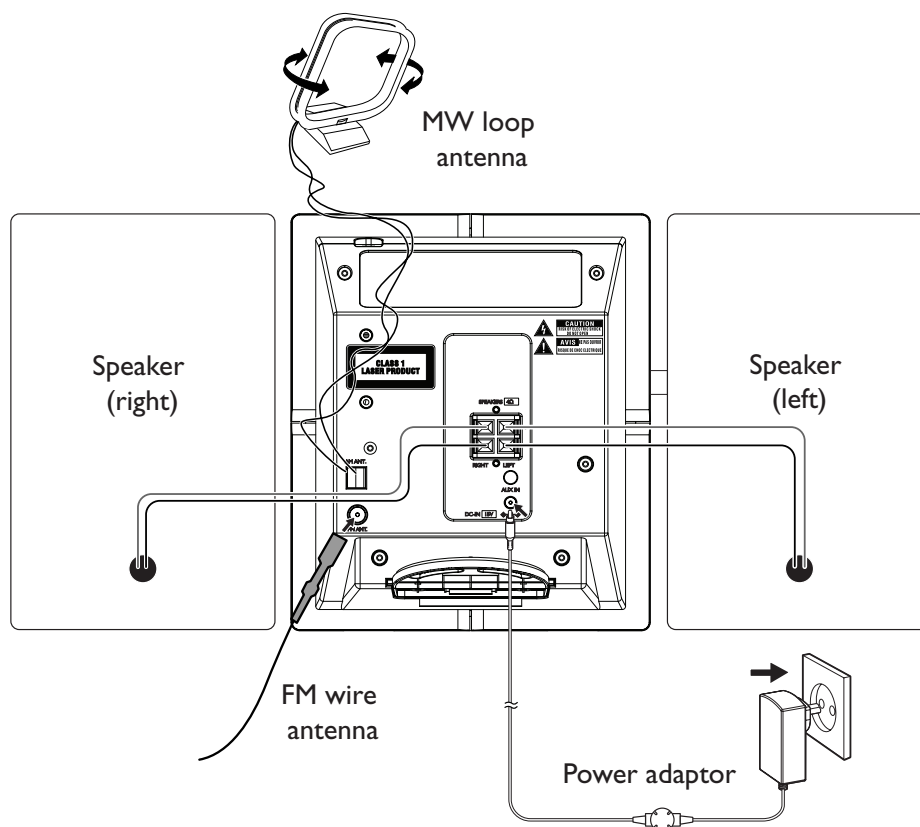

1

Connect the cable of the left speaker to **LEFT** (red and black) and the cable of the right speaker to **RIGHT** (red and black).

2

Extend the wire antenna and fit it to **FM ANTENNA**.

3

Insert the MW antenna to **MW ANTENNA** jacks.

4


Connect the AC power cord to the wall socket.

#### Tip

– To receive optimal radio reception, put the main unit and the antennas as far away as possible from the power adaptor.


## Step B Setup

### Setting the clock

- 1 Press and hold **STANDBY-ON/ ECO POWER**  to switch the set to Standby mode.  
→ The display shows the set time.  
→ -- --:-- -- flashes by default if you have not set the clock.

#### IMPORTANT!

– Remove the protective plastic tab before using the remote control

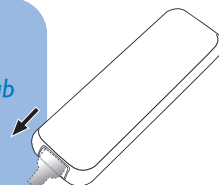

- 2 In the standby mode, press and hold **CLOCK** on the remote control.  
→ 24 HR or 12 HR appears for the initial clock setting. **To select 12-hour clock or 24-hour clock,**
  1. Press **VOLUME +/-** once or more.
  2. Press **CLOCK** to confirm.  
→ The hours digits start flashing.

#### Notes for remote control:

– First, select the source you wish to control by pressing one of the source select keys on the remote control (CD or TUNER, for example).  
– Then select the desired function (▶||, ||◀, ▶▶| for example).

- 3 Hold down or press **VOLUME +/-** repeatedly to set the hours.

- 4 Press **CLOCK** to confirm.

- 5 Hold down or press **VOLUME +/-** repeatedly to set the minutes.

- 6 Press **CLOCK** to confirm.

#### Helpful hints:

- To set the clock automatically by using a time signal which is broadcast together with the RDS signal, see the **User Manual, RDS: Setting the RDS clock.**

## Playing discs

With this system, you can play all pre-recorded audio CDs (CDDA), all finalized audio CD-Rs and CD-RWs, MP3/WMA-CDs (CD-Rs/CD-RWs with MP3/WMA files)

- 1 Press **SOURCE** once or more to select **CD** (or **CD** on the remote control).
- 2 Press **DOOR OPEN** to open the CD compartment.
- 3 Insert a disc with the printed side facing up. Then close the CD door.
- 4 Press **▶ ||** to start playback.
- 5 To stop playback, press **STOP ■**.

## Tuning to radio stations

- 1 Press **SOURCE** once or more to select **TUNER** (or **TUNER** on the remote control).
- 2 Press and hold **PROGRAM** until **AUTO** appears  
→ Available stations are programmed in order of waveband reception strength: RDS, FM followed by MW.
- 3 Press the **ALBUM/ PRESET** buttons once or more until the desired preset station is displayed.

*Detailed playback features and additional functions are described in the accompanied owner's manual.*

