

ARG300



EN User manual


PHILIPS




EN Before using your product, read all accompanying safety information.




What's in the box

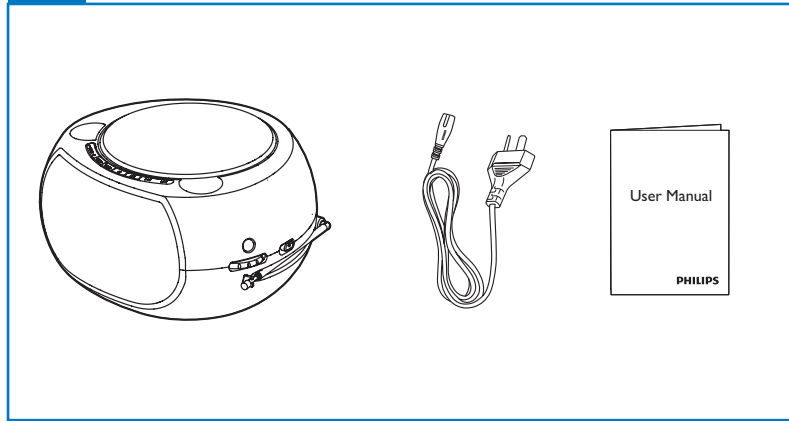


Adjust volume

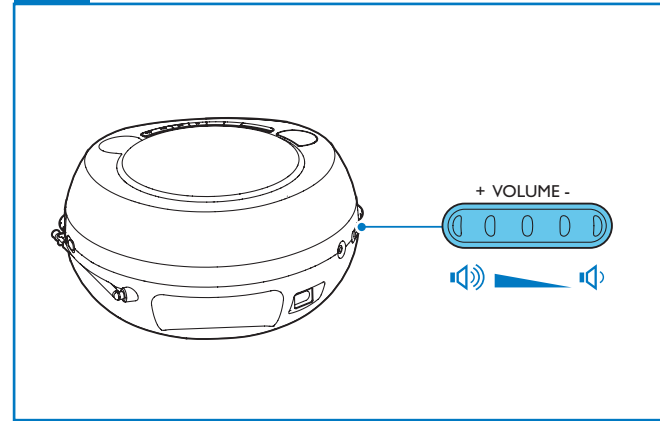


Listen to FM/MW radio

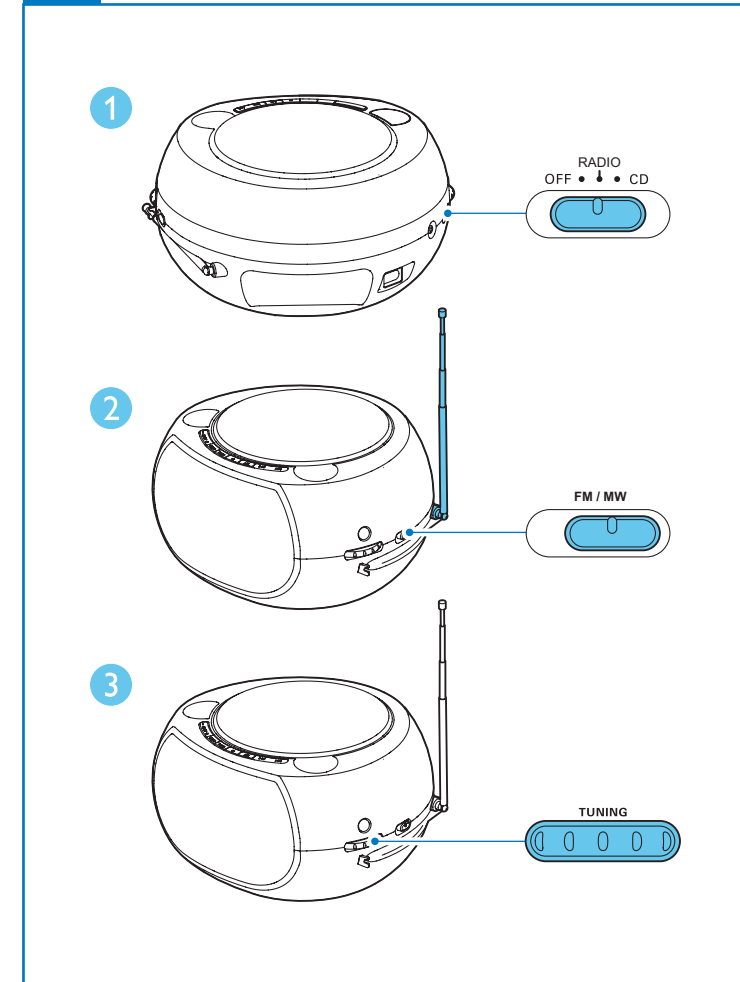

Connect power

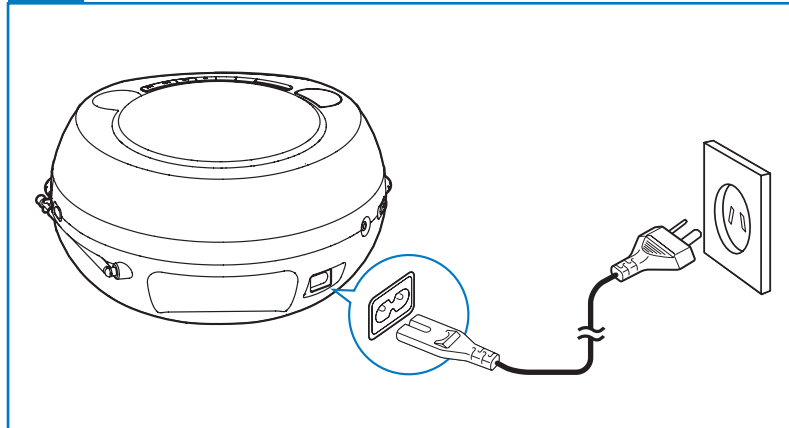

Turn the device off

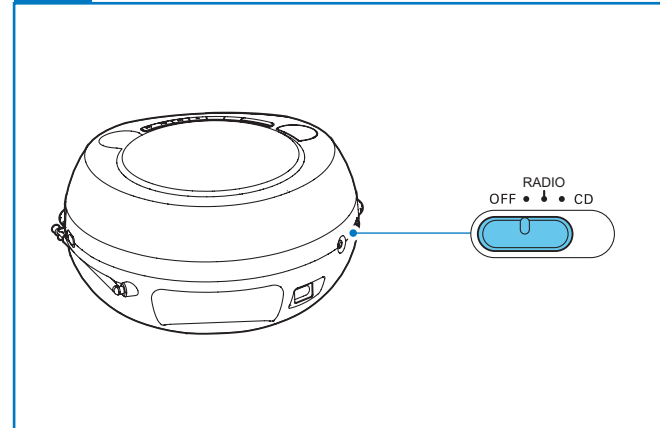

Play disk

1

2

3

- ALBUM +
- MODE
- PROG
-
- ⏸
- ⏮ / ⏭

ALBUM + / - For MP3-CDs, select an album.

MODE Play a track/all tracks/an album repeatedly; play tracks randomly.

PROG Program tracks.

■ Stop play or erase a program.


⏸ Pause or start play.

⏮ / ⏭ Skip to the previous/next track or search within play.

Program tracks


- 1 In CD mode, press ■ to stop playback.
- 2 Press **PROG** to activate programming.
- 3 For MP3-CDs, press **ALBUM +/-** to select an album.
- 4 Press **⏮/⏭** repeatedly to select a track, then press **PROG** to confirm.
- 5 Repeat steps 3~4 to program more tracks.
- 6 Press **⏸** to play the programmed tracks.
- 7 To cancel the program, when playback is stopped, press ■.

Listen to an external audio device

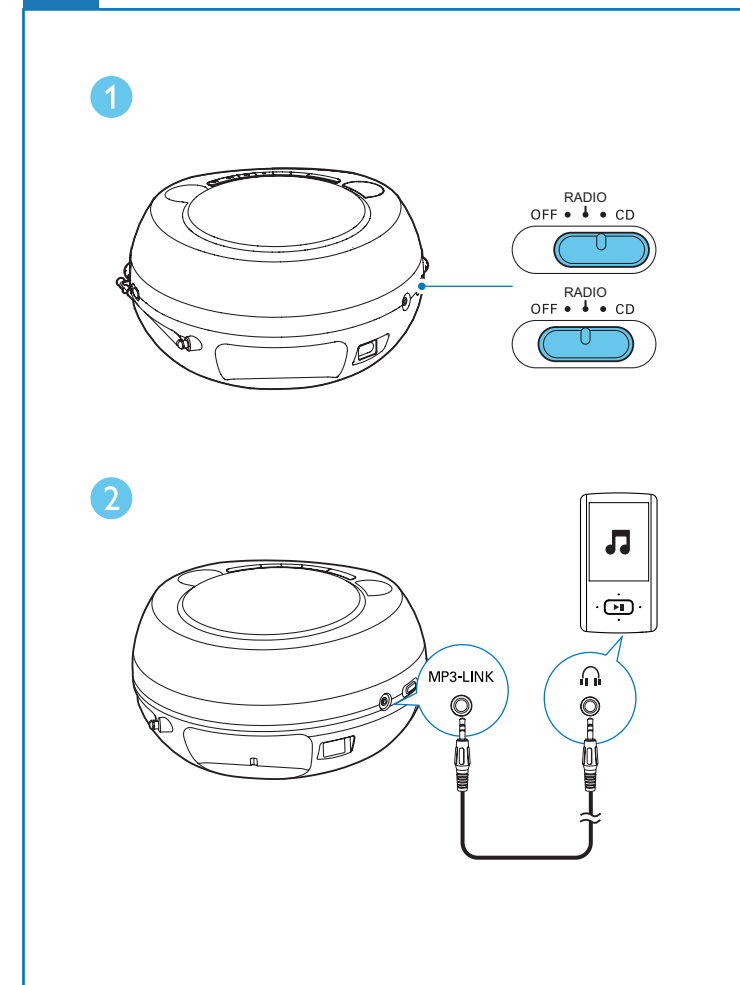




For online help

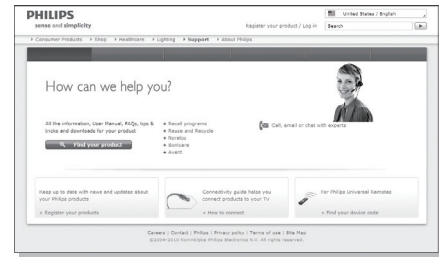

www.philips.com/support

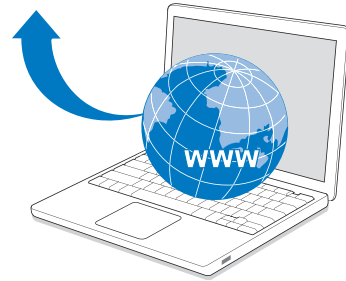

Need help? Visit www.philips.com/support

1 Important

- Read these instructions.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The unit shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the unit (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering. The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus. CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

Precaución

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

2 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This apparatus includes this label:



Note

- The type plate is located on the bottom of the apparatus.

3 Specifications

Amplifier

Rated Output Power	2 X 1 W RMS
Frequency Response	80 Hz - 16 kHz, ± 3 dB
Signal to Noise Ratio	50 dB
MP3 Link Input	0,5 V RMS 20 kohm

Discs

Laser Type	Semiconductor
Disc Diameter	12 cm / 8 cm
Support Disc	CD-DA, CD-R, CD-RW
Audio DAC	24 bits / 44,1 kHz
Total Harmonic Distortion	<1%
Frequency Response	60 Hz - 16 kHz
S/N Ratio	55 dBA

Tuner



Tuning Range	FM: 87,5 - 108 MHz; MW: 530 - 1710 kHz;
Total Harmonic Distortion	<3%
Signal to Noise Ratio	40 dB

General information

AC power	220-240V, 50/60 Hz
Operation Power Consumption	15 W
Standby Power Consumption	0,5 W
Dimensions	
- Main Unit (W x H x D)	245 x 130 x 212 mm
Weight	
- With Packing	1,8 kg
- Main Unit	1,4 kg



Warning and maintenance

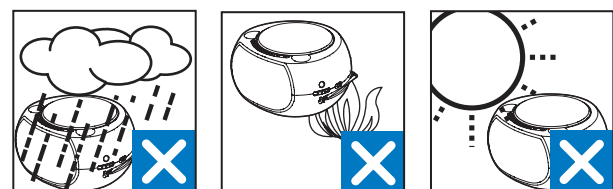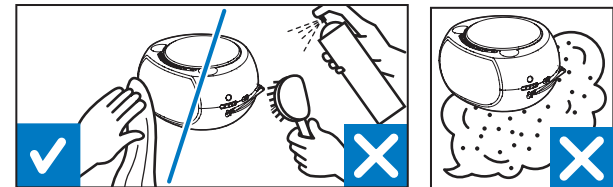

Register your product and get support at

ARG300

www.philips.com/welcome



PHILIPS

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

1 Important

- Read these instructions.
- Follow all instructions.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the unit.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this unit during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the unit has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The unit shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the unit (e.g. liquid filled objects, lighted candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Know these safety symbols



This 'bolt of lightning' indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering. The 'exclamation point' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus. **CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, fully insert.



Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.



Precaución

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

2 Notice

Any changes or modifications made to this device that are not expressly approved by Philips Consumer Lifestyle may void the user's authority to operate the equipment.

Disposal of your old product

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Please visit www.recycle.philips.com for additional information on a recycling center in your area.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

This apparatus includes this label:





- The type plate is located on the bottom of the apparatus.

3 Specifications

Amplifier

Rated Output Power	2 X 1 W RMS
Frequency Response	80 Hz - 16 kHz, ± 3 dB
Signal to Noise Ratio	50 dB
MP3 Link Input	0,5 V RMS 20 kohm

Discs

Laser Type	Semiconductor
Disc Diameter	12 cm / 8 cm
Support Disc	CD-DA, CD-R, CD-RW
Audio DAC	24 bits / 44,1 kHz
Total Harmonic Distortion	<1%
Frequency Response	60 Hz - 16 kHz
S/N Ratio	55 dBA

Tuner

Tuning Range	FM: 87,5 - 108 MHz; MW: 530 - 1710 kHz;
Total Harmonic Distortion	<3%
Signal to Noise Ratio	40 dB

General information

AC power	220-240V, 50/60 Hz
----------	--------------------

Operation Power Consumption	15 W
-----------------------------	------

Standby Power Consumption	0,5 W
---------------------------	-------

Dimensions

- Main Unit (W x H x D)	245 x 130 x 212 mm
-------------------------	--------------------

Weight

- With Packing	1,8 kg
----------------	--------

- Main Unit	1,4 kg
-------------	--------

