 




User manual

Playing the speakers

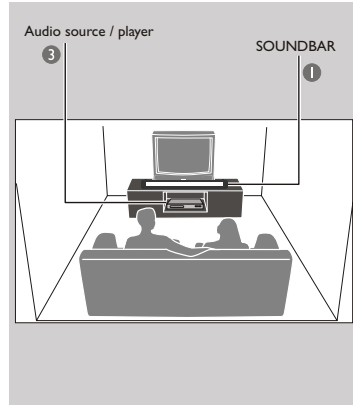

System positioning :
The soundbar is recommended to be put on the flat desktop to get a better acoustic effect.

Helpful Hint:
- To avoid magnetic interference, do not position the speakers, too close to your TV.

总尺寸：660x173mm
工艺：风琴折 105G铜版纸 双面印刷
成品尺寸：110x86.5mm
30408L000101-002



General information

Safety instructions
Please read carefully the safety mark on the back side

Warnings

- The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Attention should be drawn to the environmental aspects of battery disposal.

Care and safety information
Avoid high temperatures, moisture, water and dust

- Apparatus should not be exposed to dripping or splashing of liquid.
- Do not place any source of danger on the Subwoofer, and satellite (e.g. liquid filled objects lighted candles).
- Do not install near heat sources.

Do not block any ventilation opening


- Place the apparatus in a location with adequate ventilation to prevent internal heat build up. Allow at least 10cm (4 inches) of free space all around the apparatus for adequate ventilation.
- At high volume the back cover of Subwoofer becomes hot. Do not touch it.

Care of the cabinet

- Use a soft cloth slightly moistened to clean the cabinet. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Item	2RCA- 2RCA cable	Remote control	User manual	optical cable	power cord
Quantity	1	1	1	1	1

 Connections

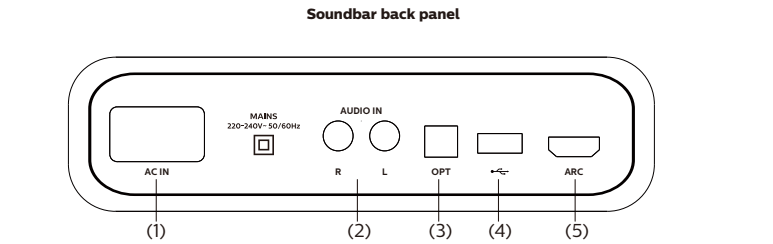


1. AC Power cord.
2. Input Connect to sound sources such as computer, CD player, MP3, etc.
3. Optical Input.
4. USB* Slot.
5. HDMI ARC Input.

***Do NOT use USB for charging devices which can cause damage to your external devices thank you.

Troubleshooting

Problem	Solution
1. No power.	Check if the AC power cord is properly inserted into the AC mains socket.
2. No sound or distorted sound.	Adjust the volume / select the correct source to choose the equipment that you want to hear through the system.
3. The remote control does not function properly.	Reduce the distance between the remote control and the system. Replace the batteries with new ones / Point the remote control directly towards the IR sensor (located on front panel of the subwoofer) / Check that the batteries are loaded correctly / Switch off the system for 30 seconds and then restart.
4. Low hum or buzz sound.	Place the product as far away as possible from electrical devices that may be causing interference / Check power supply voltage and consult electrician.
5. The content of the USB flash drive cannot be read.	The USB flash drive format is not compatible with the system. Drive is formatted with a different file system which is not supported by this unit (e.g. NTFS).
6. Slow operation of the USB flash drive / cannot detect USB flash drive.	Big memory size USB flash drive will take longer time to read and play. / Take out USB drive and insert it again properly.
7. BT not working.	Reduce the distance or device is not paired.

 Top panel operation

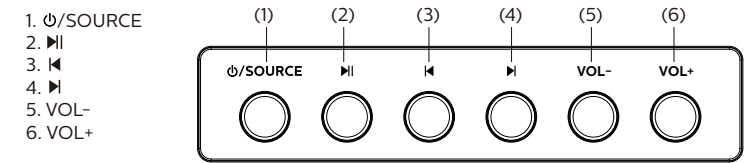

1. ϕ /SOURCE: The Speaker system is in stand by mode when power on, with white LED “----”. Short press the “ ϕ /SOURCE” to select appropriate source. Keeping the “ ϕ /SOURCE” key pressed for long will go back to stand by mode. You can toggle through the input modes by pressing the “ ϕ /SOURCE ” key, “bt” denotes Bluetooth Mode, “Hd” denotes HDMI ARC Mode, “OP” denotes Optical Mode, “AU” denotes Audio Mode, “Ud” denotes USB* mode.
2. $\blacktriangleright\blacktriangleleft$: Play/Pause the songs.
3. \blacktriangleleft : Play the previous song.
4. \blacktriangleright : Play next song.
5. VOL-: To decrease the Volume.
6. VOL+: To increase the Volume.

Remark:
In order not to disturb in the dark, the LED display of soundbar is set to be dim after 30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume.
* AVAILABLE IF CONNECTED

Warranty

This Philips soundbar is warranted against any defect due to defective materials or workmanship for 12 months from the date of purchase, should a defect develop during the warranty, **TPV Technology India Pvt. Ltd.**, affiliate of MMD Hong Kong Holding Limited. undertake to repair the apparatus FREE OF CHARGE at any of its authorized service center in India.

The warranty is not valid in case :

1. Proof of purchase is not accompanied with this warranty card.
2. The warranty card is not completed immediately after purchase.
3. The apparatus is not used according to this user manual.
4. Defects are caused due to improper or reckless use.
5. Any repairs are done by persons other than Philips authorized service centre.
6. The serial number is tampered with.
7. Defects due to causes beyond control like lightning, abnormal voltage or while in transit to the purchaser's residence.

 
All Consumables and parts susceptible to normal wear and tear are not covered under this warranty. For detailed Terms and Conditions applicable, please refer www.philips.com/support.

Model No. _____ Product Sl. No. _____
Invoice Number _____ Date of Purchase: ____/____/_____
Customer's Name and address: _____ PIN: _____

Always there to help you!
Visit us at www.support.philips.com
Helpline: 1800 425 6396
Email: india.callcentre@tpv-tech.com
(10 a.m. to 9 p.m. Mondays to Saturdays & 10 a.m. to 6 p.m. on Sundays)

Dealer Name & Stamp: _____

Remote controls

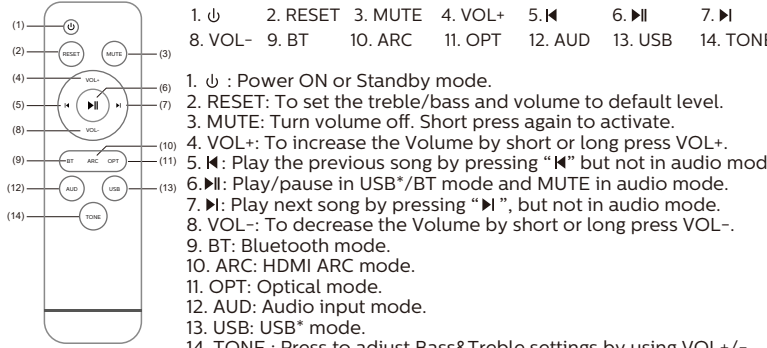

1. ϕ : Power ON or Standby mode.
2. RESET: To set the treble/bass and volume to default level.
3. MUTE: Turn volume off. Short press again to activate.
4. VOL+: To increase the Volume by short or long press VOL+.
5. \blacktriangleleft : Play the previous song by pressing “ \blacktriangleleft ” but not in audio mode.
6. $\blacktriangleright\blacktriangleleft$: Play/pause in USB*/BT mode and MUTE in audio mode.
7. \blacktriangleright : Play next song by pressing “ \blacktriangleright ”, but not in audio mode.
8. VOL-: To decrease the Volume by short or long press VOL-.
9. BT: Bluetooth mode.
10. ARC: HDMI ARC mode.
11. OPT: Optical mode.
12. AUD: Audio input mode.
13. USB: USB* mode.
14. TONE : Press to adjust Bass&Treble settings by using VOL+/- buttons. Bass&Treble levels: -6(min)~+6(max).

Remark:
In order not to disturb in the dark, the LED display of soundbar is set to be dim after 30 seconds if there is no operation, and display off after another 90 seconds. You can press any button to resume.
* AVAILABLE IF CONNECTED

Product specifications*

Total system power	120W RMS	BT version	V5.0
Separation	\geq 40db	BT range	Up to 10 meters
SNR	\geq 55db	USB max capacity	Up to 32GB
Audio input socket	2RCA- 2RCA cable	playability	MP3 track
Power consumption	24.1 W		
Soundbar	3 Way		
Speaker size	5.25 inches*2+2.5 inches*4+1 inches*2		
Impedance	8 Ohm+4 Ohm+4 Ohm		
Frequency range	60Hz - 20KHz		
Dimension (mm) W x H x D	960 x 95 x 201		
Weight	6.67kg		

*Specification subject to change without prior notice. Measured under specific conditions.

Register your product and get support at www.philips.com/welcome

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

