

Always there to help you

Register your product and get support at
www.philips.com/welcome

PD7006

Question?
Contact
Philips



User manual	3
Benutzerhandbuch	47
Mode d'emploi	91
Manual del usuario	135

Brugervejledning	25
Gebruiksaanwijzing	69
Manuale utente	113
Användarhandbok	157

PHILIPS

Contents

1	Important	5
	Safety and notice	5
	Safety	5
	Compliance	6
	Care of the environment	7
	Copyright	8
	Warranty	9
2	Your portable DVD player	10
	What's in the box	10
	Overview of the main unit	11
	Spill-resistant performance of the player	13
3	Get started	14
	Mount the unit in your car	14
	Charge power	15
	Switch on/off	16
	Select OSD language	16
4	Play music or movies	17
	Play discs	17
	Play from USB	20
	Connect additional equipment	21

5	Adjust settings	22
6	Product information	23
7	Troubleshooting	24

1 Important

Safety and notice

Read and understand all instructions before you use this product. If damage is caused by failure to follow the instructions, the warranty does not apply.

Safety

Only use attachments/accessories specified by the manufacturer.

The product shall not be exposed to dripping or splashing.

Do not place any sources of danger on the product (e.g. liquid filled objects, lighted candles).

Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Modification of the product could result in hazardous radiation of EMC or other unsafe operation.



Warning

- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



Warning

- Never remove the casing of this product.
- Never lubricate any part of this product.
- Never place this product on other electrical equipment.
- Keep this product away from direct sunlight, naked flames or heat.
- Never look into the laser beam inside this product.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the product from the power.

Hearing safety



A pleine puissance, l'écoute prolongée du baladeur peut endommager l'oreille de l'utilisateur.



Warning

- To prevent possible hearing damage, do not listen at high volume levels for long periods.

The maximum output voltage of the player is not greater than 150 mV.

Compliance



TÜV Rheinland®
Precisely Right.

"Packaging inside pouch is compliance with sample which is comply with Annex IV of ECE R21.01 regulation conducted by TÜV Rheinland (test report no.:85-R21-1410/11)"



This product complies with the radio interference requirements of the European Community.

This apparatus includes this label:





Note

- The type plate is located on the bottom of the product.

Care of the environment

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, and old equipment.



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

 
Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.

Always bring your product to a professional to remove the built-in battery.

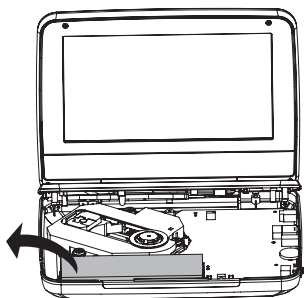

Copyright



Be responsible
Respect copyrights

This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V or their respective owners. Philips reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.



ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX,LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays

DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Warranty

- Never attempt to repair the product, this could lead to the risk of injury, damage to the product and will void your warranty.
- Use the product and accessories only as intended by the manufacturer. The caution sign printed on the back of the product indicates risk of electric shock.
- Never remove the cover of the product. Always contact Philips Customer Support for service or repairs.
- Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorized in this manual shall void the warranty.

2 Your portable DVD player

You can play the following discs on the DVD player (including CD-R, CD-RW, DVD±R and DVD±RW):

 
- DVD-Video
- Video CD
- Audio CD
- MP3 CD
- DivX
- Discs with JPEG files

What's in the box

Check and identify the contents of your package:

- Portable DVD player
- AC power adaptor, ASUC12E-090080 (Philips)
- Car adaptor
- *TUV pouch
- User manual

Overview of the main unit

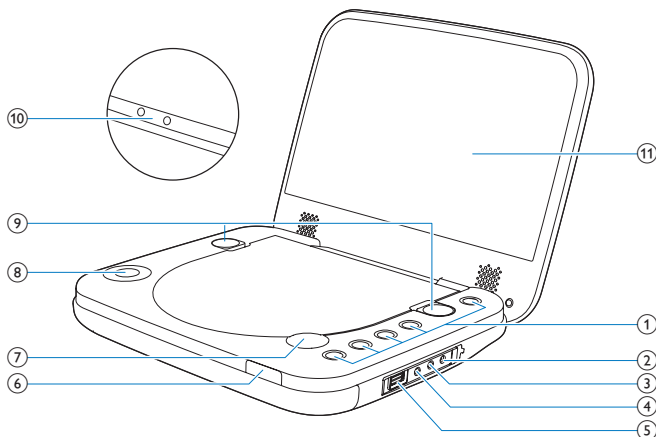

①

①

- Turns on/off DVD player.

OPTIONS

- Accesses the setup menu.
- Selects disc or USB source.
- Selects different modes before or during play.

DVD MENU

- For DVD, accesses or exits disc menu.



- Stops disc play.

▶||/OK

- Confirms an entry or selection.
- Starts, pauses or resumes disc play.

②

DC IN

- Power supply socket.

- ③ **AV OUT**
 - Audio/video output jack.
- ④ 
 - Headphone jack.
- ⑤ 
 - Connects a USB storage device.
- ⑥ **Charging indicator/Power indicator**
- ⑦  **OPEN**
 - Opens the disc compartment.
- ⑧ 
 - Navigates menus.
 - 
 - Skips to the previous or next title, chapter, or track.
- ⑨ **Locks**
 - Locks the disc panel.
- ⑩ **VOLUME + / -**
 - Increases or decreases volume.
- ⑪ **Display panel**

 
Spill-resistant performance of the player

The spill resistance meets IP4 standard.

This spill-resistant player survives accidental spillages.

To guarantee the spill-resistant result, do the following:

- ① Close the disc compartment door.
- ② Shut the locks.
- ③ Make sure that you close the cover of the connectors.

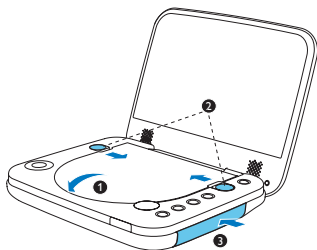

Caution

- Never immerse the player in water or other liquids.
- Never use the player near a pool or in a shower.
- The supplied adaptor is not waterproof and should be kept from getting wet.
- Never use the supplied AC/DC power adaptor in wet environments.
- Use soft towel to dry your portable DVD player when it gets wet.

3 Get started



Caution

- Use the controls only as stated in this user manual.
- Always follow the instructions in this chapter in sequence.

 
If you contact Philips, you will be asked for the model and serial number of your player. The model number and serial number are on the bottom of your player. Write the numbers here:

Model No. _____


Serial No. _____

Mount the unit in your car


1

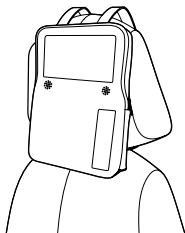


2

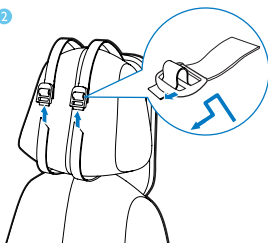 

3

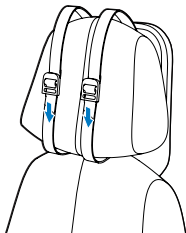 

4

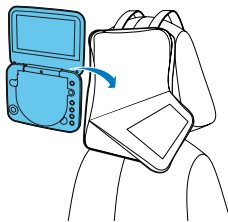 

To use the player in your car, attach the player to the back of the front seat headrests.

- 1 Position the bag on the back of the headrest.
- 2 Adjust the position of the bag, and then pull the straps through the bag slider.
- 3 Pull the straps to secure the bag to the headrest.
- 4 Put the player into the bag.

Charge power

 
Charge through car adaptor



Caution


- You can only charge the player when it is in power-off mode.
- The supplied adaptor is not waterproof and should be kept from getting wet.
- Never use the supplied adaptor in wet environments.

Connect the supplied car adaptor to the player and car cigarette lighter.

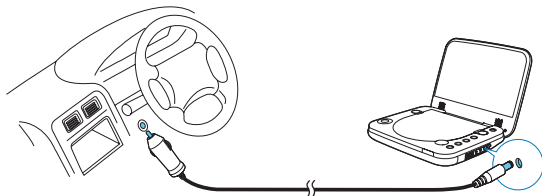

Charge through the AC adaptor

 - 1 Find the **DC IN** jack of the player.
- 2 Connect the supplied AC adaptor to the player and to the AC outlet.

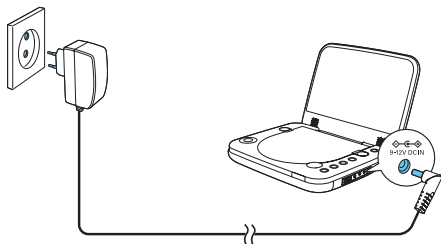

- ↳ The charging indicator turns on (red).
- ↳ When the battery is fully charged, the indicator turns off.



Tip

- To maximize battery life, recharge the battery immediately once the battery is fully discharged. If you do not use the player for a long time, recharge the battery once every two months.

Switch on/off

Press **⏻** on the player to switch on.

- ↳ The indicator turns on (green).

To switch off the player, press **⏻**.

- ↳ The indicator turns off.

Select OSD language

You can choose a different language for the on-screen display text.

- 1 Press **OPTIONS**.
 - ↳ The options menu is displayed.
- 2 Select **[Setup] (setup) > [General] > [Language]**.
- 3 Press **▲ / ▼** to select an option.
- 4 Press **▶||/OK** to confirm.
- 5 Press **OPTIONS** to exit.

4 Play music or movies

Play discs

- 1 Press ◀ **OPEN** on the player to open the disc compartment.
- 2 Insert the disc with label side facing up.
- 3 Push down to close the disc compartment.
↳ Play starts automatically. If not, press ▶ **II** / **OK**.
- 4 Lock the disc compartment door with the left and right locks to prevent water leaking into the disc compartment.
 - If a menu is displayed, select an item, then press ▶ **II** / **OK** to start play.
 - To pause, press ▶ **II** / **OK**. Press again to resume play.
 - To stop, press ■ twice.
 - To select the previous/next item, press ◀ or ▶.

Play options

Select subtitle language

For DVDs that contain two or more subtitle languages,

- 1 Press **OPTIONS**.
↳ The option menu is displayed.
- 2 Select **[Subtitles]**, then press ▶ **II** / **OK**.
- 3 Press ▲ / ▼ to select a subtitle.
- 4 Press ▶ **II** / **OK** to confirm.
- 5 Press **OPTIONS** to exit.

Select audio language

For DVDs that contain two or more audio languages,

- 1 Press **OPTIONS**.
↳ The setup menu is displayed.
- 2 Select **[Audio language]**, then press ▶ **II** / **OK**.

3 Press ▲ / ▼ to select a language.

4 Press ►||/OK to confirm.

Repeat

During play, you can select different repeat options.

1 Press **OPTIONS**.

↳ The option menu is displayed.

2 Select **[Repeat]** and press ►||/OK.

↳ The repeat options are displayed.

For DVD

- **[Repeat A]**: the start of the section to repeat
- **[Repeat B]**: the end of the section to repeat
- **[Repeat Chapter]**: repeat the current chapter
- **[Repeat Title]**: repeat the current title or track
- **[Repeat all]**: repeat all titles on the disc
- **[Repeat Off]**: switch off the repeat mode

For VCD

- **[Repeat A]**: the start of the section to repeat
- **[Repeat B]**: the end of the section to repeat
- **[Repeat 1]**: repeat the current track
- **[Repeat all]**: repeat all tracks on the disc
- **[Repeat Off]**: switch off the repeat mode

For MP3/CD/DivX

- **[Repeat 1]**: repeat the current track
- **[Repeat Folder]**: repeat all the tracks in current folder
- **[Off]**: switch off the repeat mode

3 Select an option, then press ►||/OK to confirm.



Tip

- For VCDs, if PBC is on, you cannot repeat items.

Random play

For audio CDs and MP3 CDs, you can play all tracks in random order.

1 Press **OPTIONS**.

↳ The option menu is displayed.

2 Select **[Shuffle All]** and press ►||/OK.

- 3 Select [On] or [Off].
- 4 Press ►||/OK to confirm.

Zoom

For DVDs, VCDs and JPEG CDs, you can zoom in and out for video images or pictures.

- 1 Press **OPTIONS**.
↳ The option menu is displayed.
- 2 Select [**Zoom & Pan**] and press ►||/OK.
- 3 Press ►||/OK repeatedly to zoom in and out.
- 4 When the video image or picture is enlarged, press ▲, ▼, ◀, ▶ to pan through it.

Display play information

For DVDs and VCDs, you can view the play information during play.

- 1 Press **OPTIONS**.
↳ The option menu is displayed.
- 2 Select [**Display**] and press ►||/OK to confirm.
↳ For DVDs, title number, chapter number and elapsed play time is displayed. For VCDs, track number and elapsed play time is displayed.

Select audio mode

When you play VCDs, you can select an audio mode.

- 1 Press **OPTIONS**.
↳ The option menu is displayed.
- 2 Select [**Audio**], then press ►||/OK.
- 3 Press ▲ / ▼ to select audio channel: [**Stereo**], [**Left-mono**] or [**Right-mono**].

Rotate pictures

 
For JPEG CDs only. While the JPEG is displayed:

- Press ▲ to flip up/down.
- Press ▼ to flip left/right.

Play from USB

You can play DivX, VOB, MP3, or JPEG files that are stored on a USB storage device.

- 1 Press **OPTIONS** and select **[Source]** (source).
- 2 Select **[USB]** from the menu to choose USB mode.
- 3 Connect the USB device to the player.
 - ↳ The content menu is displayed.

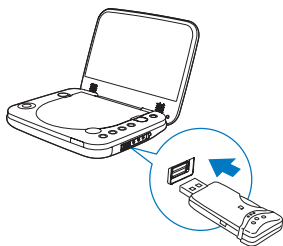

- 4 Select a file, then press **▶||/OK**.
 - ↳ Play starts.
- 5 To stop play, press **■**.

Connect additional equipment

You can connect the player to a TV or an amplifier to enjoy DVDs.

 
Connect to a TV



Caution

- Turn off your player before connecting to any additional equipment.

- 1 Connect the to the AV cable (not supplied) to the **AV OUT** jack of the player.
- 2 Match the color of the AV cables (not supplied) with the jacks on your TV:
 - the yellow cable is for the yellow video jack
 - the red/white cable is for the red/white audio jacks.

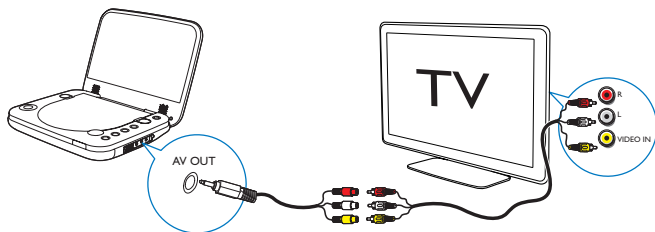

5 Adjust settings

To maximize your play experience, use the setup menu to fine tune your settings.

- 1 Press **OPTIONS**.
↳ The options menu is displayed.
- 2 Select **[Setup]**.
↳ The setup menu is displayed.
- 3 Use navigation keys to select an option and press **▶||/OK** to confirm.

[General]	
[Language]	Select on-screen display language
[PBC settings]	Set playback control function on/off.
[Power save]	Select power save mode.
[DivX (VOD)]	Get DivX registration code.
[DivX subtitles]	Select DivX subtitle language.
[Parental(DVD)]	Select parental options.
[Set password]	Change existing password (3308 by default).
[Factory settings]	Restore factory settings.
[Video]	
[LCD Display]	Set screen display aspect ratio.
[TV standard]	Set video output format to TV system.
[Brightness]	Adjust screen brightness.
[Contrast]	Adjust screen contrast.
[Audio]	
[Dolby]	Set Dolby output.
[Version]	Check the version information.

- 4 Press **◀** to go back to the previous menu.
- 5 Press **OPTIONS** to exit.

6 Product information



Note

- Product information is subject to change without prior notice.

Dimensions	195 x 154 x 37 mm
Weight	0.675 kg
AC power adaptor	ASUC12E-090080 (Philips)
Power supply	Input: 100-240V~ 50/60Hz Output: DC 9V === 0.8A
Power consumption	9.0 W
Operating temperature range	0-45°C
Laser wavelength	650 nm
Video output	
Format	PAL & NTSC
Output level	1V _{p-p} ± 20%
Load impedance	75 Ω
Audio line out	
Audio out (analog audio)	Output level: 2V ± 10%
Load impedance	10 K Ω
Audio distortion + noise	≤ -80 (1KHz)
Frequency response	20Hz-20KHz ± 1dB
Signal/noise ratio	≥ 80 dB
Channel separation	≥ 80 dB
Dynamic range	≥ 80 dB

7 Troubleshooting

No power

- Ensure that both plugs of the mains cord are properly connected.
- Ensure that there is power at the AC outlet.
- Check if the built-in battery is drained.

No sound

- Ensure that the AV cable is connected correctly.

Distorted picture

- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Make sure that the video output format of the disc is compatible with the TV.
- Change the video output format to match your TV or program.
- The LCD is manufactured using high precision technology. You may, however, see tiny black points and/or bright points (red, blue, green) that continuously appear on the LCD. This is a normal result of the manufacturing process and does not indicate a malfunction.

Cannot play disc

- Ensure the disc label is upwards.
- Clean the disc. With a clean, soft, lint-free cloth, wipe the disc outwards from the center.
- Check if the disc is defective by trying another disc.

The player feels warm

- When the player is in use for a long period of time, its surface will be heated. This is normal.



Specifications are subject to change without notice
© 2012 Koninklijke Philips Electronics N.V.
All rights reserved.

PD7006_12_UM_ERP_V3.0

