

# Always there to help you

Register your product and get support at  
[www.philips.com/support](http://www.philips.com/support)



D6350



## Extended user documentation

# PHILIPS



# Contents

---

## 1 Important safety instructions 3

---

## 2 Your phone 5

- What is in the box 5
- Overview of the phone 5

---

## 3 Get started 7

- Connect the charger 7
- Install the supplied batteries 7
- Set the display language 8
- Set the date and time 8
- Set the date and time format 8
- Register your handset 8
- Charge the handset 9
- Check the battery level 9
- What is standby mode? 10
- Check the signal strength 10
- Switch the handset on or off 10

---

## 4 Main menu icons 11

---

## 5 Display icons 12

---

## 6 Calls 13

- Make a call 13
- Answer a call 13
- End a call 14
- Adjust the earpiece/speaker volume 14
- Mute the microphone 14
- Turn the speaker on or off 14
- Make a second call 14
- Answer a second call 14
- Switch between two calls 14
- Make a conference call with the external callers 15

---

## 7 Intercom and conference calls 16

- Make a call to another handset 16
- Make a conference call 16

---

## 8 Text and numbers 18

- Enter text and numbers 18
- Switch between uppercase and lowercase 18

---

## 9 Phonebook 19

---

## 10 Call log 20

---

## 11 Redial list 21

---

## 12 Sound settings 22

- Set the handset's ringtone volume 22
- Set the handset's ringtone for internal calls 22
- Set the handset's ringtone for external calls 22
- Set the key tone 22
- Set the docking tone 22
- Set the battery tone 23
- Set the sound profile 23

---

## 13 Phone settings 24

- Display settings 24
- Eco mode 24
- ECO+ mode 24
- Name the handset 25
- Set the date and time 25
- Set the display language 25

---

## 14 Alarm clock 26

- Set the alarm 26
- Turn off the alarm 26

---

## 15 Privacy mode 27

- Call barring (block outgoing calls) 27
- Block incoming calls 27
- Silent mode 28
- Change the privacy mode PIN/passcode 29

---

## 16 Baby monitor 30

- Activate/Deactivate the baby unit 30

Set the parent unit	30
Set the baby cry level	31
<hr/>	
<b>17 Services</b>	<b>32</b>
Call list type	32
Auto conference	32
Network type	32
Auto prefix	32
Select the recall duration	33
Dial mode	33
First ring	33
Auto clock	33
Register additional handsets	34
Unregister handsets	34
Restore default settings	34
<hr/>	
<b>18 Technical data</b>	<b>35</b>
<hr/>	
<b>19 Notice</b>	<b>36</b>
Declaration of conformity	36
Use GAP standard compliance	36
Compliance with EMF	36
Disposal of your old product and battery	36
<hr/>	
<b>20 Frequently asked questions</b>	<b>38</b>
<hr/>	
<b>21 Appendix</b>	<b>40</b>
Text and number input tables	40
<hr/>	
<b>22 Index</b>	<b>42</b>

# 1 Important safety instructions

## Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.



## Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

## To avoid damage or malfunction



## Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Do not dispose of batteries in fire.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.

- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

## When using the phone as a baby monitor



## Caution

- Children should be supervised to ensure that they do not play with the appliance.
- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- Take every precaution to make sure that your baby can sleep safely.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

 
### **About operating and storage temperatures**

- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

# 2 Your phone

Congratulations on your purchase and welcome to Philips!  
To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).


## What is in the box



Handset\*\*



 
Charger

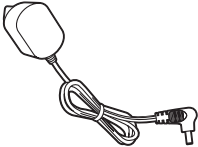

Power adapter\*\*



 Line cord\*



2 x AAA rechargeable batteries\*\*



Guarantee





Short user manual

### Note

  - \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.
- \*\* In multi-handset packs, there are additional handsets, chargers, power adapters and batteries.

## Overview of the phone

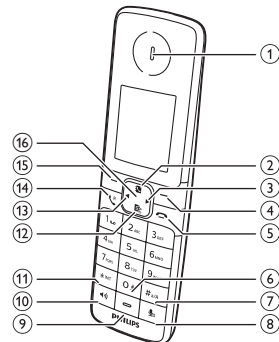

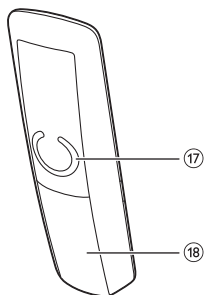

**1 Earpiece**



- Scroll up on the menu.
- Increase the earpiece/speaker volume.



- Move the cursor to the right in editing mode.
- Scroll to the right in main menu mode.



- Press to delete individual text or digit. Press and hold to remove all text.
- Cancel operation.
- Change the sound profile during a call.
- Select the function displayed on the handset screen directly above the key.



- End the call.
- Exit the menu/operation.
- Press and hold to power on/off the handset.



- Press to enter a space during text editing.
- Press and hold to lock/unlock the keypad in standby mode.



- Press and hold to enter a pause when editing the contact's name and number.
- Switch to upper/lower case during editing.



Mute or unmute the microphone.

**9 Microphone**



- Turn the speaker phone on/off.
- Make and receive calls through the speaker.



- Press and hold to make an intercom call (for multi-handset version only).
- Set the dial mode (pulse mode or temporary tone mode).



- Scroll down on the menu.
- Decrease the earpiece/speaker volume.



- Move the cursor to the left in editing mode.
- Scroll to the left in main menu mode.



- Make and receive calls.
- Recall key (This function is network dependent.)



- Access the main menu in standby mode.
- Confirm selection.
- Enter the options menu
- Select the function displayed on the handset screen directly above the key.

**16 LED indicator**

- Off: no new event.
- Flashing: new missed calls/new messages on answering machine/new voice mails.

**17 Loudspeaker**

**18 Battery door**



# 3 Get started

## ! Caution

- Make sure that you have read the safety instructions in the 'Important safety instructions' section before you connect and install your handset.

## Connect the charger

## ! Warning

 
- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the phone.
- Use only the supplied power adapter to charge the batteries.

## ☰ Note


- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, ensure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by the DSL interference. For more information on the DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the charger.

Connect each end of the power adapter to (for multi handset version only):

- the DC input jack at the bottom of the extra handset charger.
- the power socket on the wall.

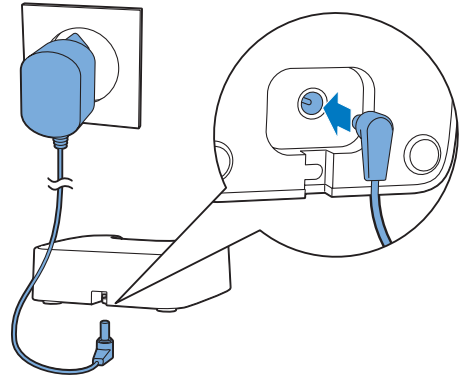

## Install the supplied batteries

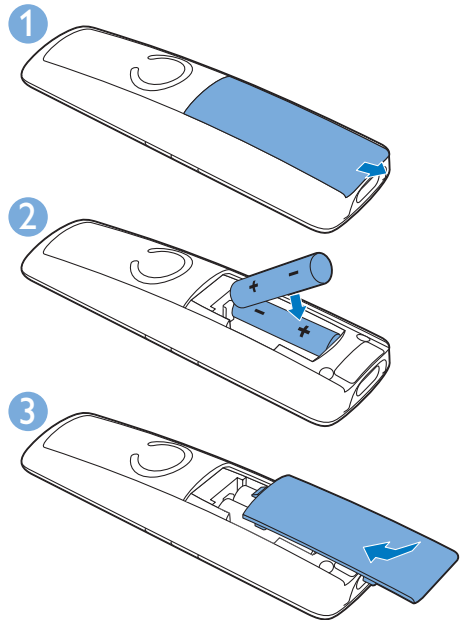 

### Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

### Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

### Warning


- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

---

## Set the display language


### Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select , then press **[Select]**.
- 3 Select **[Language]**, then press **[OK]** to confirm.
- 4 Select a language, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the date and time

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select , then press **[Select]**.

- 3 Select **[Date & time]**, then press **[OK]** to confirm.
- 4 Select **[Set date]/[Set time]**, then press **[OK]** to confirm.
- 5 Press the numeric buttons to enter the date and time.




### Note

- If the time is in 12-hour format, press **\*INT** to select **[am]** or **[pm]** (Country dependent).

- 6 Press **[OK]** to confirm.

---

## Set the date and time format

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select , then press **[Select]**.
- 3 Select **[Date & time]**, then press **[OK]** to confirm.
- 4 Select **[Date format]** or **[Time format]**.
- 5 Press  /  to select **[DD-MM-YYYY]** or **[MM-DD-YYYY]** as the date display, and **[12 Hours]** or **[24 Hours]** as the time display. Then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- The date and time format setting is country dependent.

---

## Register your handset

Register your handset to the base station before use.


## Auto registration

Extra handsets of the same model can be auto-registered. Place the unregistered handset on the base station.

- ↳ The handset detects the base station and registers automatically.
- ↳ Registration is complete in less than two minutes. The base station automatically assigns a handset number to the handset.

## Manual registration/Pairing

If auto registration fails or if you register a handset of a different model, register your handset manually to the base station.

- 1 If the handset is in **[Unregistered]** status, go to step 4. If the handset is in **[searching]** and **[Unavailable]** status, press **[Menu]** > ◀ / ▶ to select , then press **[Select]**.
- 2 Select **[Register]**, then press **[OK]** to confirm.
- 3 Press and hold **(•)** on the base station for 10 seconds.

### Note

 
- For models with an answering machine, you hear a confirmation beep indicating that the base is now in registration mode.

- 4 Enter the system PIN/passcode. Press **[Clear]** to make corrections.
- 5 Press **[OK]** to confirm the PIN/passcode.
  - ↳ Registration is complete in less than 2 minutes.

### Note

- If the PIN/passcode is incorrect or no base is found within a certain period, a notification message will be displayed on your handset.
- The preset PIN/passcode is 0000. No change can be made on it.

## Charge the handset

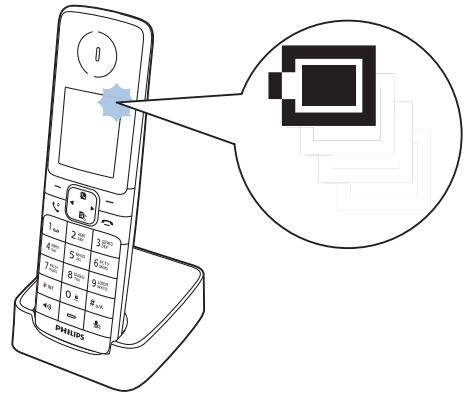

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

- ↳ The handset starts charging.



### Note


- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

Your phone is now ready to use.

## Check the battery level

The battery icon displays the current battery level.

-  When the handset is off the charger, the bars indicate the battery level (from full to low).
-  When the handset is on the charger, the bars flash until charging is complete.

-  The empty battery icon flashes. The battery is low and needs recharging.

If you are on the phone, you hear warning tones when the batteries are almost empty. The handset turns off when the batteries are completely empty.


---

## What is standby mode?

Your phone is in standby mode when it is idle. The handset name, date and time, and handset number are displayed on the standby screen.

---

## Check the signal strength

 The number of bars indicates the connection status between the handset and base station. The more bars are shown, the better the connection is.

- Make sure the handset is linked to the base station before you make or receive calls and carry out the functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset closer to the base station.




### Note

- When **ECO+** is on, the signal strength is not displayed (see 'ECO+ mode' on page 24).










---

## Switch the handset on or off

Press and hold  to switch the handset on or off.











## 4 Main menu icons

The following is an overview of the menu options that are available in your D6350. For detailed explanation of the menu options, see the corresponding sections in this user manual. Make sure that all the handsets registered to the base station are Philips D63 models in order to have all these icons displaying and features functioning properly.

Icon	Descriptions
	<b>[Phonebook]</b> - Add, edit, manage phonebook entries etc.
	<b>[Sounds]</b> - Set the ring volume, ring tone, key tone etc.
	<b>[Phone setup]</b> - Set the date and time, Eco mode, handset name and display language.
	<b>[Alarm]</b> - Set the alarm time, alarm tone, alarm repetition.
	<b>[Call log]</b> - Stores the call history of all missed, received or blocked calls (for D630 only).
	<b>[Privacy mode]</b> - Block incoming, outgoing calls or set silent mode.
	<b>[Services]</b> - Set the auto conference, auto prefix, network type, recall time, auto clock, call services etc. The services are network and country dependent.
	<b>[Baby monitor]</b> - Set the alert to an external line, a contact from the phonebook or other handsets and the baby cry level.
	<b>[Answer machine]</b> - Setup, listen to, delete phone messages, etc (for D635 only).

## 5 Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the charger, the bars indicate the battery level (from full to low).
	When the handset is on the charger, the bars keep scrolling until charging is complete.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	It shows the connection status between the handset and base station. The more bars are shown, the better the signal strength is.
	It flashes when there is a new missed call. It remains steadily on when browsing unread missed calls in call log, or when browsing the read missed calls in call log.
	It remains steadily on when browsing blocked calls in call log.
	It flashes when there is an incoming mobile number.
	It flashes when there is an incoming home number.
	It flashes when there is an incoming office number.
	The ringer is off. The silent mode is set and within active period (the phone does not ring).



It flashes when there is a new voice message.

It remains steadily on when the voice messages are already viewed in the call log.

The icon is not shown when there is no voice message.



The silent mode is set, but is outside of active period.



The alarm is activated.



The **Eco** mode is activated.



The **ECO+** mode is activated.

# 6 Calls

## Note

- When the power fails, the phone cannot access emergency services.

## Tip

- Check the signal strength before you make a call or when you are in a call.

Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly.

## Make a call

You can make a call in these ways:



- Normal call
- Predial call
- Call through the speed dial key

You can also make a call from the redial list, phonebook list and call log.

## Tip

- For information of how to make a call from the redial list, phonebook list and call log, see the base station's user manual.

## Normal call

- 1 Press  or .
- 2 Dial the phone number.
  - ↳ The number is dialed out.
  - ↳ The duration of your current call is displayed.

## Predial call

- 1 Dial the phone number

- To erase a digit, press **[Clear]**.
- To enter a pause, press and hold **#01A**.

- 2 Press  or  to dial out the call.

## Call through the speed dial key

If you have already pre-saved a contact in the speed dial key, press and hold the key to make a call.

## Tip



- For information of how to set the speed dial keys, see the chapter 'Phonebook', section 'Set the speed dial keys'.

## Note

- The talk time of your current call is displayed on the call timer.
- If you hear warning tones, the phone is almost out of battery or out of range. Charge the battery or move the phone close to the base station.

## Answer a call

When the phone rings, you can select from the following options:

- press  or  to answer the call.
- select **[Divert]** to send incoming call to the answering machine (only applied to D635).
- select **[Silent]** to turn off the ringer of the current incoming call.

## Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.

## Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.



## Tip

- When there is a missed call, a notification message appears. The LED on the handset flashes.

---

## End a call

You can end a call in these ways:

- Press ; or
- Place the handset to the charger.

---

## Adjust the earpiece/speaker volume

Press / on the handset to adjust the volume during a call.

- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

---

## Mute the microphone

- 1 Press during a call.
  - ↳ The handset displays **[Mute on]**.
  - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press again to unmute the microphone.
  - ↳ You can now communicate with the caller.

---

## Turn the speaker on or off

Press .

---

## Make a second call

### Note

- This service is network dependent.

- 1 Press during a call.
  - ↳ The first call is put on hold.
- 2 Dial the second number:
  - ↳ The number displayed on the screen is dialed out.

---

## Answer a second call

### Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press and to answer the call.
  - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press and to end the current call and answer the first call.

---

## Switch between two calls

### Note

- This service is network dependent.

You can switch your calls in these ways:

- Press and ; or
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
  - ↳ The current call is put on hold, and you are now connected to the other call.



---


## Make a conference call with the external callers



### Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press , then  $\exists_{DEF}$  ; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
  - ↳ The two calls are combined and a conference call is established.

# 7 Intercom and conference calls

## Note



- This feature is available for multi- handset versions only.

Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly. An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

## Make a call to another handset

### Note

- If the base station only has 2 registered handsets, press and hold \*INT to make a call to another handset.

- 1 Press and hold \*INT.  
↳ The handsets available for intercom are displayed.
- 2 Select a handset, then press [OK] to confirm.  
↳ The selected handset rings.
- 3 Press  on the selected handset.  
↳ The intercom is established.
- 4 Press [Cancel] or  to cancel or end the intercom call.

### Note

- If the selected handset is busy, [Busy] is displayed on the handset screen.

## While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold \*INT.  
↳ The current caller is put on hold.  
↳ For multi-handset versions, the handsets available for intercom are displayed, then go to step 2.
- 2 Select a handset, then press [OK] to confirm.  
↳ Wait for the other side to answer your call.


## Switch between calls

Press [Extern] to switch between the outside call and the intercom call.


## Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

## During an external call



- 1 Press and hold \*INT to initiate an internal call.  
↳ The external caller is put on hold.  
↳ For multi-handset versions, The handsets available for intercom are displayed. Then go to step 2.  
↳ For two-handset versions, the other handset rings. Then go to step 3.
- 2 Select a handset, then press [OK] to confirm.  
↳ The selected handset rings.
- 3 Press  on the selected handset.  
↳ The intercom is established.
- 4 Press [Conf].

↳ You are now in a 3-way conference call with an external call and a selected handset.

5 Press  to end the conference call.



#### Note

- Press  to join an ongoing conference with another handset if  > [Conference] is set to [Auto].

---

## During the conference call

1 Press [Int.] to put the external call on hold and go back to the internal call.

↳ The external call is put on hold.

2 Press [Conf] to establish the conference call again.



#### Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

# 8 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

---

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[Clear]** to delete a character. Press and hold **[Clear]** to delete all characters. Press **◀/▶** to move the cursor left and right.
- 3 Press **0#** to add a space.



### Note

- For information on key mapping of characters and numbers, see the chapter 'Appendix'.

---

## Switch between uppercase and lowercase

By default, the first letter of each word is uppercase and the rest is lowercase. Press **#\*#** to switch between the uppercase and lowercase letters.

## 9 Phonebook

Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly. For more information, see the base station's user manual.

# 10 Call log

Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly. For more information, see the base station's user manual.

# 11 Redial list

Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly. For more information, see the base station's user manual.

# 12 Sound settings

---


## Set the handset's ringtone volume

You can select among 5 ringtone volume levels or progressive (that is, the ringtone starts soft and gets louder over time if the call is not answered).

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select **↻**, then press **[Select]**.
- 3 Select **[Ring volume]**, then press **[OK]** to confirm.
- 4 Select a volume level, then press **[OK]** to confirm.  
↳ The setting is saved.



Tip

- When you turn the ringtone off,  is displayed on the screen.

---

## Set the handset's ringtone for internal calls

You can select from 11 ringtones for internal calls.

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select **↻**, then press **[Select]**.
- 3 Select **[Ringtone int.]**, then press **[OK]** to confirm.
- 4 Select a ringtone, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the handset's ringtone for external calls

You can select from 11 ringtones for external calls.

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select **↻**, then press **[Select]**.
- 3 Select **[Ringtone ext.]**, then press **[OK]** to confirm.
- 4 Select a ringtone, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select **↻**, then press **[Select]**.
- 3 Select **[Key tone]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger:

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select **↻**, then press **[Select]**.
- 3 Select **[Docking tone]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, then press **[OK]** to confirm.



↳ The setting is saved.

---

## Set the battery tone

Battery tone is the sound made when the battery is low and needs recharging.

- 1 Select **[Menu]**.
- 2 Press ◀ / ▶ to select Ⓜ, then press **[Select]**.
- 3 Select **[Battery tone]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the sound profile

You can set the sound in the earpiece or handsfree mode among 3 different profiles.

- 1 Select **[Menu]**.
- 2 Press ◀ / ▶ to select Ⓜ, then press **[Select]**.
- 3 Select **[MySound]**, then press **[OK]** to confirm.
- 4 Select a profile, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Access the sound profile during a call

Press **[Sound]** for once or several times to change the sound profile during a call.

# 13 Phone settings

You can customize the settings to make it your own phone.

Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly.


---

## Display settings

You can change the display of the phone during standby mode.


### Set the brightness

You can set the brightness of the handset screen to different levels.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Display]** > **[Brightness]**, then press **[OK]** to confirm.
- 4 Select an option, then press **[OK]** to confirm.

### Set the backlight of the LCD screen


You can set the backlight of the LCD screen and keypad flashing on or off when the phone rings.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Display]** > **[Visual alert]**, then press **[OK]** to confirm.
- 4 Select **[Flashing on]/[Flashing off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Eco mode

The **Eco** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Eco mode]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, and press **[OK]** to confirm.  
↳ The setting is saved.  
↳ **eco** is displayed in standby mode.

---


### Note

- When **ECO** mode is set to **[On]**, the connection range between the handset and the base station can be reduced.

---

## ECO+ mode

When the **ECO+** mode is activated, it eliminates the transmission power of the handset and base station in standby mode.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[ECO+ mode]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, and press **[OK]** to confirm.  
↳ The setting is saved.

---

### Note

- Make sure that all the handsets registered to the base station are D6350 in order to have the **ECO+** feature functioning properly.
- When **ECO+** is activated, the standby time is reduced. This is because in **ECO+** mode the base station is not transmitting any signal in standby mode; therefore the handset needs to "listen" more frequently for signals from the base station to detect incoming calls or other requests from the base station. The time it takes for the handset to access features like call setup, call log, paging, and phonebook browsing is also delayed. The handset will not alert you to link loss in case of power loss or moving out of range.

The following table shows you the current status of the handset screen with different **Eco** mode and **ECO+** mode settings.

Eco mode	ECO+ mode	Handset icon display mode
[Off]	[Off]	<b>eco</b> and <b>ECO+</b> are off.
[Off]	[On]	<b>ECO+</b> is displayed only after the <b>ECO+</b> mode is activated during standby mode .
[On]	[Off]	<b>eco</b> is displayed.
[On]	[On]	<b>eco</b> is displayed and changed to <b>ECO+</b> when the <b>ECO+</b> mode is activated in standby mode.

## Name the handset

The name of the handset can be up to 16 characters.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select ⚙, then press **[Select]**.
- 3 Select **[Phone name]**, then press **[OK]** to confirm.
- 4 Enter or edit the name. To erase a character, select **[Clear]**.
- 5 Press **[Save]** to confirm.  
↳ The setting is saved.

### Note

- You can see the handset name in standby mode only after you have set it through this menu.

## Set the date and time

For further information, see chapter 'Get started', sections 'Set the date and time' and 'Set the date and time format'.

## Set the display language

### Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select ⚙, then press **[Select]**.
- 3 Select **[Language]**, then press **[OK]** to confirm.
- 4 Select a language, then press **[OK]** to confirm.  
↳ The setting is saved.

# 14 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

---

## Set the alarm

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select ⌚, then press **[Select]**.
- 3 Select **[On/off]** > **[On]/[Off]**, then press **[OK]** to confirm.
- 4 Select **[Alarm time]**, then press **[OK]** to confirm.
- 5 Enter an alarm time, then press **[OK]** to confirm.
- 6 Select **[Repetition]**, then press **[OK]** to confirm.
- 7 Select an alarm occurrence, then press **[OK]** to confirm.
- 8 Select **[Alarm tone]**, then press **[OK]**.
- 9 Select a tone from options, then press **[OK]** to confirm.  
↳ The alarm is set and ⌚ is displayed on the screen.



Tip

- Press \*INT to switch between **[am]/[pm]** (country dependent).

- 2 Press ◀/▶ to select ⌚, then press **[Select]**.
- 3 Select **[On/off]** > **[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## When the alarm rings

- Press **[Off]** to turn off the alarm.
- Press **[Snooze]** (or any key except **[Off]**) to snooze.  
↳ The alarm rings again after 5 minutes. After you snooze it for 3 times, the snooze function is off.

---

## Turn off the alarm

---

### Before the alarm rings

- 1 Select **[Menu]**.

# 15 Privacy mode

You can access the privacy mode menu to block outgoing and incoming calls.

---

## Call barring (block outgoing calls)

You can block outgoing calls to numbers, such as overseas calls or undesirable hotlines by barring calls that start with certain digits. You can create 4 sets of numbers with 4 digits at maximum for each set of numbers. When you make a call that starts with one of these 4 sets of numbers, the outgoing call is then barred.

---

### Activate/deactivate the call barring mode

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select %, then press **[Select]**.
- 3 Enter the privacy mode PIN/passcode. The default PIN/passcode is 0000. Then press **[OK]** to confirm.
- 4 Select **[Call barring] > [Barring mode] > [On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Add new numbers to the call barring list

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select %, then press **[Select]**.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Select **[Call barring] > [Barring number]**, then press **[OK]** to confirm.

- 5 Select a number from the list, then press **[OK]** to confirm.
- 6 Type or edit the number, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Block incoming calls

### Note

- Make sure you have subscribed to the caller ID service before you use this feature.

There are two ways to block incoming calls:

- block anonymous calls;
- create a blacklist.

---

### Block anonymous calls

You can block calls without identity in order to reduce unwanted calls, like calls from telemarketers.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select %, then press **[Select]**.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Select **[Call block] > [Anonymous call] > [On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Blacklist

You can put numbers into the blacklist to block incoming calls from certain undesirable numbers. You can create 4 sets of numbers with 24 digits at maximum for each set of numbers. When there is an incoming call with leading digits that match any one of these 4 sets of numbers, the ringer will be muted.

Example:

Block number = 0123

Incoming call number = 0123456789

The call is blocked.

Block number = 23456789

Incoming call number = 03123456789

The call is not blocked.

#### Note

- The contact's name in phonebook will not be displayed if this contact's number matches the record saved in the blacklist.

### Activate/deactivate the blacklist

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select **⌘**, then press **[Select]**.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Select **[Call block] > [Blacklist] > [Block mode] > [On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

### Create a blacklist

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select **⌘**, then press **[Select]**.
- 3 Enter the privacy mode PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Select **[Call block] > [Blacklist] > [Block number]**, then press **[OK]** to confirm.
- 5 Enter the number, then press **[OK]** to confirm.  
↳ The setting is saved.

## Silent mode

You can set your phone to silent mode and enable it for a specific duration when you do not want to be disturbed. When the silent mode is turned on, your phone does not ring

and does not sound the key tone and docking tone.

#### Note

- When you press **⏻** to find your handset, or when you activate the alarm, your phone still sends alert even when the silent mode is activated.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select **⌘**, then press **[Select]**.
- 3 Enter the privacy mode PIN/passcode.
- 4 Select **[Silent mode]**, then press **[OK]** to confirm.
- 5 Select **[On/off] > [On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.
- 6 Select **[Start & end]**, then press **[OK]** to confirm.
- 7 Set the time, then press **[OK]** to confirm.  
↳ The setting is saved.

#### Note

- When the silent mode is set to **[On]**, **🔕** is displayed. **🔕** is displayed during the preset time for the silent mode.

## Exclude the contacts from silent mode

You can select the length of ring delay and set the contacts to be excluded from the phonebook. Ring delay is the number of rings that will be muted before the rings become audible on the phone.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select **⌘**, then press **[Select]**.
- 3 Select **[Silent mode]**, then press **[OK]** to confirm.

- 4 Select **[Exception]**, then you can select from these two options:
  - Select **[On/off] > [On]/[Off]** to activate/deactivate the silent mode, then press **[OK]** to confirm.
  - Select **[Ring delay]**, then select an option.
- 5 Press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- If **[Exception]** is set to **[On]** and **[Ring delay]** option is selected, the handset rings only after length of ring delay selected is reached.
- Make sure that the contact under the **[Set exception]** option of the phonebook menu is set to **[On]** before you can exclude this contact from the silent mode.

---

## Change the privacy mode PIN/passcord

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select **🔒**, then press **[Select]**.
- 3 Enter the old PIN/passcode. The default PIN is 0000. Then press **[OK]** to confirm.
- 4 Select **[Change PIN]**, then press **[OK]** to confirm.
- 5 Enter the new PIN/passcode, then press **[OK]** to confirm.
- 6 Enter the new PIN/passcode again, then press **[OK]** to confirm.  
↳ The setting is saved.

# 16 Baby monitor

You can use your phone as a baby monitor. The handset can be set as a baby unit. It sends an alert to the parent unit (which can be an additional handset or an external line) if the sound level exceeds the set limit.

## ! Caution

- Make sure the baby unit and the cord are always out of reach of the baby.
- Place the baby unit at least 1 meter/3 feet but not more than 2 meters/6 feet away from the baby.



## Activate/Deactivate the baby unit

### ☰ Note

- When activating the baby monitor for the first time, a notification message is displayed to set the parent unit (see 'Set the parent unit' on page 30).
- Make sure that the selected baby unit and parent handset unit are both **Philips D63** models in order to have this feature functioning properly.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select 📞, then press **[Select]**.
- 3 Select **[Activate]**, then press **[OK]** to confirm.  
↳ The baby unit is activated. 📞 is displayed.

## ✳ Tip

- To deactivate the baby monitor, or to exit from baby monitor mode, press **[Off]**.

## Set the parent unit

The baby unit can send alert to other **D63** handsets registered on the same base or to the external line. External line can be a mobile phone or another fixed line outside the house.

### ☰ Note

- Make sure that any prefix digits and/or country code are included when you send an alert.

## Send to other handsets

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select 📞, then press **[Select]**.
- 3 Select **[Send alert to]** > **[Connected line]**, then press **[OK]** to confirm.
- 4 Select a handset, then press **[OK]** to confirm.

### ☰ Note

- Make sure that the distance between the baby unit and the parent unit is at least 1.5 meter away from each other to prevent the howling effect.

## Send to an external line

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select 📞, then press **[Select]**.
- 3 Select **[Send alert to]** > **[External line]**, then press **[OK]** to confirm.




- 4 Enter a telephone number, then press **[Save]** to confirm.

#### Note

- You can still send an alert to the external line even though it is in the blacklist (see 'Blacklist' on page 27).
- If the external line is in the outgoing call block list, it will be barred and the alert will not be sent (see 'Call barring (block outgoing calls)' on page 27).

---

## Send to a contact from the phonebook


- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Send alert to]** > **[Select number]**, then press **[OK]** to confirm.
- 4 Select a contact from the phonebook, then press **[OK]** to confirm.

---

## Set the baby cry level

You can set the baby cry level to adjust the sensitivity of the baby monitor.

<b>[Mild]</b>	More sensitive
<b>[Moderate]</b>	Default
<b>[Loud]</b>	Less sensitive

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Baby cry level]**, then press **[OK]** to confirm.
- 4 Select a new setting, then press **[OK]** to confirm.  
↳ The setting is saved.


# 17 Services

The phone supports a number of features that help you handle and manage the calls. Make sure that all the handsets registered to the base station are **Philips D63** models in order to have this feature functioning properly.


## Call list type

You can set if you can see all incoming calls or only missed calls from the call log.

### Select the call list type

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Call list type]**, then press **[OK]** to confirm.
- 4 Select an option, then press **[OK]** to confirm.


## Auto conference

To join an external call with another handset, press .

### Note

- This feature is available only for multi-handset versions.

## Activate/Deactivate auto conference


- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Conference]**, then press **[OK]** to confirm.

- 4 Select **[Auto]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

## Network type

### Note

- This is a country dependent feature. It only applies to models with network type support.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Network type]**, then press **[OK]**.
- 4 Select a network type, then press **[OK]**.  
↳ The setting is saved.


## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

### Note

- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

## Set auto prefix

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Auto prefix]**, then press **[OK]** to confirm.


- 4 Enter the detect number; then press **[OK]** to confirm.
- 5 Enter the prefix number; then press **[OK]** to confirm.  
↳ The setting is saved.

#### Note

- This is a country dependent feature.
- To enter a pause, press and hold **#\*\*A**.
- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.
- The feature is unavailable if the dialed number starts with **\*** and **#**.

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select , then press **[Select]**.
- 3 Select **[Recall time]**, then press **[OK]** to confirm.
- 4 Select an option, then press **[OK]** to confirm.  
↳ The setting is saved.


## Dial mode

#### Note

- This feature is country dependent and only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and


pulse (rotary) dial. Consult the service provider for detailed information.

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select , then press **[Select]**.
- 3 Select **[Dial mode]**, then press **[OK]** to confirm.
- 4 Select an option, then press **[OK]** to confirm.  
↳ The setting is saved.

## First ring

Your phone can cancel the first ring before the caller ID is displayed on the screen. You can change this setting to suit your preference. This feature only applies to models with first ring support.

### Turn the first ring on/off

- 1 Select **[Menu]**.
- 2 Press **◀/▶** to select , then press **[Select]**.
- 3 Select **[First ring]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, press **[OK]** to confirm.  
↳ The setting is saved.

#### Note


- If you have set the first ring to **[Off]**, the first ring sound is always muted.

## Auto clock

#### Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Auto clock]**, then press **[OK]** to confirm.
- 4 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved. .

---


## Register additional handsets

You can register additional handsets to the base station (see 'Register your handset' on page 8).

---

## Unregister handsets

If two handsets share the same base station, you can unregister a handset with another handset.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Unregister]**, then press **[OK]** to confirm.
- 4 Select the handset to be unregistered.
- 5 Press **[OK]** to confirm.  
↳ The handset is unregistered.

---


### Note

- A handset cannot unregister itself.

---

## Restore default settings

You can reset your phone settings to the original factory settings.

- 1 Select **[Menu]**.
- 2 Press ◀/▶ to select , then press **[Select]**.
- 3 Select **[Reset]**, then press **[OK]** to confirm.  
↳ A confirmation request is displayed on the handset.
- 4 Press **[OK]** to confirm.  
↳ All settings (except the phonebook) are reset.

# 18 Technical data

## General specification and features

- Talk time: 18 hours
- Standby time: 250 hours
- Range indoor: 50 meters
- Range outdoor: 300 meters
- Caller identification standard support: FSK, DTMF

## Battery

- Philips: 2 × AAA Ni-MH 1.2V 650 mAh rechargeable batteries

## Power adapter

Base and charger

- Tenpao, S003GV0600050 , input: 100-240V~, 50/60 Hz 150 mA, output: 6 Vdc 500 mA

## Power consumption

- Power consumption in idle mode: around 0.3W

## Weight and dimensions (D630)

- Handset: 119.5 grams  
163.7 × 47 × 23.5 mm (H × W × D)
- Charger: 42.8 grams  
25 × 77.2 × 82 mm (H × W × D)

# 19 Notice

## Declaration of conformity

Hereby, Gibson Innovations declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

## Compliance with EMF

This product complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

## Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

### Removing the disposable batteries

To remove the disposable batteries, see section 'Install the supplied batteries'.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

### Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box),

polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# 20 Frequently asked questions

## No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays **[Register your Handset]**, put the handset on the base until the signal bar appears.



### Tip

- For further information, see 'Register additional handsets' on the Services section.

## If I fail to pair (register) the additional handsets to the base station, what do I do?

- Your base memory is full. Unregister the unused handsets and try again (see 'Unregister handsets' on page 34).
- If registration fails, unplug the power adapter from the base station and plug it back. Wait for 15 seconds, and then repeat the registration procedure.

## The range is short. How can I improve it?

The range is subject to environmental factors, like electrical devices or walls in between.

- Move the base station to another corner/room.
- Move the base station away from other electrical appliances nearby that could interfere with the range (like routers, TV, radio, etc.).
- Do not put the base station on a metallic desk or a metallic table top.
- Turn off the ECO mode.

## My handset is in searching or unavailable status, what do I do?

- Make sure that the base station has power supply.
- Move the handset closer to the base station.
- Register the handset to the base station.

## I have chosen a wrong country in Welcome screen, what do I do?

Reset your phone settings to the original factory settings (see 'Restore default settings' on page 34).

## I have chosen a wrong language which I cannot read, what do I do?

- 1 Press to go back to the standby screen.
- 2 Press to access the main menu screen.
- 3 Press / to select , then you see one of the following texts appear on the screen:

---

Telefooninst. > Taal

Phone setup > Language

Réglages > Langue

Telefon-Setup > Sprache

---

Config. telef. > Lingua

- 4 Select it to access the language options.

- 5 Select your own language.

## The handset loses connection with the base or the sound interrupts during a call.

- The handset is nearly out of range. Move it closer to the base station.
- Check if the **ECO** mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions.
- Re-register the handset to the base station.

## No dialing tone/no free line.

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.
- The handset is in **[searching]** or **[Unavailable]** status. Register the handset to the base station..

## No docking tone.

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

## I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself.



Contact your service provider to change the settings.

**The handset on the charger does not charge or the battery discharges too fast.**

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger: If the docking tone is turned on, you can hear the docking tone when you place the handset on the charging cradle.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- The battery is not fully recharged. Leave the handset on the charging cradle for at least 8 hours or until the battery icon on the handset stops scrolling and indicates full bar.
- The batteries are old or defective. Purchase and replace with new rechargeable batteries with the same specifications.

**No display.**

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

**Bad audio (crackles, echo, etc.).**

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.
- The phone receives interference from the DSL (digital subscriber line) connection. Install a DSL filter to prevent the noise. Contact your service provider for the DSL filter.

**The handset does not ring.**

- Make sure the handset ringtone is turned on.
- Make sure the handset is registered to the base station.

**The caller ID does not display.**

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

 **Note**

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

# 21 Appendix

## Text and number input tables

Key	Upper case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/ Swedish/Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian/Lithuanian/Estonian/ Latvian/Bulgarian)
0	Space . 0, / ; : " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	A B C 2 Å Ä Æ Á Â Ã Ä Å Æ Ç Ć
3	D E F 3 È É Ê Ë Ì Í Î Ï Ð
4	G H I 4 Ğ Ĩ Ĵ ĵ Ŀ
5	J K L 5 Æ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Š ſ Π Θ Σ
8	T U V 8 Ù Ú Û Ü Ů Ű
9	W X Y Z 9 Ø Æ Ξ Ψ Ž
Key	Lower case characters (for English/ French/ German/ Italian/Turkish/ Portuguese/Spanish/Dutch/Danish/ Finnish/Norwegian/Swedish)
0	Space . 0, / ; : " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	a b c 2 à â ä æ á ã å ä å ç ĉ
3	d e f 3 è é ê ë è ε ē Δ ϕ
4	g h i 4 ĝ ħ ĩ ĵ ĺ ĳ
5	j k l 5 Æ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 ß š ſ Π Θ Σ
8	t u v 8 ù ú û ü ů ű
9	w x y z 9 ø æ Ξ Ψ ž

Key	Upper case characters (for Greek)
0	Space . 0, / ; : " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	A B Γ 2 A B C Æ Á Ä Ç
3	Δ E Z 3 D E F É
4	H Θ I 4 G H I
5	K Λ M 5 J K L
6	N Ξ O 6 M N O Ñ Ö
7	Π Ρ Σ 7 P Q R S Β
8	T Υ Φ 8 T U V Ü
9	X Ψ Ω 9 W X Y Z Ø
Key	Lower case characters (for Greek)
0	Space . 0, / ; : " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	α β γ 2 a b c à æ ä å
3	δ ε ζ 3 d e f è é
4	η θ ι 4 g h i ñ
5	κ λ μ 5 j k l Æ
6	ν ξ ο 6 m n o ñ ö ò
7	π ρ σ ς 7 p q r s β
8	τ υ φ 8 t u v ù ü
9	χ ψ ω 9 w x y z ø
Key	Upper case characters (for Serbian)
0	Space . 0, / ; : " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	A B C Ђ Ѓ Ћ 2 A B B Г
3	D E F J Д 3 Д E Ж 3 Δ ϕ
4	G H I Љ 4 И Й К Л Г
5	J K L Њ 5 M H O П Л
6	M N O Ћ 6 P C T V
7	P Q R S Ж Š 7 Ф X Ц Ч Π Θ Σ Β
8	T U V 8 Ш Щ Ъ Ы
9	W X Y Z Ž 9 Б Э Ю Я Ω Ξ Ψ

Key	Lower case characters (for Serbian)
0	Space . 0 , / : ; " ' ! ; ? ; * + - % \ ^ ~
1	1 @ _ # = < > ( ) & € £ \$ ¥ [ ] { } ¢ § ...
2	a b c Ђ Ѓ Ї 2 А Б В Г
3	d e f j Đ З Д Е Ж З
4	g h i Љ 4 И Й К Л
5	j k l Њ 5 М Н О П
6	m n o Ћ 6 Р С Т У
7	p q r s Ж Š 7 Ф Х Ц Ч П Θ Σ Β
8	t u v Lj 8 Ш Щ Ъ Ы
9	w x y z Ž 9 Ь Э Ю Я Ω Ξ Ψ

# 22 Index

---

## A

additional handsets	8
alarm	26
answer a call	13
auto clock	33
auto conference	32

---

## B

baby monitor	30
battery	7, 9, 35
block incoming calls	27
block outgoing calls	27

---

## C

call list type	32
call log	20
caller ID	13
calling	13
conference call	15, 16, 32

---

## D

date setting	8, 33
default settings	34
dial mode	33
display icons	12
disposal	36

---

## E

ECO mode	24
ECO+ mode	24

---

## G

GAP	36
-----	----

---

## I

intercom	16
internal call	16

---

## L

language setting	8
------------------	---

---

## M

main menu icons	11
mute	14

---

## N

name the handset	25
network type	32

---

## P

phone settings	24
phonebook	19
PIN	
privacy mode	29
registration	9
power adapter	35
privacy mode	27

---

## R

redial	21
register/unregister	34
ringtone	22

---

## S

safety	3
signal strength	10
silent mode	28
sounds	
docking	22
keytone	22
sound profile	23
speaker phone	14
standby mode	10

---

## T

text entry	18
time setting	8, 33
troubleshooting/FAQ	38

---

two calls/call on hold 14

---

V

volume adjustment 14



2016 © Gibson Innovations Limited. All rights reserved.  
This product has been manufactured by, and is sold  
under the responsibility of Gibson Innovations Ltd., and  
Gibson Innovations Ltd. is the warrantor in relation to  
this product.

Philips and the Philips' Shield Emblem are registered  
trademarks of Koninklijke Philips N.V. and are used under  
license from Koninklijke Philips N.V.

UM\_D630\_635\_12\_EN\_V4.0  
wk1612

**CE 0168**

