


# 4 帮助

设备未启动

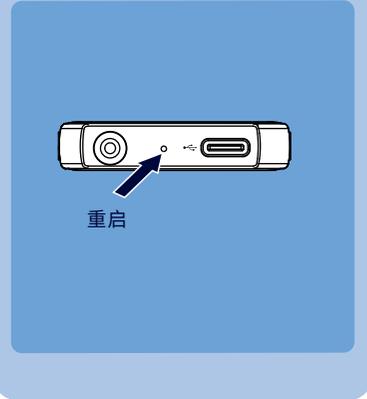

详情请参阅用户手册中的支持信息



Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited, or one of its affiliates, and MMD Hong Kong Holding Limited, is the warrantor in relation to this product.

SA1508\_93\_UM\_V1.0




PHILIPS  
MP3播放器  
SA1508

## 快速入门指南



注册您的产品，并在获得支持  
[www.philips.com/support](http://www.philips.com/support)

### 打开包装

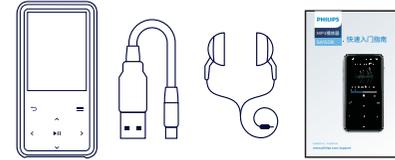

### 外放设计




### 电脑规格/PC requirements

兼容/Compatible with

Windows 7/8/10/Mac OS

# 1 安装

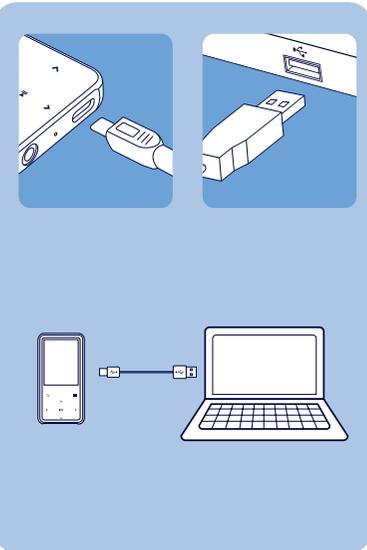

# 2 传输



如果找不到“飞利浦”文件夹：  
1. 检查电脑USB接口是否正常工作，  
2. 检查电脑操作系统是否支持，  
3. 拔出设备重新插入。  
注：如果以上操作均无效果请联系产品售后，我们竭诚为您服务！

# 3 使用

⏻	长按开关机，开机状态下，短按锁屏/亮屏
☰	菜单键：在播放界面短按可编辑文件
A-B	A-B键：在播放界面可选择复读内容
SPEED	SPEED键：在播放时可以改变播放速度
^ / v	在菜单界面为上下键，在播放界面可调节音量键
< / >	在菜单界面为左右键 在播放界面短按上一曲或下一曲，长按快退或快进
↶	返回键：返回上一级
▶   ⏸	确认、播放与暂停
📁	TF卡插口
🎧	3.5mm耳机插口
🔌	充电或传输数据