Always there to help you

Register your product and get support at www.philips.com/welcome



HTD3510 HTD3540 HTD3570

User manual



Contents

1	Important Safety Care for your product Care of the environment	2 2 3 3
2	Your home theater Main unit Remote control Connectors	4 4 4 5
3	Connect and set up Connect speakers Connect to TV Connect audio from TV and other	6 6 7
	devices Set up speakers Set up EasyLink (HDMI-CEC control)	9 9 10
4	Use your home theater Access the home menu Discs Data files USB storage devices Audio, video, and picture options Radio MP3 player Karaoke Choose sound	11 11 11 12 13 13 14 15 15
5	Change settings Language settings Picture and video settings Audio settings Parental control settings Display settings Energy saving settings Restore default settings	17 17 17 18 18 18 18
6	Update software Check software version	19 19

7	Product specifications	20
8	Troubleshooting	22
9	Notice Copyright Trademarks	24 24 24
10	Language code	2.5

1 Important

Read and understand all instructions before you use your home theater. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are spilt on or into the product, disconnect it from the power outlet immediately. Contact Philips Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.

Risk of short circuit or fire!

 Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to the home theater!

 For wall-mountable products, use only the supplied wall mount bracket. Secure the

- wall mount to a wall that can support the combined weight of the product and the wall mount. Koninklijke Philips Electronics N.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- For speakers with stands, use only the supplied stands. Secure the stands to the speakers tightly. Place the assembled stands on flat, level surfaces that can support the combined weight of the speaker and stand.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Visible and invisible laser radiation when open. Avoid exposure to beam.
- Do not touch the disc optical lens inside the disc compartment.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

 Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation.
 Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaine, etc.).
- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

 The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.

- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.



This is CLASS II apparatus with double insulation, and no protective earth provided.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove discs from the disc compartment if you are not using the product for an extended period of time.
- Use only microfiber cloth to clean the product.

Care of the environment



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

 
Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products and batteries. The correct disposal of these products helps prevent potentially negative consequences on the environment and human health. Your product contains batteries, which cannot be disposed of with normal household waste. Please inform yourself about the local rules on separate collection of batteries. The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.

Please visit www.recycle.philips.com for additional information on a recycling center in your area.

2 Your home theater

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your home theater at www.philips.com/welcome.

Main unit




- 1 Disc compartment
- (2) Display panel
- ③ ▲ (Open/Close) Open or close the disc compartment, or eject the disc.
- (4) ►II (Play/Pause)
 Start, pause or resume play.
- (5) SOURCE
 Select an audio or video source for the home theater.
- 6 Φ (Standby-On) Switch the home theater on or to standby.

Front panel	Indication	
display		
ноппе	Home	
CB9 10	Radio	
d ISC	Disc	
AUH	Aux In	
OPE I	Optical In	
ANS 10	Audio In	
OPEN	Open	
CLOSE	Close	

LORd	Load
PRUSE	Pause
	Mute

Remote control

This section includes an overview of the remote control.

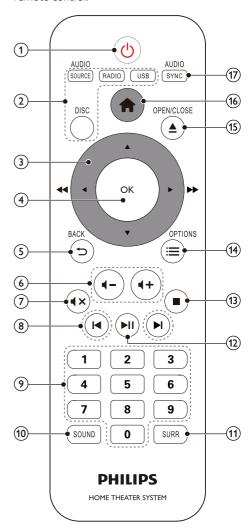

1 (Standby-On)

- Switch the home theater on or to standby.
- When EasyLink is enabled, press and hold for at least three seconds to switch all connected HDMI CEC compliant devices to standby.

Source buttons

- DISC: Switch to disc source. Access or exit the disc menu when you play a disc.
- AUDIO SOURCE: Select an audio input source.
- RADIO: Switch to FM radio.
- USB: Switch to USB storage device.

3 Navigation buttons

- Navigate menus.
- In video mode, press left or right to fast backward or fast forward; press up or down to slow forward or slow backward (for DVD video only).
- In radio mode, press left or right to search a radio station; press up or down to fine tune a radio frequency.

(4) **OK**Confirm an entry.

5 SACK
Return to a previous menu screen.

(6) ◀ +/-

Increase or decrease volume.

7 ◀× (Mute)

Mute or restore volume.

8 I ✓ / ►I (Previous/Next)

- Skip to the previous or next track, chapter or file.
- In radio mode, select a preset radio station.
- 9 Numeric buttons Select an item to play.
- (10) SOUND
 Select a sound mode.
- 11) SURR

Select surround sound or stereo sound.

(12) ► II (Play/Pause)

Start, pause or resume play.

(Stop) ■ (Stop)

Stop play.

(14) **≔** OPTIONS

Access more play options while playing a disc or a USB storage device.

(15) ≜ (Open/Close)

Open or close the disc compartment.

(16) **♠** (Home)

Access or exit the home menu.

(17) AUDIO SYNC

 
- Select an audio language or channel.
- Press and hold to access audio delay setting, then press Navigation buttons (left/right) to delay the audio to match the video.

Connectors

This section includes an overview of the connectors available on your home theater.

Front

Front connectors



← (USB)

Audio, video or picture input from a USB storage device.

 
(2) MIC

Audio input from a microphone.

(3) AUDIO IN

Audio input from an MP3 player (3.5mm jack).

Back connectors



AC MAINS
 Fixed AC power cable.

SPEAKERS

Connect to the supplied speakers and subwoofer.

(3) VIDEO OUT

Connect to the composite video input on the TV.

(4) AUDIO IN-AUX

Connect to an analog audio output on the TV or an analog device.

(5) DIGITAL IN-OPTICAL

Connect to an optical audio output on the TV or a digital device.

6 HDMI OUT (ARC)

Connect to the HDMI input on the TV.

(7) FM ANTENNA

Connect the supplied antenna for radio reception.

3 Connect and set up

This section helps you connect your home theater to a TV and other devices, and then set it up.

For information about the basic connections of your home theater and accessories, see the quick start guide.




Note

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.

Connect speakers

The speaker cables are color-coded for easy connection. To connect a speaker to your home theater, match the color on the speaker cable to the color on the connector.

Speaker position plays a critical role in setting up a surround sound effect. For best effect, position all the speakers towards the seating position and place them close to your ear level (seated).

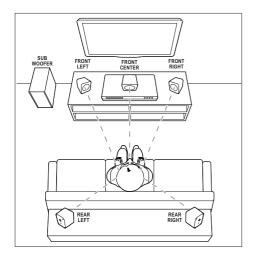

*The actual speaker shapes may vary from the illustration above.



Note

 Surround sound depends on factors such as room shape and size, type of wall and ceiling, windows and reflective surfaces, and speaker acoustics. Experiment with the speaker positions to find the optimum setting for you.

Follow these general guidelines for speakers placement.

- 1 Seating position:
 This is the center of your listening area.
- 2 FRONT CENTER (front center) speaker: Place the center speaker directly in front of the seating position, either above or below yourTV.
- 3 FRONT LEFT (front left) and FRONT RIGHT (front right) speakers:
 Place the left and right speakers in the front, and at equal distance from the center speaker. Make sure that the left, right, and the center speakers are at equal distance from your seating position.
- 4 REAR LEFT (rear left) and REAR RIGHT (rear right) speakers:

Place the rear surround speakers to the left and right side of your seating position, either in line with it or slightly behind it.

5 SUBWOOFER (subwoofer):
Place the subwoofer at least one meter
to the left or right of the TV. Leave about
10-centimeter clearance from the wall.

Connect to TV


Connect your home theater to a TV to watch videos. You can listen to the TV audio through your home theater speakers.

Use the best quality connection available on your home theater and TV.

Option 1: Connect to TV through HDMI (ARC)

Best quality video

Your home theater supports HDMI version with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your home theater by using a single HDMI cable.

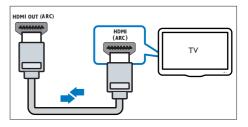


- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI ARC connector on the TV.
 - The HDMI ARC connector on the TV might be labeled differently. For details, see the TV user manual.
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.

- HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 10)
- If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 10)

Option 2: Connect to TV through standard HDMI

Best quality video

If your TV is not HDMI ARC compliant, connect your home theater to the TV through a standard HDMI connection.

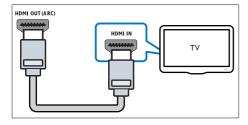

- Using a High Speed HDMI cable, connect the HDMI OUT (ARC) connector on your home theater to the HDMI connector on the TV.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 9).
- On your TV, turn on HDMI-CEC operations. For details, see the TV user manual.
 - HDMI-CEC is a feature that enables CEC compliant devices that are connected through HDMI to be controlled by a single remote control, such as volume control for both the

- TV and the home theater. (see 'Set up EasyLink (HDMI-CEC control)' on page 10)
- 4 If you cannot hear the TV audio through your home theater, set up the audio manually. (see 'Set up the audio' on page 10)




Note

 If your TV has a DVI connector, you can use an HDMI/ DVI adapter to connect to TV. However, some of the features may not be available.

Option 3: Connect to the TV through composite video

Basic quality video

 If yourTV does not have HDMI connectors, use a composite video connection. A composite connection does not support high-definition video.



- Using a composite video cable, connect the VIDEO OUT connector on your home theater to the VIDEO IN connector on the TV.
 - The composite video connector might be labeled AV IN, COMPOSITE, or BASEBAND.
- 2 Connect an audio cable to hear the TV audio through your home theater (see 'Connect audio from TV and other devices' on page 9).
- When you watch TV programs, press SOURCE on your home theater repeatedly to select the correct audio input.

4 When you watch videos, switch your TV to the correct video input. For details, see the TV user manual.

Connect audio from TV and other devices

Play audio from TV or other devices through your home theater speakers.

Use the best quality connection available on your TV, home theater, and other devices.




Note

 When your home theater and TV are connected through HDMI ARC, an audio connection is not required (see 'Option 1: Connect to TV through HDMI (ARC)' on page 7).

Option 1: Connect audio through a digital optical cable

 
Best quality audio



- Using an optical cable, connect the OPTICAL connector on your home theater to the OPTICAL OUT connector on the TV or other device.
 - The digital optical connector might be labeled **SPDIF** or **SPDIF OUT**.

Option 2: Connect audio through analog audio cables

Basic quality audio

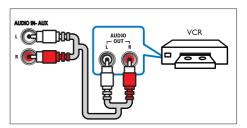

Using an analog cable, connect the AUX connectors on your home theater to the AUDIO OUT connectors on the TV or other device

Set up speakers

Set up the speakers manually to experience customized surround sound.

Before you start

Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Audio] > [Speaker Setup].
- 4 Press the Navigation buttons and OK to select and change:
 - [Speakers Volume]: Set the volume level of each speaker.
 - [Speakers Delay]: Set the delay time for speakers which are placed closer to the seating position in order to obtain equal audio transmission from all the speakers.

Set up EasyLink (HDMI-CEC control)

This home theater supports Philips EasyLink, which uses the HDMI-CEC (Consumer Electronics Control) protocol. EasyLink-compliant devices that are connected through HDMI can be controlled by a single remote control.



Note

- Depending on the manufacturer, HDMI-CEC is known by many names. For information on your device, see the user manual of the device.
- Philips does not guarantee 100% interoperability with all HDMI-CEC devices.

Before you start

- Connect your home theater to the HDMI-CEC compliant device through HDMI connection.
- Make the necessary connections described in the quick start guide, and then switch the TV to the correct source for your home theater.

Enable EasyLink

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Video], and then press OK.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [EasyLink] > [On].
- On your TV and other connected devices, turn on HDMI-CEC control. For details, see the user manual of the TV or other devices.
 - On yourTV, set the audio output to 'Amplifier' (instead ofTV speakers).
 For details, see the TV user manual.

EasyLink controls

With EasyLink, you can control your home theater, TV, and other connected HDMI-CEC compliant devices with a single remote control.

- [One Touch Play] (One-touch play): If one-touch play is enabled, press Φ (Standby-On) on the remote control of your home theater to wake up the TV from standby.
- [One Touch Standby] (One-touch standby): If one-touch standby is enabled, your home theater can switch to standby with the remote control of the TV or other HDMI-CEC devices.
- [Sys Audio Control] (System audio control): If system audio control is enabled, the audio of the connected device is output through your home theater speakers automatically when you play the device.
- [Audio Mapping] (Audio input mapping):If system audio control does not work, map the connected device to the correct audio input connector on your home theater: (see 'Set up the audio' on page 10)



Note

To change the EasyLink control settings, press
 (Home), select [Setup] > [Video] > [HDMI Setup] > [EasyLink Setup] > [EasyLink].

Set up the audio

If you cannot hear the audio output of a connected device through your home theater speakers, do the following:

- Check that you have enabled EasyLink on all the devices, (see 'Set up EasyLink (HDMI-CEC control)' on page 10) and
- on your TV, set the audio output to "Amplifier" (instead of TV speakers). For details, see the TV user manual, and
- setup the EasyLink audio control.
- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.

- 3 Select [Video], and then press OK.
- 4 Select [HDMI Setup] > [EasyLink Setup] > [Sys Audio Control] > [On].
 - To play the audio from the TV speakers, select [Off], and skip the following steps.
- Select [HDMI Setup] > [EasyLink Setup][Audio Mapping].
- 6 Follow the onscreen instructions to map the connected device to the audio inputs on your home theater.
 - If you connect your home theater to the TV through an HDMI ARC connection, make sure that the TV audio is mapped to the ARC input on your home theater.

4 Use your home theater

This section helps you use the home theater to play media from a wide range of sources.

Before you start

- Make the necessary connections described in the Quick start guide and the user manual.
- Switch the TV to the correct source for the home theater.

Access the home menu

The home menu provides easy access to connected devices, setup and other useful features in your home theater.

- 1 Press ♠ (Home).
 - → The home menu is displayed.
- 2 Press the Navigation buttons and OK to select the following:
 - [DISC]: Start disc play.
 - **[USB]**: Access the USB content browser.
 - **[Karaoke]**: Access Karaoke.
 - [Setup]: Access menus to change video, audio and other settings.
- 3 Press ♠ (Home) to exit.

Discs

Your home theater can play DVDs, VCDs, and CDs. It can also play discs that you've made at home, such as CD-R discs of photos and music.

- 1 Insert a disc into the home theater.
- If the disc does not play automatically, press DISC or select [DISC] from the home menu.
- 3 Press the play buttons to control play (see 'Play buttons' on page 12).

Play buttons

Button	Action
Navigation	Navigate menus.
buttons	
OK	Confirm an entry.
► II (Play/	Start, pause or resume play.
Pause)	
	Stop play.
 	Skip to the previous or next
	track, chapter or file.
44 / >>	Fast backwards or fast forwards.
	Press repeatedly to change the
	search speed.
Navigation	Rotate the picture clockwise or
buttons	counter-clockwise.
(left/right)	
Navigation	Flip the picture vertically or
buttons	horizontally.
(up/down)	
DISC	Access or exit the disc menu.
AUDIO	Select an audio language or
SYNC	channel.
=	Access more options when you
OPTIONS	play your audio, video, or media
	files. (see 'Audio, video, and
	picture options' on page 13)

Synchronize picture and sound

If the audio and video are not synchronized, delay the audio to match the video.

- 1 While playing video, press and hold AUDIO SYNC.
 - → Audio sync menu is displayed.
- Press the Navigation buttons (left/right) to synchronize the audio with the video, and then press OK.



Vote

 Picture and sound can be synchronized through the setup menu, press (Home), select [Setup] > [Audio]
 [Audio Sync].

Display menu for VCD and SVCD

Display the content menu on VCD and SVCD discs.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [Preferences] > [PBC].
 - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

Data files

Your home theater can play pictures, audio and video files contained in a disc or a USB storage device. Before you play a file, check that the file format is supported by your home theater (see 'File formats' on page 20).

- 1 Play the files from a disc or USB storage device.
- 2 To stop play, press ■.
 - To resume the video from where you stopped, press ► (Play).
 - To play the video from the start, press OK.



Note

 To play DivX DRM protected files, connect your home theater to a TV through an HDMI cable.

Subtitles

If your video has subtitles in multiple languages, select a subtitle language.



- Make sure that the subtitle file has the exact same name as the video file. For example, if the video file is named 'movie.avi', name the subtitle file as 'movie.srt' or 'movie.sub'.
- Your home theater supports the following file formats: .srt, .sub, .txt, .ssa, .ass, smi, and .sami. If the subtitles do not appear correctly, change the character set.
- 1 Press **□ OPTIONS**, and select a subtitle language under **SUBTITLE** option.
- 2 For DivX videos, if the subtitles do not appear correctly, continue the following steps to change the character set.
- 3 Press ♠ (Home).
- 4 Select [Setup], and then press OK.
- 5 Select [Preferences] > [DivX Subtitle].
- 6 Select a character set that supports the subtitle.

Character Set	Language
[Standard]	English, Albanian, Danish, Dutch, Finnish, French, Gaelic, German, Italian, Kurdish (Latin), Norwegian, Portuguese, Spanish, Swedish and Turkish
[Central Eur]	Albanian, Croat, Czech, Dutch, English, German, Hungarian, Irish, Polish, Romanian, Slovak, Slovene and Serbian
[Cyrillic]	Bulgarian, Belorussian, English, Macedonian, Moldavian, Russian, Serbian and Ukrainian

VOD code for DivX

Before you purchase DivX videos and play them on your home theater, register the home theater on www.divx.com using the DivX VOD code.

- 1 Press ♠ (Home).
- 2 Select [Setup], and then press OK.
- 3 Select [General] > [DivX(R) VOD Code].

→ The DivX VOD registration code for your home theater is displayed.

USB storage devices

Enjoy pictures, audio, and video stored on a USB storage device such as an MP4 player.

What you need

- A USB storage device that is formatted for FAT or NTFS file system, and complies with the Mass Storage Class.
- A media file in one of the supported file formats. (see 'File formats' on page 20)



Note

- If you use a USB extension cable, USB HUB or USB multi-reader, the USB storage device may not be recognized.
- 1 Connect a USB storage device to the (USB) connector on your home theater.
- 2 Press USB.
 - → A content browser is displayed.
- 3 Select a file and then press OK.
- 4 Use the play buttons to control play.

Audio, video, and picture options

Use advanced features when you play audio, video, or media files from a disc or a USB storage device.

Audio options

1 While playing audio, press **□ OPTIONS** repeatedly to select a repeat mode.

Video options

1 While viewing video, press ≡ OPTIONS.

- → The video options menu is displayed. Depending on the video source, some options are not available.
- Press the Navigation buttons buttons and OK to select and change:
 - [Info]: Display the play information.
 - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.
 - [Aspect ratio]: Select a display ratio of picture that matches your TV screen.
 - [Repeat]: Select a repeat play mode.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
 - [Subtitle]: Select subtitle language for video.
 - [Angle]: Select video scenes recorded in different camera angels.
 - [Microphone]: Turn the microphone on or off.
 - **[Karaoke setup]**: Access the Karaoke setup menu.
 - **[Vocal]**: Select a Karaoke audio mode, or turn off original vocals.

Picture options

- 1 While viewing pictures, press **≡** OPTIONS.
- Press the Navigation buttons and OK to select and change:
 - [Color]:Turn on or off the color mode.
 - [Photo preview]: Display the thumbnail of photos.
 - [Repeat]: Select a repeat mode for slideshow.
 - [Zoom]: Zoom into a video scene or picture. Press the Navigation buttons (left/right) to select a zoom factor.
- 3 Press I◄/►I to go to previous or next preview page.
- 4 Press the Navigation buttons and OK to select a picture.

Musical slideshow

If the picture and audio files are from the same disc or USB storage device, you can create a musical slideshow.

- 1 Select an audio track and then press **OK**.
- 2 Press SACK and then go to the picture folder.
- 3 Select a picture and then press **OK** to start the slideshow.
- **4** Press to stop slideshow.
- 5 Press again to stop music.

Radio

Listen to FM radio on your home theater, and store up to 40 radio stations.



Note

- AM and digital radio are not supported.
- If no stereo signal is detected, you are prompted to install the radio stations again.
- 1 Connect the FM antenna to the FM ANTENNA on your home theater.
 - For the best reception, place the antenna away from yourTV or other sources of radiation.
- 2 Press RADIO to switch to radio source.
 - If you have already installed the radio stations, the last channel that you listened to is played.
 - If you have not installed any radio stations, the message AUTO
 INSTALL...PRESS PLAY appears on the display panel. Press ► (Play) to install radio stations.
- 3 Use the remote control to listen or to change radio stations.

Play buttons	
Button	Action
 	Select a preset radio station.
or	
Alphanumeric	
buttons	
Navigation	Left/Right: Search for a radio
buttons	station.
	Up/Down: Fine tune a radio
	frequency.
	Press to stop the installation
	of radio stations.
	Press and hold to erase the
	preset radio station.
RADIO	Manual:
	 In radio mode, press
	RADIO. 2) When a radio
	frequency blinks, press OK
	to store the radio station. 3)
	Repeat step 1 and 2 to store
	other stations.
	Automatic:
	In radio mode, press and
	hold RADIO for three
	seconds to reinstall all the
	available radio station.

Tuning grid

In some countries, you can toggle the FM tuning grid between 50 kHz and 100 kHz.

- 1 Press RADIO to switch to radio source.
- 2 Press ■.
- Press and hold ► (Play) to toggle between 50 kHz or 100 kHz

MP3 player

Connect a MP3 player to play audio files.

What you need

- An MP3 player.
- A 3.5mm stereo audio cable.

- 1 Using the 3.5mm stereo audio cable, connect the MP3 player to the AUDIO IN connector on your home theater.
 - If you use 6.5mm stereo audio cable, connect the MP3 player to your home theater using a 3.5mm - 6.5mm converter jack.
- Press AUDIO SOURCE repeatedly until AUDIO IN appears on the display panel.
- Press the buttons on the MP3 player to select and play audio files.

Karaoke

Play a Karaoke disc on your home theater and sing along with the music.

What you need

- A Karaoke microphone.
- Karaoke discs.



Vote

 To prevent loud feedback or unexpected noise, turn the microphone volume to the minimum before you connect the microphone to your home theater;

Play karaoke music

- 1 While playing a karaoke disc, press ♠ (Home).
 - → The home menu is displayed.
- 2 Select [Karaoke], and then press OK.
 - → The karaoke setup menu is displayed.
- 3 Press the Navigation buttons (up/down) and OK to change the following settings:
 - [Microphone]: Turn the microphone on or off.
 - [Mic Volume]: Change the microphone volume.
 - [Echo Level]: Change the echo level.
 - [Karaoke Scoring]: Select a difficulty level to score your singing. After a song ends, a score is given.

- [Karaoke Idol]: Have a Karaoke contest with your friends. Follow the on-screen instructions to start the contest
- **[Key Shift]**: Change the pitch to match your voice.
- **[Vocal]**: Select a Karaoke audio mode, or turn off original vocals.

Choose sound

This section helps you choose the ideal sound for your video or music.

Sound mode

Select predefined sound modes to suit your video or music.

- 1 Press **SOUND** repeatedly to select a sound mode.
 - [Movie Mode]: Enjoy a cinematic audio experience, specially enhanced for movies.
 - [Music Mode]: Recreate the original recording environment of your music, in the studio or at a concert.
 - [Original]: Experience the original sound of your movies and music, without added sound effects.
 - [News]: Hear every word with optimized speech and clear vocals.
 - [Gaming]: Enjoy thrilling arcade sounds, ideal for action-packed video games or loud parties.

Surround sound mode

Experience an immersive audio experience with surround sound modes.

- 1 Press SURR repeatedly to select a surround mode.
 - [Multi Channel]:Traditional 5.1 channel for a more relaxing cinematic experience.

• [Stereo]: Two-channel stereo sound. Ideal for listening to music.



 If the audio source is a 2.1 channel multi-channel mode will output 5-channel stereo sound.

5 Change settings

The home theater settings are already configured for optimal performance. Unless you have a reason to change a setting, we recommend that you keep the default setting.



- You cannot change a setting that is grayed out.
- To return to the previous menu, press BACK. To exit the menu, press from (Home).

Language settings

Onscreen display language

- 1 Press **(Home)**.
- 2 Select [Setup] and then press OK.
- 3 Select [General] and then press OK.
 - [OSD Language]: Select a display language for menu.

Disc language

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
 - Select [Preferences] and then press OK.
 - [Audio]: Select an audio language for discs.
 - [Subtitle]: Select a subtitle language for discs.
 - [Disc Menu]: Select a menu language for discs.



Note

- If your preferred disc language is not available, select [Others] from the list, and enter the 4-digit language code found at the end of this user manual (see 'Language code' on page 25).
- If you select a language that is not available on a disc, the home theater uses the default language of the disc.

Picture and video settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Video] and then press OK.
 - **[TV System]**: Select a video format supported by the TV.
 - **[TV Display]**: Select a picture format to fit the TV screen.
 - [Picture Setting]: Select animation for the slide show.
 - [HD JPEG]: Enable this feature to view high-definition JPEG pictures through HDMI connection.
 - [HDMI Setup]: Access the following setup through HDMI connection.
 - * [Resolution]: Select a resolution for high definition videos.
 - * [HDMI Deep Color]: Recreate the natural world on your TV screen by displaying vivid images using billion colors. Your home theater must be connected to a Deep Color enabled TV through an HDMI cable.
 - * [Wide Screen]: Select a display format for wide screen videos.
 - * [EasyLink Setup]: Set up EasyLink control (see 'Set up EasyLink (HDMI-CEC control)' on page 10).



Note

 If you change a setting, make sure that the TV supports the new setting.

Audio settings

1 Press ♠ (Home).

Select [Setup] and then press OK.

Select [Audio] and then press OK.

- [HDMI Audio]: Set the HDMI audio output from your TV, or disable HDMI audio output from the TV.
- [Audio Sync]: Set audio delay if audio and video cannot be matched.
- [Speaker Setup]: Set up speakers for best surround sound experience.
- [Sound Mode]: Select a predefined sound mode to suit your video and music.
- [Treble/Bass]: Set the high frequency (treble) and low frequency (bass) settings of the home theater.
- [Night Mode]: Select quiet or full dynamic sound. Night mode decreases the volume of loud sounds and increases volume of sounds such as speech. Applicable to Dolby Digital encoded DVD discs only.

Parental control settings

Password and Ratings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] and then press OK.
 - [Password]: Set or change your password for parental control access.
 If you do not have a password or have forgotten your password, enter 000000.
 - [Parental Control]: Enable maturitybased restricted access for playback of DVD-video that are recorded with ratings. To play discs irrespective of the rating, select [8 Adult].

Lock disc

- 1 Press ♠ (Home).
- Select [Setup] and then press OK.
- Select [General] and then press OK.
 - [Disc Lock]: Lock the disc to restrict play. You can lock up to 20 discs on your home theater.



Note

 To play a locked disc, follow the onscreen instructions to enter the password, and then press OK,

Display settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] and then press OK.
 - [PBC]: Enable or disable the content menu navigation of VCD and SVCD discs with Play Back Control feature.

Energy saving settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [General] and then press OK.
 - [Display Dim]: Set the brightness of the home theater front panel display.
 - [Sleep Timer]: Switch the home theater to standby mode after the elapsed time.
 - [Auto Standby]: Switch the home theater to standby mode after 25 minutes of no activity when in disc or USB mode.

Restore default settings

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] > [Default], and then press OK.
- Follow the onscreen message to restore default setting.
 - → Your home theater is reset to its default settings, except for password, parental control and disc lock settings.

6 Update software

Philips continually tries to improve its products. To get the best features and support, update your home theater with the latest software.

Compare the version of your current software with the latest version on www.philips.com/ support. If the current version is lower than the latest version available on the Philips support website, upgrade your home theater with the latest software.



Caution

 Do not install a lower version of software than the current version installed on your product. Philips is not liable for problems caused due to software downgrade.

Check software version

Check the version of the current software installed on your home theater.

- 1 Press ♠ (Home).
- 2 Select [Setup] and then press OK.
- 3 Select [Preferences] > [Version Info].
 - → The software version is displayed.

Update software through USB

What you need

- A USB flash drive that is FAT or NTFSformatted, with at least 75MB of memory.
 Do not use a USB hard drive.
- A computer with Internet access.
- An archive utility that supports the ZIP file format.

Step 1: Download the latest software

- Connect a USB flash drive to your computer.
- In your web browser, go to www.philips. com/support.
- 3 At the Philips Support website, find your product and locate the Software and drivers.
 - → The software update is available as a zip file.
- 4 Save the zip file in the root directory of your USB flash drive.
- 5 Use the archive utility to extract the software update file in the root directory.
- 6 Disconnect the USB flash drive from your computer.

Step 2: Update the software



Caution

- Do not switch off the home theater or remove the USB flash drive during the update.
- 1 Connect the USB flash drive containing the downloaded file to your home theater.
 - Make sure that the disc compartment is closed and there is no disc inside.
- 2 Switch your TV to the correct source for your home theater.
- Follow the onscreen instructions to confirm the update.
 - Once complete, the home theater automatically switches off and restarts. If it does not, disconnect the power cord for a few seconds and then reconnect it.

7 Product specifications



Note

 Specifications and design are subject to change without notice.

Region codes

The type plate on the back or bottom of the home theater shows which regions it supports.

Country	DVD
Europe, United Kingdom	
Asia Pacific, Taiwan, Korea	
Latin America	
Australia, New Zealand	
Russia, India	
China	

Media formats

 DVD-Video, DVD+R/+RW, DVD-R/-RW, DVD+R/-R DL, CD-R/CD-RW, Audio CD, Video CD/SVCD, Picture files, MP3 media, WMA media, DivX media, USB storage device

File formats

Audio: .mp3, .wma

- Video: .avi, .divx, .mpg, .mpeg,
- Picture: .jpg, .jpeg

Amplifier

- Total output power: 300W RMS (30% THD)
- Frequency response: 20 Hz-20 kHz / ±3 dB
- Signal-to-noise ratio: > 65 dB (CCIR) / (A-weighted)
- Input sensitivity:
 - AUX: 2 V
 - AUDIO IN: 1 V

Video

- Signal system: PAL / NTSC/Multi
- HDMI output: 480i/576i, 480p/576p, 720p, 1080i, 1080p

Audio

- S/PDIF Digital audio input:
 - Optical:TOSLINK
- Sampling frequency:
 - MP3: 32 kHz, 44.1 kHz, 48 kHz
 - WMA: 44.1 kHz, 48 kHz
- Constant bit rate:
 - MP3: 32 kbps 320 kbps
 - WMA: 64 kbps 192 kbps

Radio

- Tuning range:
 - Europe/Russia/China: FM 87.5-108 MHz (50 kHz)
 - Asia Pacific/Latin America: FM 87.5-108 MHz (50/100 kHz)
- Signal-to-noise ratio: FM 50 dB
- Frequency response: FM 200 Hz-12.5 kHz / ±6 dB

USB

• Compatibility: Hi-Speed USB (2.0)

- Class support: USB Mass Storage Class (MSC)
- File system: FAT16, FAT32, NTFS
- USB port: 5V ==, 500mA

Main unit

- Power supply:
 - Europe/China/Russia/India: 220-240V~,
 50 Hz
 - Latin America/Asia Pacific: 110-240V~, 50-60 Hz
- Power consumption: 50 W
- Standby power consumption: ≤ 0.5 W
- Dimensions (WxHxD): 360 x 58 x 325 mm
- Weight: 2.3 kg

Subwoofer

- Output power: 50 W RMS (30% THD)
- Impedance: 8 ohm
- Speaker drivers: 165 mm (6.5") woofer
- Dimensions (WxHxD): $195 \times 265 \times 265 \text{ mm}$
- Weight: 2.82 kg
- Cable length: 2.3 m

Speakers

Center speaker:

- Output power: 50 W RMS (30% THD)
- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 63.5 mm (2.5") full range
- Dimensions (WxHxD):
 - HTD3510: 85 × 88 × 83 mm
 - HTD3540/HTD3570: 185 x 90 x 82 mm
- Weight:
 - HTD3510: 0.26 kg
 - HTD3540/HTD3570: 0,35 kg
- Cable length:
 - HTD3510: 1.2 m
 - HTD3540/HTD3570: 2.25 m

Front/Rear speaker:

Output power: 4 x 50 W RMS (30%THD)

21

- Speaker impedance: 4 ohm
- Speaker drivers: 1 x 63.5 mm (2.5") full range
- Dimensions (WxHxD):
 - HTD3510: 85 x 88 x 83 mm (front/rear)
 - HTD3540: 85 x 159 x 80 mm (front);
 240 x 1006 x 240 mm (rear)
 - HTD3570: 240 × 1006 × 240 mm (front/rear)
- Weight (front):
 - HTD3510: 0.25 kg/each
 - HTD3540: 0.35 kg/each
 - HTD3570: 2.56 kg/each
- Weight (rear):
 - HTD3510: 0.25 kg/each
 - HTD3540/HTD3570: 2.56 kg/each
- Cable length (front):
 - HTD3510: 2.2 m
 - HTD3540/HTD3570: 3.25 m
- Cable length (rear): 7.2 m

Remote control batteries

1 x AAA-R03-1.5 V

Laser

- Type: Semiconductor laser GaAlAs (CD)
- Wave length: 650-662 nm (DVD), 785-795 nm (CD)
- Output power: 6 mW (DVD), 7 mW (VCD/CD)
- Beam divergence: 60 degrees.

8 Troubleshooting



Warning

 Risk of electric shock. Never remove the casing of the product.

To keep the warranty valid, never try to repair the product yourself.

If you have problems using this product, check the following points before you request service. If you still have a problem, get support at www. philips.com/support.

Main unit

The buttons on the home theater do not work.

 Disconnect the home theater from the power supply for a few minutes, then reconnect.

Picture

No picture.

 Make sure that the TV is switched to the correct source for the home theater.

No picture on a TV connected through HDMI.

- Make sure that the HDMI cable is not faulty. If it is faulty, replace it with a new cable.
- Wait for 10 seconds for auto recovery, or change the HDMI video setting (see 'Picture and video settings' on page 17).

Disc does not play high-definition video.

- Make sure that the disc contains highdefinition video.
- Make sure that the TV supports highdefinition video.
- Use an HDMI cable to connect to the TV

Sound

No sound from home theater speakers.

- Connect the audio cable from your home theater to your TV or other devices (see 'Connect audio from TV and other devices' on page 9).
- Reset your home theater to its factory settings (see 'Restore default settings' on page 19), then switch it off and switch on again.
- On your home theater, press SOURCE repeatedly to select the correct audio input.

Distorted sound or echo.

 If you play audio from the TV through the home theater, make sure that the TV is muted

Audio and video are not synchronized.

 1) Press and hold AUDIO SYNC. 2) Press the Navigation buttons (left/right) within five seconds to synchronize the audio with the video.

Play

Cannot play a disc.

- Clean the disc.
- Make sure that the home theater supports the type of disc (see 'Media formats' on page 20).
- Make sure that the home theater supports the region code of the disc.
- If the disc is a DVD±RW or DVD±R disc, make sure that it is finalized.

Cannot play a DivX file.

- Make sure that the DivX file is encoded according to the 'HomeTheater Profile' with the DivX encoder.
- Make sure that the DivX file is complete.

DivX subtitles do not display correctly.

- Make sure that the subtitle file name is the same as the movie file name (see 'Subtitles' on page 12).
- Select the correct character set (see 'Subtitles' on page 12).

Cannot read the contents of a USB storage device.

- Make sure that the format of the USB storage device is compatible with the home theater.
- Make sure that the file system on the USB storage device is supported by the home theater

'input invalid' or 'x' sign appears on the TV.

• The operation is not possible.

EasyLink does not work.

- Make sure that the home theater is connected to a Philips brand EasyLink TV, and the EasyLink option is turned on (see 'Set up EasyLink (HDMI-CEC control)' on page 10).
- ForTVs from different manufacturers, the HDMI CEC could be called differently. Check theTV user manual on how to enable it.

When you switch on the TV, the home theater automatically switches on.

 This behavior is normal when you are using Philips EasyLink (HDMI-CEC). To make the home theater work independently, switch off EasyLink.

Notice

This section contains the legal and trademark notices.

Copyright



This item incorporates copy protection technology that is protected by U.S. patents and other intellectual property rights of Rovi Corporation. Reverse engineering and disassembly are prohibited.

Trademarks



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



DivX °. DivX Ultra °. DivX Certified ° and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Ultra * Certified to play DivX * video with advanced features and premium content, ABOUT DIVX VIDEO: DivX ® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified * device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos. ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified * device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your

registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



10 Language code

Afar 6565 Irish 7165 Russian Afrikaans 6570 Íslenska 7383 Quechua Amharic 6577 Italiano 7384 Raeto-Romance Arabic 6582 Ivrit 7269 Romanian Armenian 7289 Japanese 7465 Rundi Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8083 8285 8185 8277 8279 8278
Afrikaans 6570 Íslenska 7383 Quechua Amharic 6577 Italiano 7384 Raeto-Romance Arabic 6582 Ivrit 7269 Romanian Armenian 7289 Japanese 7465 Rundi Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8185 8277 8279
Amharic 6577 Italiano 7384 Raeto-Romance Arabic 6582 Ivrit 7269 Romanian Armenian 7289 Japanese 7465 Rundi Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8277 8279
Arabic 6582 Ivrit 7269 Romanian Armenian 7289 Japanese 7465 Rundi Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8279
Arabic 6582 Ivrit 7269 Romanian Armenian 7289 Japanese 7465 Rundi Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8279
Armenian 7289 Japanese 7465 Rundi Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	
Assamese 6583 Javanese 7486 Samoan Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	
Avestan 6569 Kalaallisut 7576 Sango Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8377
Aymara 6589 Kannada 7578 Sanskrit Azerhaijani 6590 Kashmiri 7583 Sardinian	8371
Azerhaijani 6590 Kashmiri 7583 Sardinian	8365
	8367
Bahasa Melayu 7783 Kazakh 7575 Serbian	8382
Bashkir 6665 Kernewek 7587 Shona	8378
Belarusian 6669 Khmer 7577 Shqip	8381
Bengali 6678 Kinyarwanda 8287 Sindhi	8368
Bihari 6672 Kirghiz 7589 Sinhalese	8373
Bislama 6673 Komi 7586 Slovensky	8373
Bokmål, Norwegian 7866 Korean 7579 Slovenian	8376
Bosanski 6683 Kuanyama; Kwanyama 7574 Somali	8379
Brezhoneg 6682 Kurdish 7585 Sotho; Southern	8384
Bulgarian 6671 Lao 7679 South Ndebele	7882
Burmese 7789 Latina 7665 Sundanese	8385
Castellano, Español 6983 Latvian 7686 Suomi	7073
Catalán 6765 Letzeburgesch; 7666 Swahili	8387
Chamorro 6772 Limburgan; Limburger 7673 Swati	8383
Chechen 6769 Lingala 7678 Svenska	8386
Chewa; Chichewa; Nyanja 7889 Lithuanian 7684 Tagalog	8476
中文 9072 Luxembourgish; 7666 Tahitian	8489
	8471
	8465
Chuvash 6786 Magyar 7285 Tatar	8484
Corsican 6779 Malayalam 7776 Telugu	8469
Česky 6783 Maltese 7784 Thai	8472
Dansk 6865 Manx 7186 Tibetan	6679
Deutsch 6869 Maori 7773 Tigrinya	8473
Dzongkha 6890 Marathi 7782 Tonga (Tonga Islands)	8479
English 6978 Marshallese 7772 Tsonga	8483
Esperanto 6979 Moldavian 7779 Tswana	8478
Estonian 6984 Mongolian 7778 Türkçe	8482
Euskara 6985 Nauru 7865 Turkmen	8475
Ελληνικά 6976 Navaho; Navajo 7886 Twi	8487
Faroese 7079 Ndebele, North 7868 Uighur	8571
Français 7082 Ndebele, South 7882 Ukrainian	8575
Frysk 7089 Ndonga 7871 Urdu	8582
Fijian 7074 Nederlands 7876 Uzbek	8590
Gaelic; Scottish Gaelic 7168 Nepali 7869 Vietnamese	8673
Gallegan 7176 Norsk 7879 Volapuk	8679
Georgian 7565 Northern Sami 8369 Walloon	8765
Gikuyu; Kikuyu 7573 North Ndebele 7868 Welsh	6789
Guarani 7178 Norwegian Nynorsk; 7878 Wolof	8779
Guiarati 7185 Occitan: Provencal 7967 Xhosa	8872
Hausa 7265 Old Bulgarian; Old Slavonic 6785 Yiddish	8973
Herero 7290 Oriya 7982 Yoruba	8979
Hindi 7273 Oromo 7977 Zulu	9085
Hiri Motu 7279 Ossetian; Ossetic 7983	
Hrwatski 6779 Pali 8073	
Ido 7379 Panjabi 8065	
Interlingua (International)7365 Persian 7065	
Interlingue 7365 Polski 8076	
Inuktitut 7385 Português 8084	

11 Index

		language	
		language code	25
A			
amplifier	21	M	
audio		M	
predefined modes	16	main unit	
specifications	21	overview	4
audio options	13	specifications	21
		troubleshooting	22
C	_	media formats	20
_		MP3	_
care	2	connector	5
product	3		
connectors	_		
front connectors	5	$\mathbf{O}_{\underline{\cdot}}$	
control	40	options	4
disc play	12	picture	14
main unit	4	overview	
		main unit	2
D		remote control	2
discs			
	13	P	
audio options control buttons	12	-	
	13	picture options	14
options	11	troubleshooting	22
play synchronize picture and sound	12	picture options	14
time search	13	play	1-
titles	13	discs	11
display	13	radio	21
VCD/SVCD menu	12	troubleshooting	23
display panel	4	product specifications	20
display pariel		produce specifications	20
F		R	
FM antenna	6	radio	
Tri ancenna	O	FM antenna	6
		specifications	21
Н		tuning grid	15
HDMI		region codes	20
		remote control	20
		batteries	22
K		overview	
karaoke	15		13
Kai auke	10	repeat	13

S	
safety	
use of the product	2
sound	
predefined sound mode	16
surround sound	16
synchronize picture and sound	12
troubleshooting	23
sound mode	16
speakers	
specifications	21
surround sound	16
subwoofer	
specifications	21
synchronize picture and sound	12
T	
time search	13
titles	13
trademarks	24
troubleshooting	
connection	22
main unit	22
picture	22
play	23
sound	23
tuning grid	15
20	13
U	
USB	
format	21
	۷1
USB storage device options	13
specifications	21
specifications	۷1
V	
V da.a	
video	40
synchronize picture and sound	12
video formats	21
video options	13



Specifications are subject to change without notice © 2013 Koninklijke Philips Electronics N.V. All rights reserved.

