


3

즐기세요

DVD

1 DVD

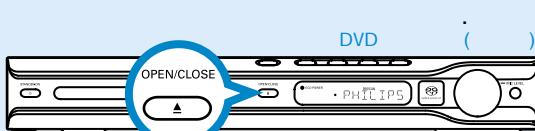

2 가 DVD

3 OPEN/CLOSE ▲

4 DVD UP ▲, DOWN ▼, RIGHT

LEFT ◀


5 PLAY ▶

6 STOP ■

참고

OPEN/CLOSE ▲

DVD ()

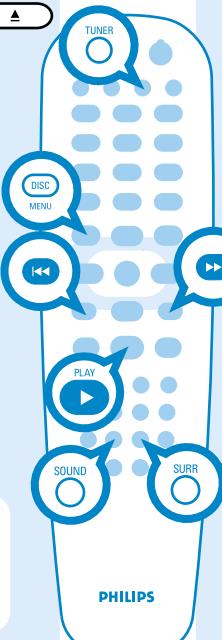

1 TUNER ○

AUTO INSTALL PRESS PLAY

2 ' START ' 가

PLAY ▶

참고
가



NEXT

3 ▶

PREVIOUS ◀

1 SURR ○

2 SOUND ○

Concert, Drama, Action,

Sci-fi

7 DISC MENU (DISC)

DVD

STOP ■

PLAY ▶

DISC

• AC 가 STANDBY-ON

• DVD

• DISC
• TV 가

가

• SOURCE
• 가
• (DISC TUNER)

• IR

?

(Online)
www.philips.com/support



Be responsible
Respect copyrights

 


2005 © Koninklijke Philips N.V.
All rights reserved.
12 NC 31 39 246 18122
www.philips.com


빠른 사용 설명서




- 1 연결하기
- 2 설정하기
- 3 즐기세요




DVD

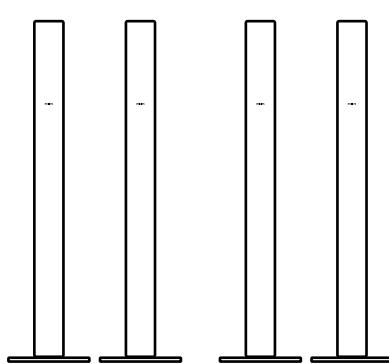


(&)

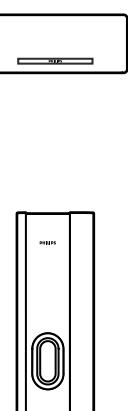

(&)

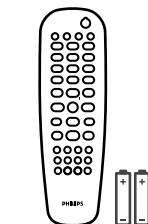

2

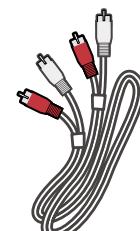

(&)



AM/MW



FM



(&)


PHILIPS

I 연결하기

A

&

- 1 TV 가
- 2 TV 가
- 3 45° 가
- 4 가 가

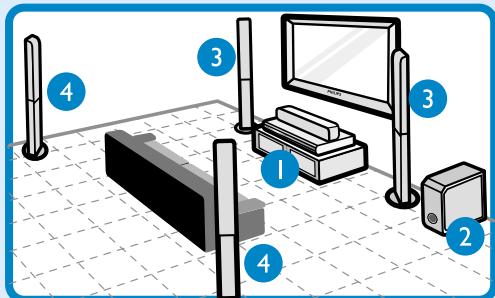


B


- 1 FM FM



- 2 AM/MW

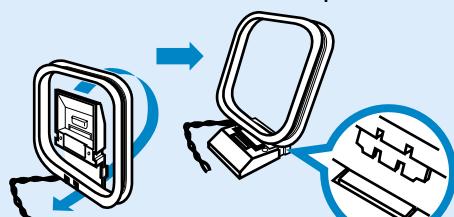



- 3

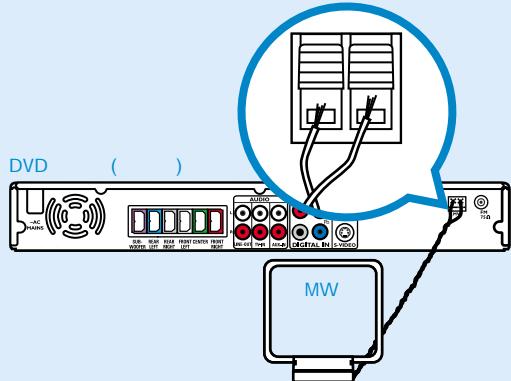

C

DVD


DVD

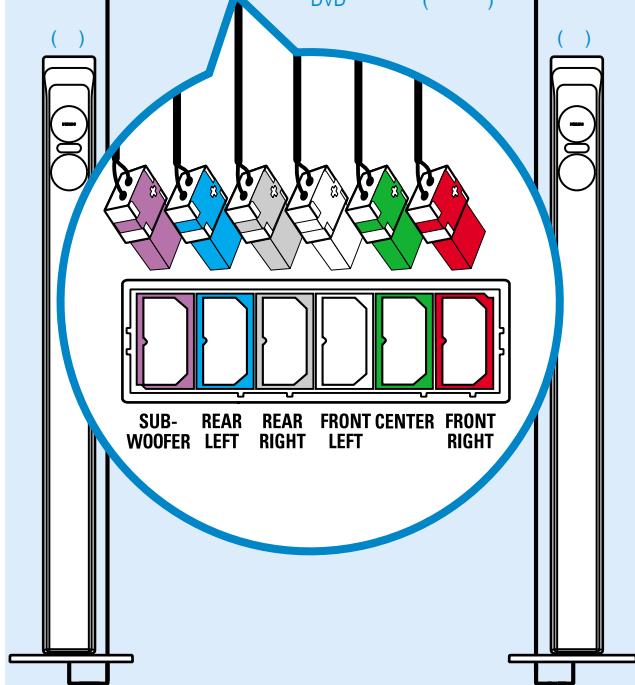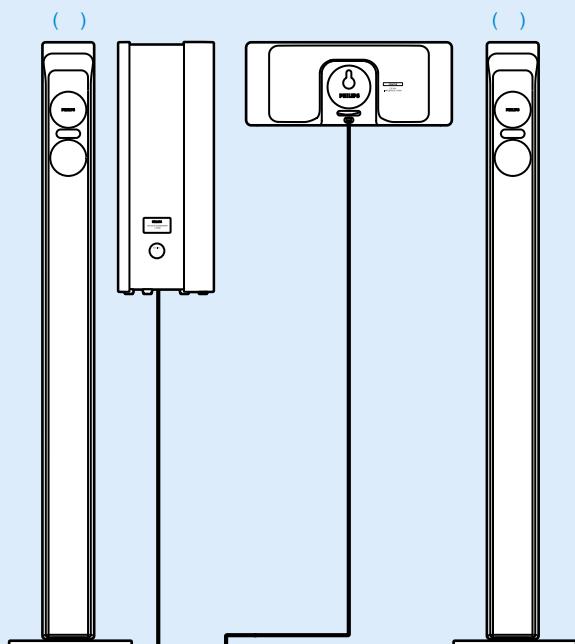

2 설정하기


D TV DVD

- | | | | | |
|---|----------|------|-----|----|
| 1 | VIDEO IN | CVBS | DVD | TV |
| 2 | DVD | AC | | |

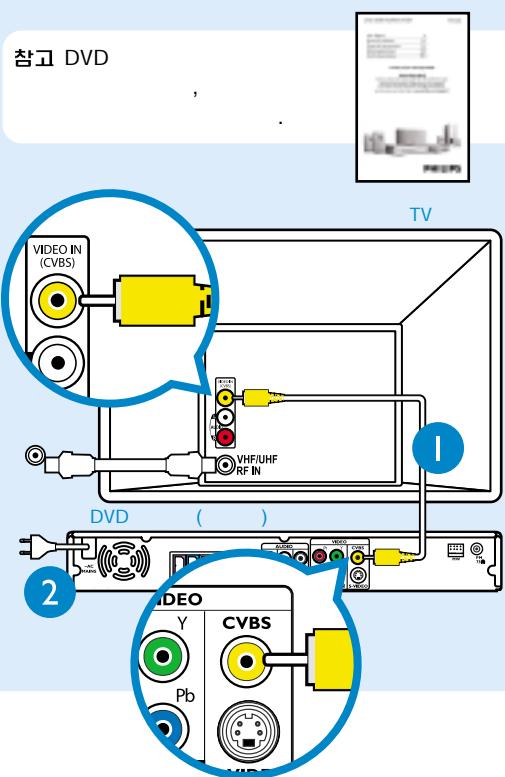


E TV DVD

- 1 DVD
 & TV-IN
 & AUDIO OUT TV

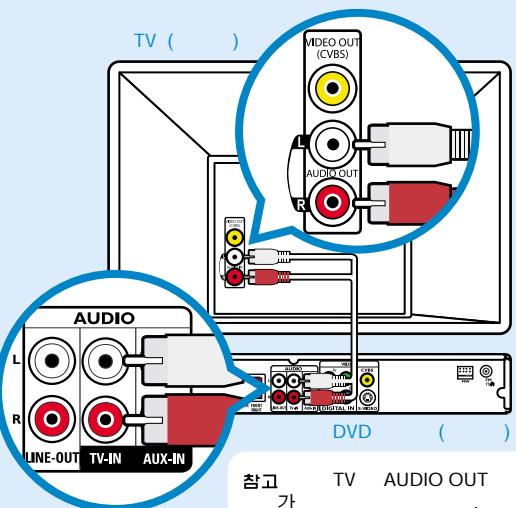

A

- 1
2
3

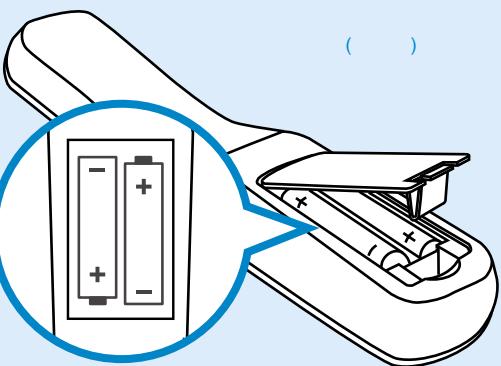

B

- 1 DVD STANDBY-ON ()

2 'DISC' 가

3 TV

4 TV DISC ()

'0'

DVD background () 가

