

1 Switch ON your device (e.g.TV).




2 Press and hold the device selection button (e.g. TV) for 5 seconds until the green Setup light turns on.



3 Look up the 4-digit code for your brand in the 'Shortlist of brands' in this Quick start Guide.



Enter the 4-digit code using the digit buttons.

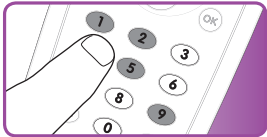

4 Press and hold the button. Release it immediately as soon as the device switches off.

- This step normally takes between 5 and 60 seconds.



5 Switch ON the device. Try out the buttons that you need for operating it.

If a button does not work as expected, press and hold that button. Release it immediately as soon as it works.



6 Press the device selection button twice to finish setup.



Press the appropriate device selection button to select the device you wish to operate: TV or VCR/DVD.



Important

If you made a mistake:

- Press the device selection button twice to exit setup. The green Setup light turns off.
- Restart from the beginning.

Brand 4-digit code

Akai.....	0074	Medion.....	1787
Basic Line.....	0325	Mivar.....	1857
Blue Sky.....	0395	Panasonic.....	2153
Carrefour.....	0492	Philips.....	2195
CyberHome.....	0672	Proline.....	2274
Daewoo.....	0692	Saivod.....	2439
Emerson.....	0917	Samsung.....	2448
Firstline.....	1008	Sanyo.....	2462
Haier.....	1175	Sharp.....	2550
Hisense.....	1249	Skymaster.....	2621
Hitachi.....	1251	Sony.....	2679
Humax.....	1298	TCL.....	2856
JVC.....	1464	TechniSat.....	2873
LG.....	1628	Toshiba.....	3021
Loewe.....	1660	Vestel.....	3148
Magnum.....	1709		



For brands not mentioned in this shortlist, refer to the brandlist in the back of the user manual or use '9999' as 4-digit code. Note that '9999' may result in a long setup (up to 15 minutes).