



Quick start guide

CD280/CD285

PHILIPS

What's in the box



Base station (CD285)



Base station (CD280)



Handset*



Charger*



Power adapter*



Line cord**



User manual
Quick start guide
Guarantee

Note

 
- * In multi-handset packs, there are additional handsets, chargers and power adapters.
- ** In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

Caution

- Use only the supplied batteries and power adapter.

1 Connect

Connect the base station

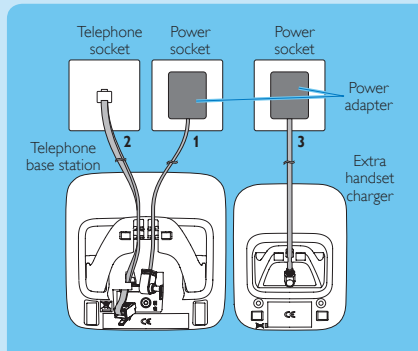


- 1 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the base station;
 - the power socket on the wall.
- 2 Connect each end of the line cord to:
 - the telephone socket at the bottom of the base station;
 - the telephone socket on the wall.


For multi-handset version only:

- 3 Connect each end of the power adapter to:
 - the DC input jack at the bottom of the extra handset charger;
 - the power socket on the wall.


2 Get started

 Configure your phone

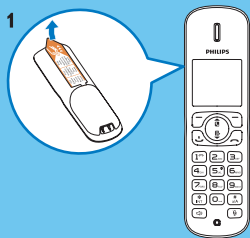

- 1 The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 When using your phone for the first time, you see a welcome message (country dependent).
After the welcome message, press **[OK]**.
- 3 Please set the country and language if prompted.
- 4 Set the date and time.
 - If the time is in 12-hour format, press  key to select **[AM]** or **[PM]**.

 Charge your phone

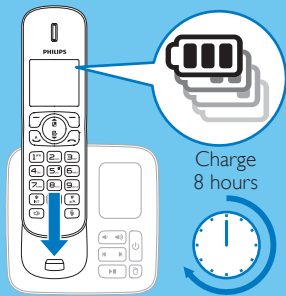

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.

Note Charge the batteries for 8 hours before first use.

Check the battery level



When the handset is off the base station/charger, the bars indicate the battery level (full, medium and low). When the handset is on the base station/charger, the bars flash until charging completes.






The empty battery icon flashes and you hear an alert tone.



The battery is low and needs recharging.

3 Enjoy

Call

- To make a call, press  and dial the phone number.
- To answer a call, press  when the phone rings.
- To end a call, press .

Adjust the earpiece volume

Press  or  to adjust the volume during a call.

 
Add a contact in the phonebook







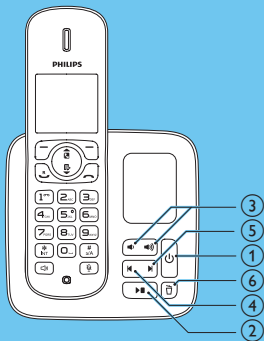

- 1 Press **[Menu]**.
- 2 Select **[Phonebook]** > **[Add new]**, then press **[OK]** to confirm.
- 3 Enter the name then press **[OK]** to confirm.
- 4 Enter the number; then press **[Save]** to confirm.

Record an announcement (for CD285 only)

- 1 Press **[Menu]**.
- 2 Select **[Answ. machine]** > **[Announcement]**, then press **[OK]** to confirm.
- 3 Select **[Answer only]** or **[Record also]**, then press **[OK]** to confirm.
- 4 Select **[Record]**, then press **[OK]** to confirm.
- 5 Start recording close to the microphone after the beep.
- 6 Press **[OK]** to stop recording.
 - ↳ You can listen to the newly recorded announcement on the handset.

Listen to messages recorded on the answering machine (for CD285 only)



- ① Switch on/off the answering machine: Press .
- ② Start/Stop listening to the recorded messages: Press .
- ③ Adjust the volume: Press  / .
- ④ Skip backward:
When you listen to the messages, press  to listen to the message from the beginning.
During the first second of the current message, press  to listen to the previous message.
- ⑤ Skip forward: Press  to skip to the next message.
- ⑥ Delete the current message: Press .

Note For more information, see the Telephone answering machine section in the user manual.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

User manual

Refer to the user manual that came with your new phone.

Online help

www.philips.com/support



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

2014 © WOOX Innovations Limited.

All rights reserved.

Philips and the Philips' Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used by WOOX Innovations Limited under license from Koninklijke Philips N.V.

CE 0168



QSG_CD280-285_GB_EN_V3.0
WK14034